




DIGITAL KEYBOARD  
 CLAVIER NUMÉRIQUE  
 TECLADO DIGITAL

# EZ-220

MIDI Reference  
 MIDI-Referenz  
 Référence MIDI  
 Referencia MIDI

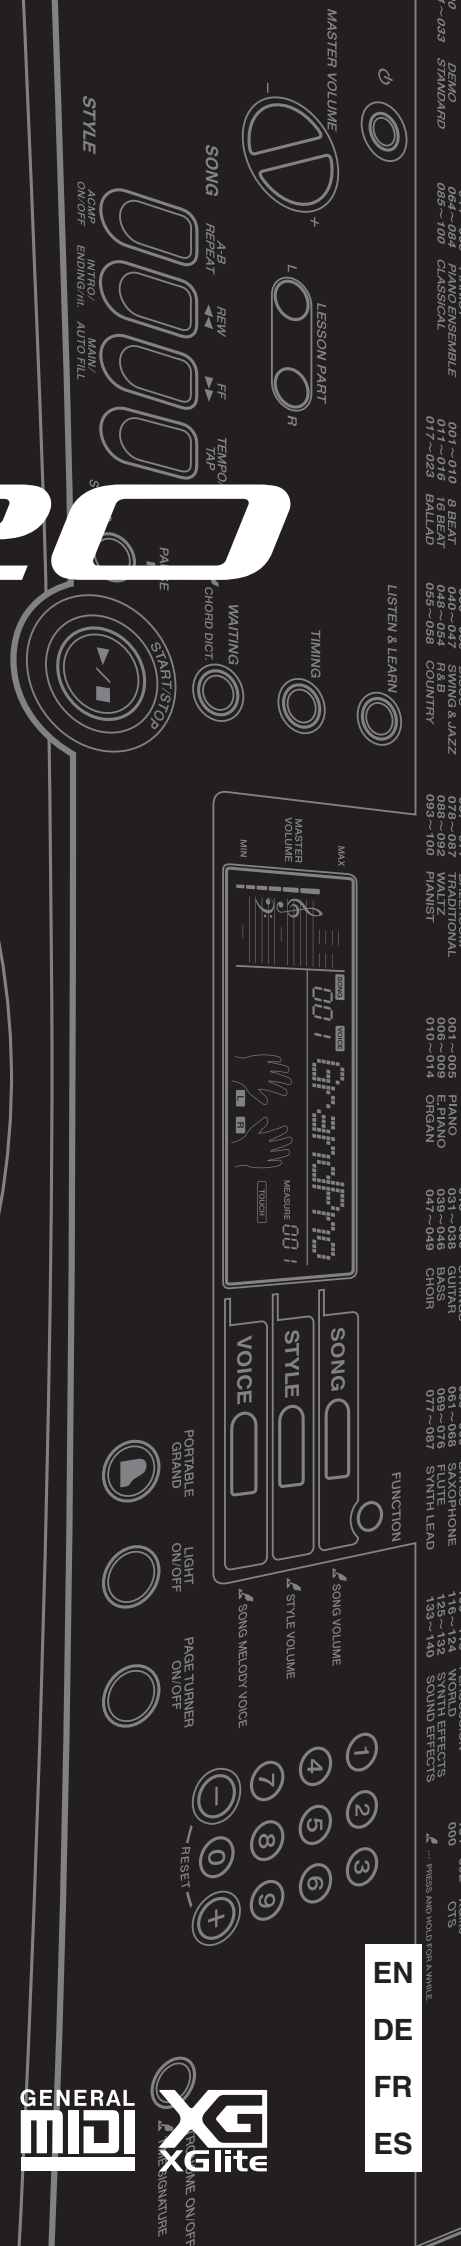

EN  
 DE  
 FR  
 ES

# MIDI Implementation Chart / MIDI-Implementationsstabelle / MIDI Implementation Chart / Gráfico de implementación MIDI

YAMAHA  
Model EZ-220

MIDI Implementation Chart

Date:20-Feb-2012  
Version:1.0

Function...	Transmitted	Recognized	Remarks
Basic Default Channel Changed	1 - 16 x	1 - 16 x	
Mode Default Messages Altered	3 x *****	3 x x	
Note Number : True voice	0 - 127 *****	0 - 127 0 - 127	
Velocity Note ON Note OFF	o 9nH, v=1-127 x	o 9nH, v=1-127 x	
After Key's Touch Ch's	x x	x x	
Pitch Bend	x	o	
Control Change 0,32 1 6 38 7,10 11 64 71,73,74 72 84 91,93 96,97 100,101	o x *1 x *1 x *1 o x *1 o x *1 o x *1 o x x x	o o o o o o o o o o o o o	Bank Select Modulation wheel Data Entry (MSB) Data Entry (LSB)  Expression Sustain  Release Time Portamento Cntrl Effect 1,3 Depth RPN Inc,Dec RPN LSB,MSB
Prog Change : True #	o 0 - 127 *****	o 0 - 127	
System Exclusive	o	o	
: Song Pos. Common : Song Sel. : Tune	x x x	x x x	
System : Clock Real Time: Commands	o o	o o	
Aux :All Sound OFF :Reset All Cntrls :Local ON/OFF Mes- :All Notes OFF sages:Active Sense :Reset	x x x x o x	o (120,126,127) o (121) o (122) o (123-125) o o x	

\*1 Refer to #2 on page 3.

Mode 1 : OMNI ON , POLY      Mode 2 : OMNI ON , MONO      o : Yes  
Mode 3 : OMNI OFF, POLY      Mode 4 : OMNI OFF, MONO      x : No

# MIDI Data Format / MIDI-Datenformat / Format des données MIDI / Formato de datos MIDI

## NOTE:

- 1 By default (factory settings) the instrument ordinarily functions as a 16-channel multi-timbral tone generator, and incoming data does not affect the panel voices or panel settings. However, the MIDI messages listed below do affect the panel voices, auto accompaniment, and songs.
  - MIDI Master Tuning
  - System exclusive messages for changing the Reverb Type and Chorus Type.
- 2 Messages for these control change numbers cannot be transmitted from the instrument itself. However, they may be transmitted when playing the accompaniment, song or using the Harmony effect.
- 3 Exclusive
 

<GM System ON>  
F0H, 7EH, 7FH, 09H, 01H, F7H

  - This message automatically restores all default settings for the instrument, with the exception of MIDI Master Tuning.

<MIDI Master Volume>  
F0H, 7FH, 7FH, 04H, 01H, ll, mm, F7H

  - This message allows the volume of all channels to be changed simultaneously (Universal System Exclusive).
  - The values of “mm” is used for MIDI Master Volume. (Values for “ll” are ignored.)

<MIDI Master Tuning>  
F0H, 43H, 1nH, 27H, 30H, 00H, 00H, mm, ll, cc, F7H

  - This message simultaneously changes the tuning value of all channels.
  - The values of “mm” and “ll” are used for MIDI Master Tuning.
  - The default value of “mm” and “ll” are 08H and 00H, respectively. Any values can be used for “n” and “cc.”

<Reverb Type>  
F0H, 43H, 1nH, 4CH, 02H, 01H, 00H, mmH, llH, F7H

- mm : Reverb Type MSB
- ll : Reverb Type LSB

Refer to the Effect Map for details.

<Chorus Type>  
F0H, 43H, 1nH, 4CH, 02H, 01H, 20H, mmH, llH, F7H

- mm : Chorus Type MSB
- ll : Chorus Type LSB

Refer to the Effect Map for details.

- 4 When the accompaniment is started, an FAH message is transmitted. When accompaniment is stopped, an FCH message is transmitted. When the clock is set to External, both FAH (accompaniment start) and FCH (accompaniment stop) are recognized.

- 5 Local ON/OFF
 

<Local ON> Bn, 7A, 7F  
<Local OFF> Bn, 7A, 00

Value for “n” is ignored.

## Effect map

- \* When a Type LSB value is received that corresponds to no effect type, a value corresponding to the effect type (coming the closest to the specified value) is automatically set.
- \* The numbers in parentheses in front of the Effect Type names correspond to the number indicated in the display.

## REVERB

TYPE MSB	TYPE LSB									
	0	1	2	8	16	17	18	19	20	
0	No Effect									
1	(01)Hall1				(02)Hall2	(03)Hall3				
2	Room					(04)Room1		(05)Room2		
3	Stage				(06)Stage1	(07)Stage2				
4	Plate				(08)Plate1	(09)Plate2				
5...127	No Effect									

## CHORUS

TYPE MSB	TYPE LSB									
	0	1	2	8	16	17	18	19	20	
0...63	No Effect									
64	Thru									
65	Chorus		(2)Chorus2							
66	Celeste					(1)Chorus1				
67	Flanger			(3)Flanger1		(4)Flanger2				
68...127	No Effect									