




# *YSP-800*

---

*Digital Sound Projector*

OWNER'S MANUAL

# IMPORTANT SAFETY INSTRUCTIONS

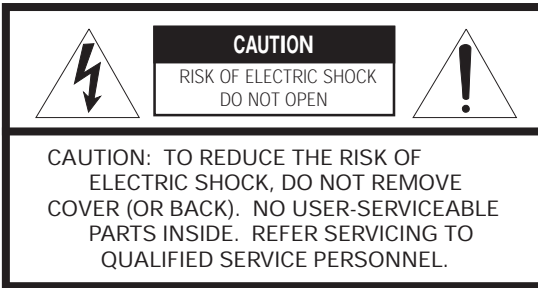

## ■ Explanation of Graphical Symbols



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cable from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC INFORMATION (for US customers)

### 1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements.

Modifications not expressly approved by YAMAHA may void your authority, granted by the FCC, to use the product.

### 2. IMPORTANT:

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

### 3. NOTE:

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact YAMAHA Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply ONLY to those products distributed by YAMAHA Corporation of America or its subsidiaries.

## We Want You Listening For A Lifetime

YAMAHA and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, YAMAHA and the Electronic Industries Association's Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



# CAUTION: READ THIS BEFORE OPERATING THIS UNIT.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place with at least 5 cm of space above (or below) this unit – away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold.
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
  - Other components, as they may cause damage and/or discoloration on the surface of this unit.
  - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
  - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. YAMAHA will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 Do not attempt to modify or fix this unit. Contact qualified YAMAHA service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 14 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 15 Be sure to read the “TROUBLESHOOTING” section on common operating errors before concluding that this unit is faulty.
- 16 Before moving this unit, press STANDBY/ON to set this unit in standby mode, and disconnect the AC power plug from the wall outlet.
- 17 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave the unit alone.
- 18 When using the unit for a long time, the unit may become warm. Turn the power off, then leave the unit alone for cooling.
- 19 Install this unit near the AC outlet and where the AC power plug can be reached easily.

## WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

This unit is not disconnected from the AC power source as long as it is connected to the AC wall outlet, even if this unit itself is turned off. This state is called the standby mode. In this state, this unit is designed to consume a very small quantity of power.

## FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert. This Class B digital apparatus complies with Canadian ICES-003.

## IMPORTANT

Please record the serial number of this unit in the space below.  
MODEL:  
Serial No.:  
The serial number is located on the rear of the unit. Retain this Owner's Manual in a safe place for future reference.

## FOR U.K. CUSTOMERS

If the socket outlets in the home are not suitable for the plug supplied with this appliance, it should be cut off and an appropriate 3 pin plug fitted. For details, refer to the instructions described below. Note that the plug severed from the mains lead must be destroyed, as a plug with bared flexible cord is hazardous if engaged in a live socket outlet.

## IMPORTANT

THE WIRES IN MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:

Blue: NEUTRAL  
Brown: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED. Make sure that neither core is connected to the earth terminal of the three pin plug.

## CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

## CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

# CONTENTS

## INTRODUCTION

<b>OVERVIEW .....</b>	<b>2</b>
<b>FEATURES.....</b>	<b>3</b>
<b>USING THIS MANUAL.....</b>	<b>4</b>
<b>SUPPLIED ACCESSORIES.....</b>	<b>5</b>
<b>CONTROLS AND FUNCTIONS .....</b>	<b>6</b>
Front panel.....	6
Front panel display .....	7
Rear panel .....	8
Remote control.....	9

## PREPARATION

<b>INSTALLATION .....</b>	<b>11</b>
Before installing this unit.....	11
Installing this unit .....	11
<b>CONNECTIONS .....</b>	<b>14</b>
Connecting a TV.....	15
Connecting a DVD player/recorder.....	16
Connecting a VCR.....	17
Connecting a digital satellite tuner or a cable TV tuner.....	18
Connecting other external components .....	19
Connecting a subwoofer .....	20
Connecting the power supply cable.....	21

## SETUP

<b>GETTING STARTED.....</b>	<b>22</b>
Installing batteries in the remote control .....	22
Operation range of the remote control.....	22
Using the remote control .....	23
Turning on the power.....	23
<b>USING SET MENU.....</b>	<b>24</b>
Displaying the OSD.....	24
The flow chart of SET MENU.....	25
<b>AUTO SETUP.....</b>	<b>26</b>
The flow chart of AUTO SETUP .....	26
Installing the optimizer microphone.....	27
Using AUTO SETUP .....	28
<b>USING THE SYSTEM MEMORY .....</b>	<b>34</b>
Saving settings.....	34
Loading settings.....	35

## BASIC OPERATION

<b>PLAYBACK .....</b>	<b>37</b>
Selecting the input source.....	37
Playing back sources .....	38
Adjusting the volume.....	38
Muting the sound .....	39
<b>BEAM MODE .....</b>	<b>40</b>
5 beam mode.....	41
Stereo plus 3 beam mode.....	41
3 beam mode.....	42
Stereo mode .....	42
Target mode.....	43
<b>ENJOYING SURROUND SOUND.....</b>	<b>44</b>
Enjoying 2-channel sources in surround sound .....	45
Enjoying TV in surround sound .....	46
Adjusting surround mode parameters.....	47
<b>USING SOUND FIELD PROGRAMS.....</b>	<b>49</b>
What is a sound field? .....	49
Turning on CINEMA DSP programs .....	50
Turning off CINEMA DSP programs .....	51
Adjusting CINEMA DSP levels.....	51
<b>USING THE VOLUME MODE .....</b>	<b>52</b>
<b>USING TruBass.....</b>	<b>54</b>
<b>USING THE SLEEP TIMER .....</b>	<b>55</b>
Setting the sleep timer .....	55
Canceling the sleep timer .....	56

## ADVANCED OPERATION

<b>BASIC SETUP.....</b>	<b>57</b>
<b>MANUAL SETUP.....</b>	<b>63</b>
Using MANUAL SETUP.....	64
BEAM MENU .....	65
SOUND MENU.....	69
INPUT MENU.....	71
DISPLAY MENU.....	73
<b>ADJUSTING SYSTEM PARAMETERS .....</b>	<b>75</b>
Setting the maximum volume level .....	75
Protecting the current settings .....	76
Initializing the current settings .....	77
Adjusting the audio balance .....	78
<b>SELECTING THE INPUT MODE .....</b>	<b>81</b>
<b>REMOTE CONTROL FEATURES .....</b>	<b>82</b>
Setting remote control codes .....	82
Controlling other components .....	83
Using the TV macro .....	85

## ADDITIONAL INFORMATION

<b>TROUBLESHOOTING .....</b>	<b>87</b>
<b>GLOSSARY.....</b>	<b>90</b>
Audio formats.....	90
Audio information .....	90
<b>INDEX.....</b>	<b>91</b>
<b>SPECIFICATIONS.....</b>	<b>92</b>

# OVERVIEW

It is generally accepted that in order to fully enjoy the benefits of surround sound at home, you must endure the agony of wiring and installing a great number of speakers in the hope that your listening room will give you the same kind of surround sound experience as your local movie theater.


YAMAHA YSP-800 Digital Sound Projector challenges this preconception that complicated speaker setup and troublesome wiring go hand-in-hand with the enjoyment of multi-channel surround sound.

This slimline unit does away with the need for complicated wiring and installation worries, leaving you with a unit that is not only easy to set up, but which is also capable of reproducing the kind of powerful surround sound you have been waiting for from its built-in subwoofers (2) and individual speakers (21).

You can fine-tune the parameters of this unit to adjust the delay time for separate sound beams, resulting in highly directional sound that comes in on the listening position from all directions.

The YSP-800 projects sound beams containing surround sound information for the front right (R), front left (L), surround right (SR) and surround left (SL) speaker positions, which are reflected off the walls of your listening room before reaching the actual listening position. With the addition of center (C) sound beams, this Digital Sound Projector creates true-to-life 5.1 channel surround sound that makes you feel as if there are actual speakers around the room.

Sit back and enjoy the real sound experience of this simple, yet stylish Digital Sound Projector.

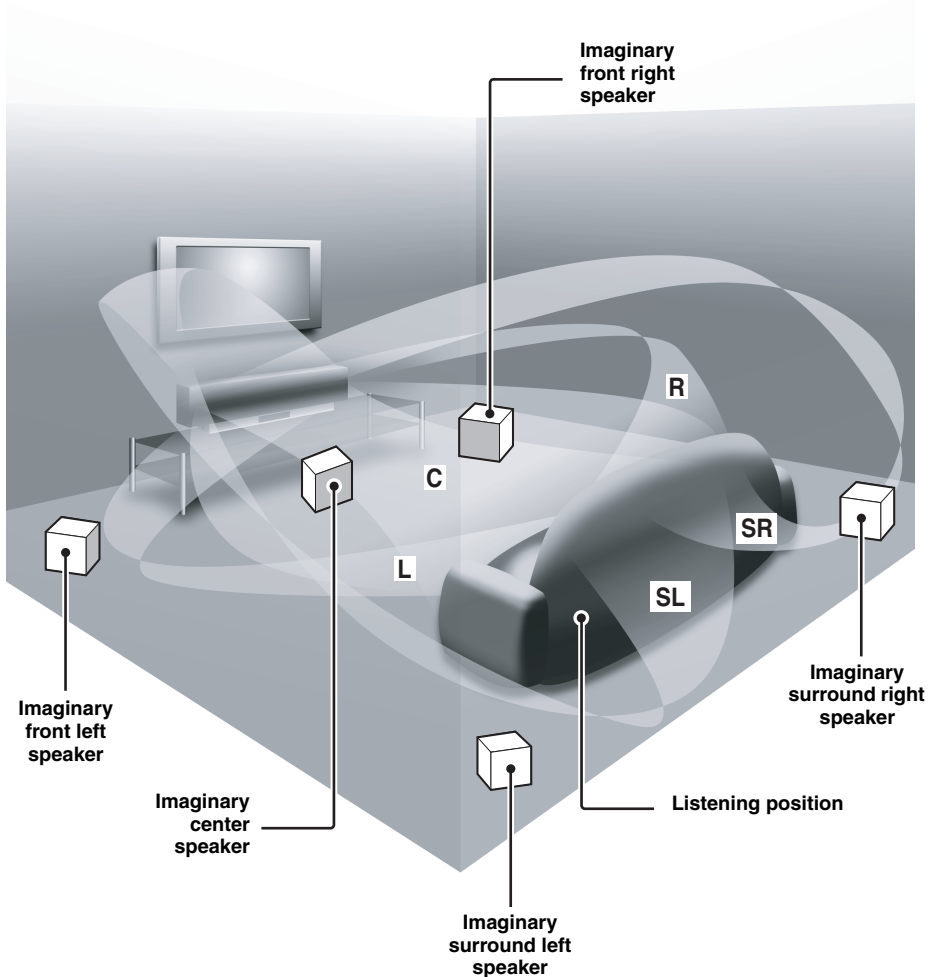

# FEATURES

## Digital Sound Projector

This unit employs the digital sound projector technology that allows one slim unit to control and steer multiple channels of sound to generate full, physical 5.1 channel surround sound, thus eliminating the need for satellite loudspeakers and cabling normally associated with conventional surround sound systems. This unit is also equipped with the following 5 beam modes so that you can choose the behavior of sound beams that best matches your listening environment.

- ◆ 5 beam mode
- ◆ ST(STEREO)+3 beam mode
- ◆ 3 beam mode
- ◆ Stereo mode
- ◆ Target mode

## Cinema DSP Digital

This unit employs the Cinema DSP Digital technology developed by YAMAHA Electronics Corp. so that you can experience movies at home with all the dramatic sound impact that the director intended to convey.

## OSD (on-screen display)

This unit employs the OSD which is basically a superimposed screen image displayed on your video monitor. The OSD is used to display the system information or adjust settings for the system parameters.

## Versatile Remote Control

The supplied remote control come with preset remote control codes to be used to control the DVD player, VCR, cable TV tuner and digital satellite tuner connected to this unit. In addition, the remote control is equipped with the macro capability so that you can perform a series of operations with the press of a single button.



The “CINEMA DSP” logo and “Cinema DSP” are registered trademarks of YAMAHA Corporation.



Manufactured under license from Dolby Laboratories.

“Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.



“DTS”, and “Neo:6” are trademarks of Digital Theater Systems, Inc.

## AUTO SETUP

This unit employs the automatic sound beam optimization using the YAMAHA Parametric Room Acoustic Optimizer (YPAO) technology with the aid of the supplied optimizer microphone so that you can avoid troublesome listening-based speaker setup and achieve highly accurate sound beam adjustments that best match your listening environment.

## Compatibility with the Newest Technologies

This unit employs decoders compatible with Dolby Digital, DTS (Digital Theater Systems), Dolby Pro Logic, Dolby Pro Logic II and DTS Neo:6.

- ◆ Dolby Digital  
This is the standard audio signal format used on DVDs and other purely digital media. This surround technology deliver high-quality digital audio for up to 5.1 discrete channels to produce a directional and more realistic effect.
- ◆ DTS (Digital Theater Systems)  
This is an audio signal format used on DVDs and other purely digital media. This surround technology deliver high-quality digital audio for up to 5.1 discrete channels to produce a directional and more realistic effect.
- ◆ Dolby Pro Logic  
This sophisticated, matrix decoding technology up-converts any 2 channel source audio to a 5.1 channel full bandwidth playback, resulting in a surround sound experience.
- ◆ Dolby Pro Logic II  
This is fundamentally a redesigned version of Dolby Pro Logic that employs 2 stereo surround channels, a subwoofer and a greatly enhanced steering logic. As a result, this improved technology provides an exceptionally stable sound field that simulates 5.1 to a much greater degree than the original Dolby Pro Logic. In addition, Dolby Pro Logic II features Movie, Music and Game modes specifically designed for movies, music and games respectively.
- ◆ DTS Neo:6  
This technology decodes the conventional 2 channel sources for 6 channel playback, enabling playback with the full-range channels with higher separation. Music mode and Cinema mode are available to play back music and movie sources respectively.



Manufactured under license from 1 Ltd. Worldwide patents applied for.

 
The ‘1’ logo and ‘Digital Sound Projector™’ are trademarks of 1 Ltd.



TruBass, SRS and the “●” symbol are registered trademarks of SRS Labs, Inc. TruBass technology is incorporated under license from SRS Labs, Inc.

# USING THIS MANUAL

## Notes

- This manual describes how to connect and operate this unit. For details regarding the operation of external components, refer to the supplied owner's manual for the component.
- Some operations can be performed by using either the buttons on the main unit or on the remote control. In such cases, the operation is described using remote control operation.
-  indicates a tip for your operation.
- This manual is printed prior to production. Design and specifications are subject to change in part as a result of improvements, etc. In case of differences between the manual and product, the product has priority.

---

### 1 Install this unit in your listening room.

See "INSTALLATION" on page 11.



---

### 2 Connect this unit to your TV and other external components.

See "CONNECTIONS" on page 14.



---

### 3 Prepare the remote control and turn on the power of this unit.

See "GETTING STARTED" on page 22.



---

### 4 Run AUTO SETUP.

See "AUTO SETUP" on page 26.



---

### 5 Play back a source and enjoy surround sound.

See "PLAYBACK" on page 37.



If you want to make additional settings and adjustments

---

### 6 Run MANUAL SETUP and set remote control codes to fine-tune settings.


See "MANUAL SETUP" on page 63 and "REMOTE CONTROL FEATURES" on page 82.




# SUPPLIED ACCESSORIES

Check that you have received all of the following parts.

**Remote control (×1)**

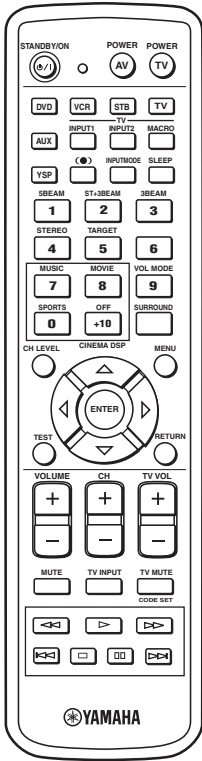


**Batteries (×2)  
(AA, R6, UM-3)**

 


**Optical cable (×1)**




**OSD video pin cable (×1)**

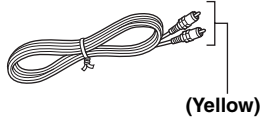


**Digital audio pin cable (×1)**

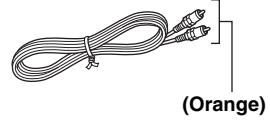


**Optimizer microphone (×1)**

 


**Audio pin cable (×1)**

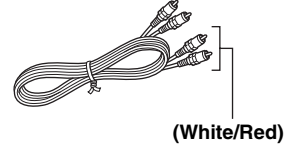


**Cable clamp (×1)**

 

**Fastener (×4)**

 


**Cardboard microphone stand (×1)**

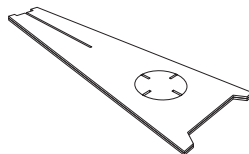

# CONTROLS AND FUNCTIONS

## Front panel

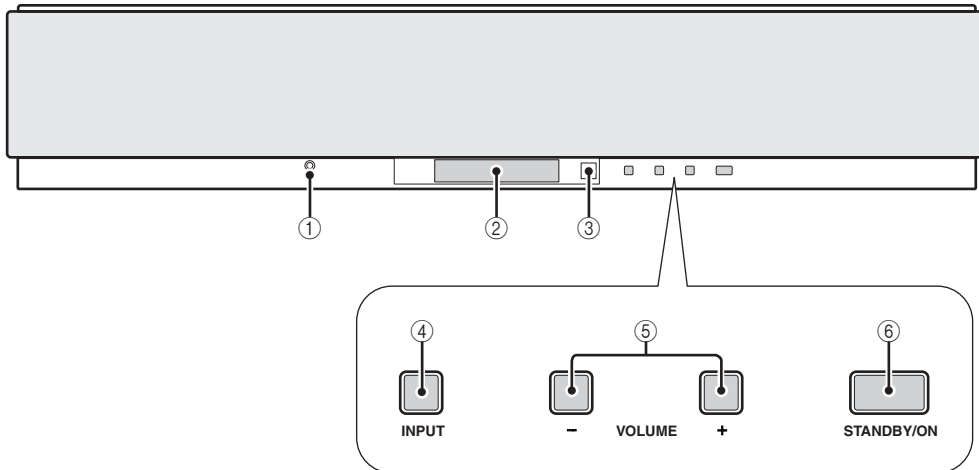

### ① OPTIMIZER MIC jack

Use to connect the supplied optimizer microphone to be used to run AUTO SETUP (see page 27).

### ② Front panel display

Shows information about the operational status of this unit.

### ③ Remote control sensor

Receives infrared signals from the remote control.

### ④ INPUT

Press repeatedly to switch between input sources (TV, VCR, DVD or AUX). See page 37 for details.

### ⑤ VOLUME +/-

Controls the volume level of all audio channels (see page 38).


### ⑥ STANDBY/ON

Turns on the power of this unit or sets it to the standby mode (see page 23).

#### Notes

- When you turn on the power of this unit, you will hear a click and there will be a 4 to 5-second delay before it can reproduce sound.
- In the standby mode, this unit consumes a small amount of power in order to receive infrared-signals from the remote control.

## Front panel display

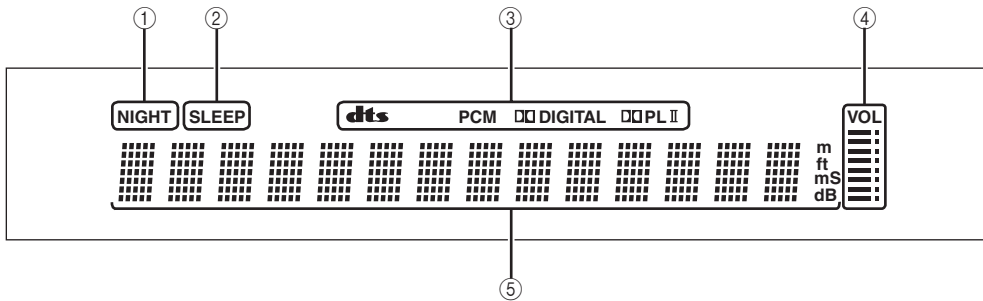

### ① NIGHT indicator

Lights up when you select a volume mode (see page 52).

### ② SLEEP indicator

Lights up when the sleep timer is turned on (see page 55).

### ③ Decoder indicators

Light up when the corresponding decoder of this unit is in operation (see page 44).

### ④ Volume level indicator

Shows the current volume level (see page 38).


### ⑤ Multi-information display

Shows information when you adjust the parameters of this unit.



You can adjust the brightness of the front panel display using the DISPLAY MENU parameters in MANUAL SETUP (see page 73).

## Rear panel

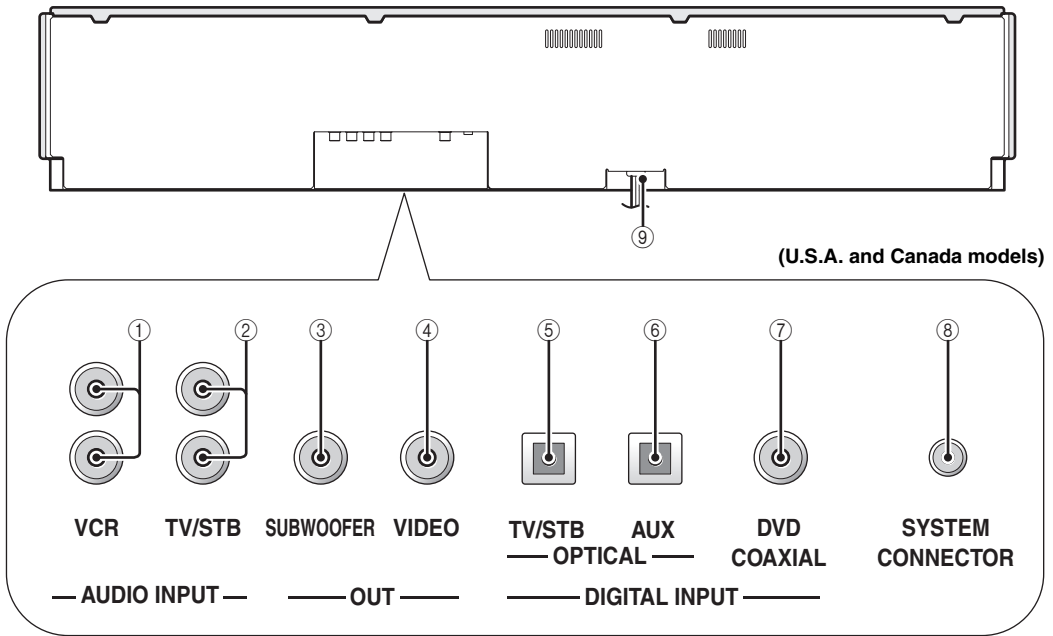

① **VCR analog audio input jacks**

Use to make an analog connection to your VCR (see page 17).

② **TV/STB analog audio input jacks**

Use to make an analog connection to your TV, digital satellite tuner and cable TV tuner (see pages 15 and 18).

③ **SUBWOOFER OUT jack**

Use to connect a subwoofer (see page 20).

④ **VIDEO OUT jack**

Use to connect to the video input terminal of your TV to display the OSD of this unit (see page 15).

⑤ **TV/STB OPTICAL DIGITAL INPUT jack**

Use to connect a TV, digital satellite tuner and cable TV tuner via an optical digital connection (see pages 15 and 18).

⑥ **AUX OPTICAL DIGITAL INPUT jack**

Use to connect an external component via an optical digital connection (see page 19).

⑦ **DVD COAXIAL DIGITAL INPUT jack**

Use to connect a DVD player via a coaxial digital connection (see page 16).

⑧ **SYSTEM CONNECTOR jack**  
**(U.S.A. and Canada models only)**

Use to connect a YAMAHA subwoofer equipped with a SYSTEM CONNECTOR jack to this unit (see page 20).

⑨ **AC power supply cable**


Use to connect to the AC wall outlet (see page 21).

## Remote control

This section describes the function of each control on the remote control used to control this system.



You can also control other components using the remote control once you set the appropriate remote control codes. See “Controlling other components” on page 83 for details.

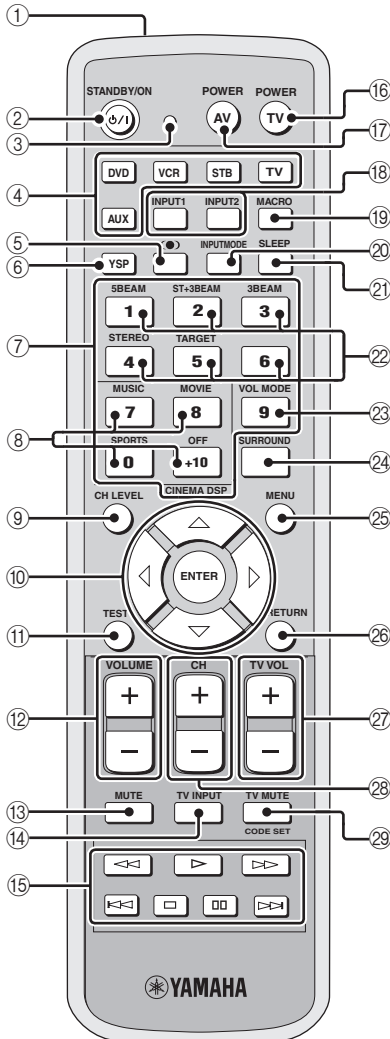

### ① Infrared window

Outputs infrared control signals. Aim this window at the component you want to operate.

### ② STANDBY/ON

Sets this system to the standby mode (see page 23).

### ③ Transmission indicator

Lights up when infrared control signals are being output.

### ④ Input selector buttons

Use to select an input source (TV, STB, VCR, DVD or AUX) and change the control area (see page 37).

### ⑤ ● TruBass

Use to effectively reproduce the bass sound (see page 54).

### ⑥ YSP

Switches to the operation mode of this unit.

### ⑦ Numeric buttons

Use to enter numbers.

### ⑧ Sound field program buttons

Use to select sound field programs (see page 49).

### ⑨ CH LEVEL

Adjusts the volume level of each channel (see page 79).

### ⑩ Cursor buttons $\triangle$ / $\nabla$ / $\leftarrow$ / $\rightarrow$ , ENTER

Use to select and adjust SET MENU items.

### ⑪ TEST

Outputs a test tone when adjusting the output level of each speaker (see page 78).

### ⑫ VOLUME +/-

Increases or decreases the volume level of this unit (see page 38).

### ⑬ MUTE

Mutes the sound. Press again to restore the audio output to the previous volume level (see page 39).

### ⑭ TV INPUT

Switches the input source of the TV (see page 83).

### ⑮ DVD player/VCR control buttons

Use to control the DVD player of the VCR (see pages 83 and 84).

### ⑯ TV POWER

Turns on the power of the TV or sets it to the standby mode (see page 83).

### ⑰ AV POWER

Turns on the power of the selected component or sets it to the standby mode (see pages 83 and 84).

### ⑱ INPUT1/INPUT2

Selects the input source of the TV.

**19 MACRO**

Use to set the TV macro (see page 85).

**20 INPUTMODE**

Switches between input modes (AUTO, DTS or ANALOG). See page 37 for details.

**21 SLEEP**

Sets the sleep timer (see page 55).

**22 Beam mode buttons**

Change the beam mode settings (see page 40).

**23 VOL MODE**

Turns on or off the volume modes (see page 52).

**24 SURROUND**

Selects the surround mode for playback (see page 44).

**25 MENU**

Displays the setup menu on your TV monitor (see pages 28, 57 and 64).

**Note**

The DVD menu is displayed when DVD is selected as the input source.

**26 RETURN**

Use to select sleep timer settings or return to the previous SET MENU screen.

**27 TV VOL +/-**

Adjusts the volume level of the TV (see page 83).

**28 CH +/-**

Switches between channels of the TV or the VCR (see pages 83 and 84).

**29 TV MUTE, CODE SET**

Mutes the audio output of the TV (see page 83).

Use to set up remote control codes (see page 82).

# INSTALLATION


This section describes a suitable installation location to install the unit using a metal wall bracket, a rack or a stand.

## Before installing this unit

This unit creates surround sound by reflecting projected sound beams off the walls of your listening room. The surround sound effects produced by this unit may not be sufficient when the unit is installed in the following locations.

- Rooms with surfaces inadequate for reflecting sound beams
- Rooms with acoustically absorbent surfaces
- Rooms with measurements outside the following range  
W (3 to 7 m) x H (2 to 3.5 m) x D (3 to 7 m)
- Rooms with less than 2 m from the listening position to the speaker positions
- Rooms where objects such as furniture are likely to obstruct the path of sound beams
- Rooms where the listening position is close to the walls
- Rooms where the listening position is not in front of this unit

Make sure you leave an adequate amount of ventilation space so that heat can escape. Make at least 5 cm of space above or below this unit.

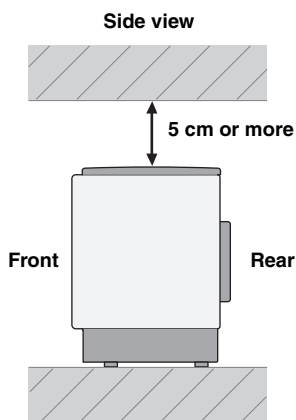

## Notes


- We do not recommend installing this unit so that it is positioned directly on the floor of your listening room. Please install this unit using a metal wall bracket, rack or stand.
- This unit weighs 9.0 kg (19.8 lbs). Be sure to install this unit where it will not fall subject to vibrations, such as from an earthquake, and where it is out of the reach of children.
- When using a cathode-ray tube (CRT) TV, do not install this unit directly above your TV.
- This unit is shielded against magnetic rays. However, if the picture on your TV screen becomes blurred or distorted, we recommend moving the speakers away from your TV.


## Installing this unit

Install this unit where there are no obstacles such as furniture obstructing the path of sound beams. Otherwise, the desired surround sound effects may not be achieved. You may install this unit in parallel with the wall or in the corner.

### Parallel installation


Install this unit in the exact center of the wall when it is measured from the left and right corners.

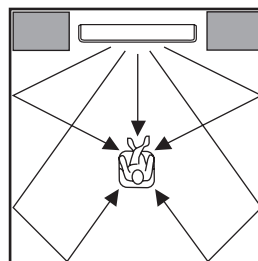


 An object, such as furniture

### Corner installation

Install this unit in the corner at a 40° to 50° angle from the adjacent walls.

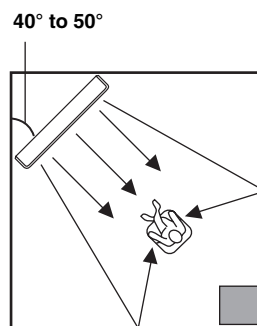


 An object, such as furniture



The availability of the beam mode depends on the installation location of this unit (see page 40). All five beam modes are available for the parallel installation whereas the 3 beam and 5 beam modes are not available for the corner installation.

■ **Using a metal wall bracket**

You can use the optional metal wall bracket to mount this unit on the wall in your listening room.

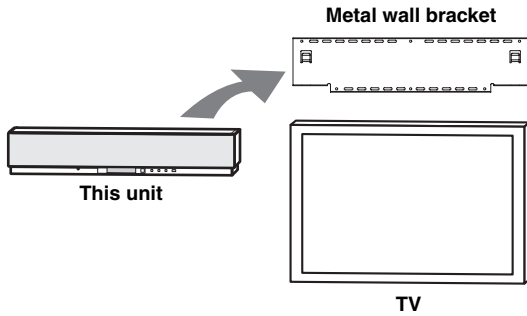


Refer to the instructions supplied with the metal bracket for details on how to attach the metal bracket to the wall or how to attach this unit to the metal bracket.

**Note**

This unit is the model that the metal apparatuses are not attached to the rear panel. If there is the section of “Detach the metal apparatuses from the Sound Projector” in the instructions supplied with the metal bracket, skip the section and proceed to the next. Also, use the supplied projector mounting screws (M4, spare) instead if there is the information about using screws of the metal apparatus (M4) in the section of “Attach the small wall mount brackets to the Sound Projector”.

■ **Using a stand**

You can mount your TV on the stand placed on a commercially available rack to install this unit under your TV.

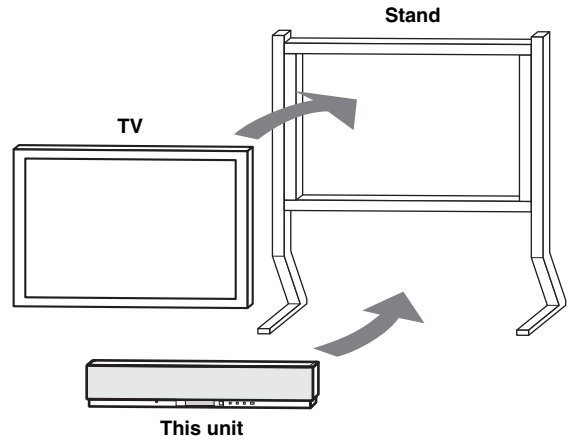


Refer to the instructions supplied with the stand for details on how to install the stand or how to mount this unit and the TV on the stand.

■ **Using a rack**

You can install this unit either above or under your TV in a commercially available rack.

**When this unit is installed above your TV**

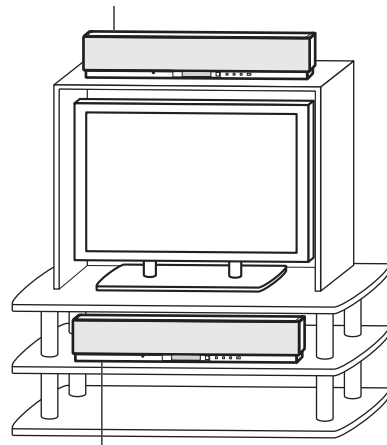

**When this unit is installed under your TV**


**Note**

Make sure that the rack is large enough to allow adequate ventilation space around this unit (see page 11) and that it is strong enough to support the weight of both this unit and your TV.



## ■ Affixing this unit

Peel off the film from each of the four supplied fasteners and then secure them to the bottom four corners of this unit and the top of the rack, etc.

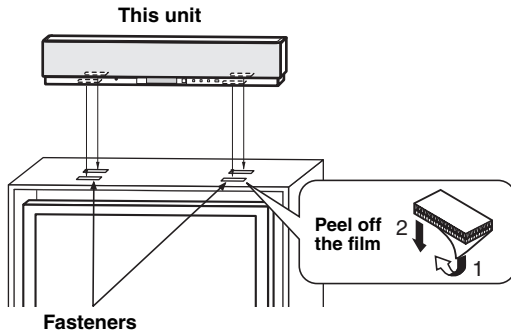

### Notes



- Do not install this unit on top of a slanted surface. This unit may fall over and cause injury.
- Make sure you wipe the surface of the rack, etc. before securing the fasteners. Applying the tape to a dirty or wet surface will weaken the sticking power of the tape, and this unit may fall as a result.


# CONNECTIONS

This unit is equipped with two optical digital jacks, one coaxial digital jack and two types of analog jacks for connecting external components such as your TV, DVD player, VCR, digital satellite tuner, cable TV tuner and game console. Further, by connecting a subwoofer to this unit, you can enjoy reinforced low bass sounds. For details on how to connect various types of external components to this unit, see pages 15 to 20.

## CAUTION

Do not connect this unit or other components to the main power until all connections between components are complete.

-  Audio connection
-  Video connection

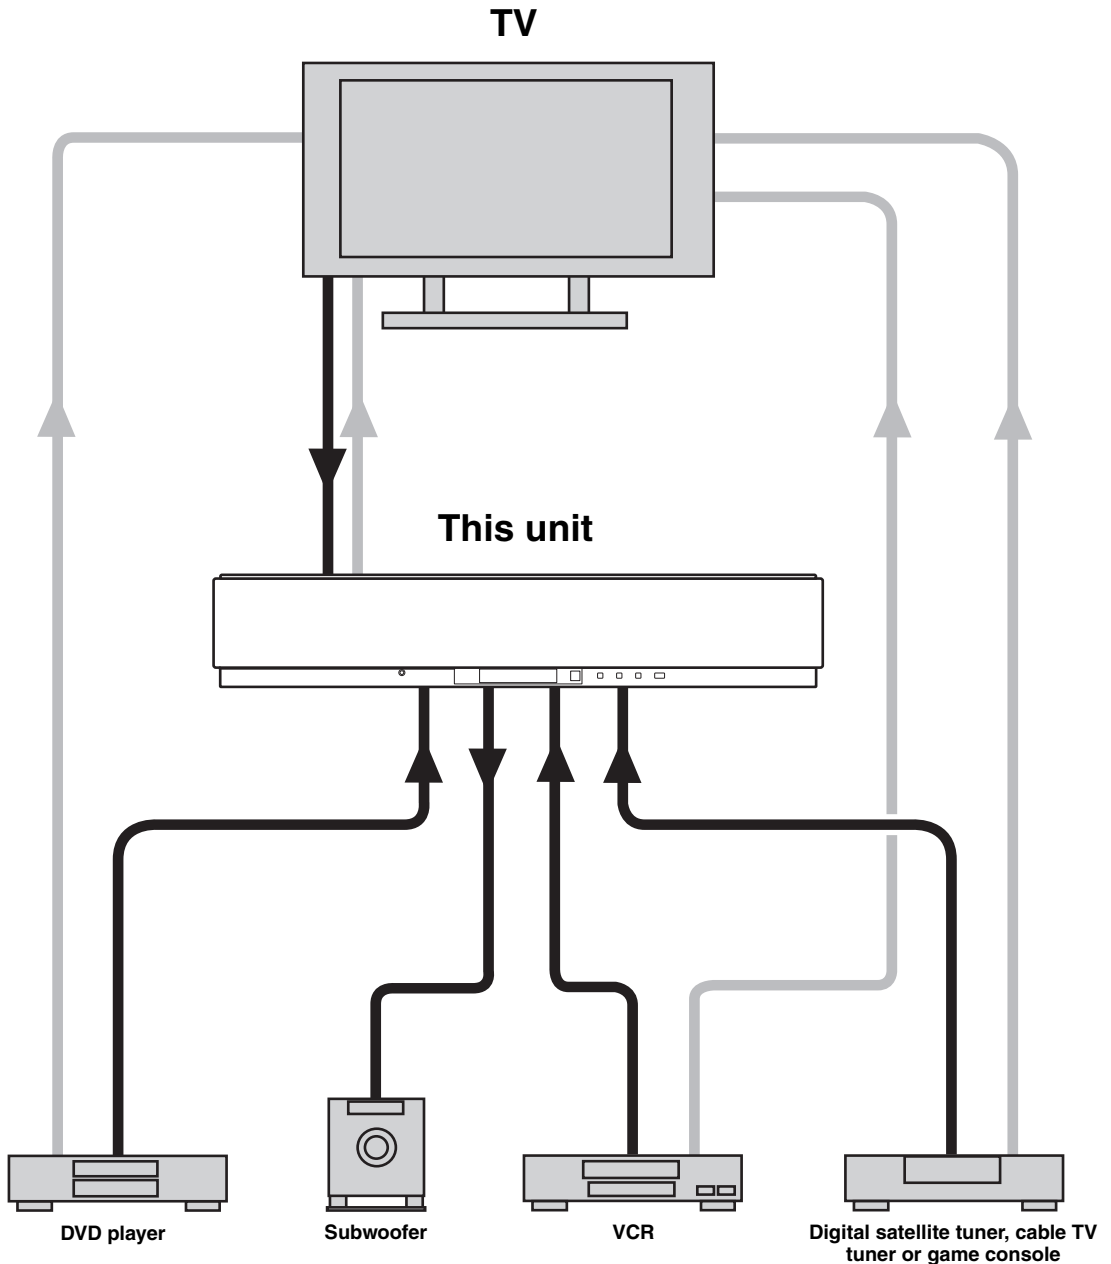


## Connecting a TV

You can connect a TV to this unit and display the OSD for easy viewing when you adjust the system parameters in SET MENU.


### Note

If you connect this unit to the analog audio and optical digital audio output jacks at the same time as shown in the left illustration below, the digital audio signals output at the optical digital output jack take priority over the analog audio signals output at the analog audio output jacks.


### ■ Digital and analog audio connections

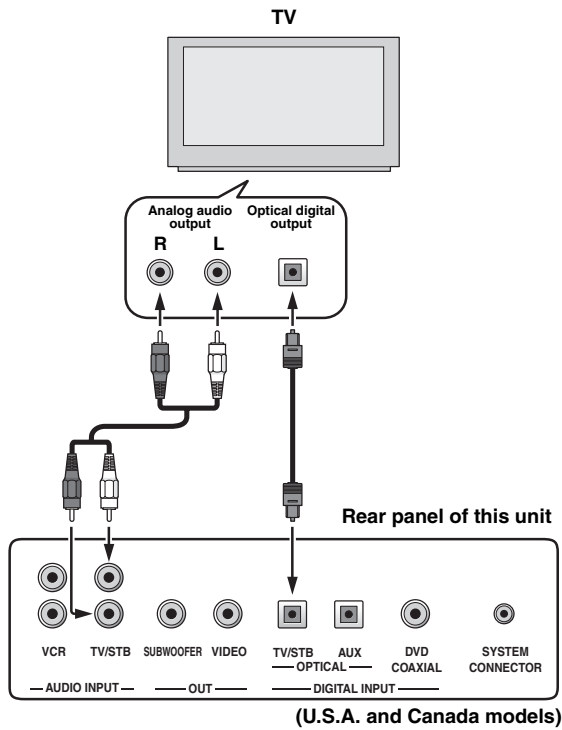


### Cables used for connections

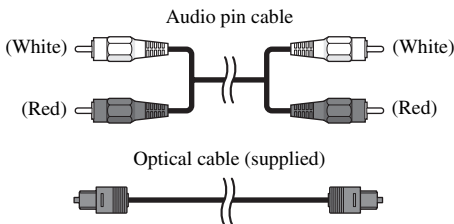

### ■ Video connections

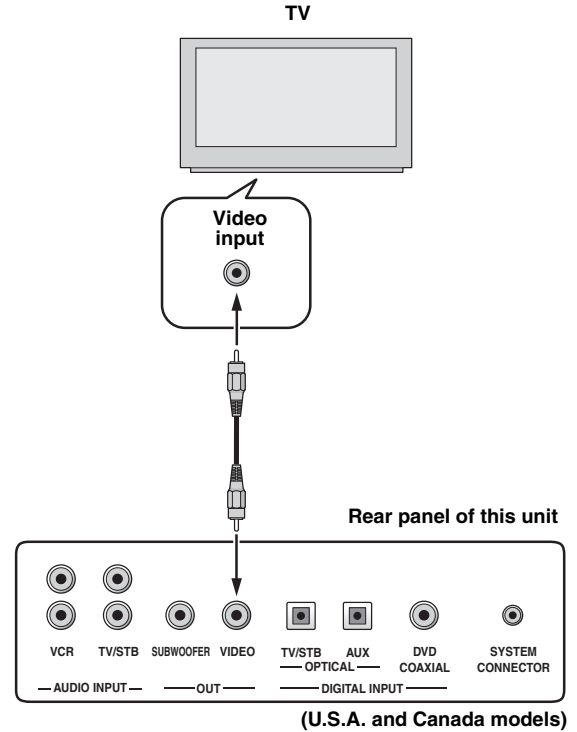


### Cables used for connections

 



## Connecting a DVD player/recorder

To connect a DVD player/recorder, connect the coaxial digital output jack on your DVD player to the coaxial digital input jack (DVD COAXIAL) on this unit.

If there is no coaxial digital output jack on your DVD player/recorder, use them with optical digital connection.

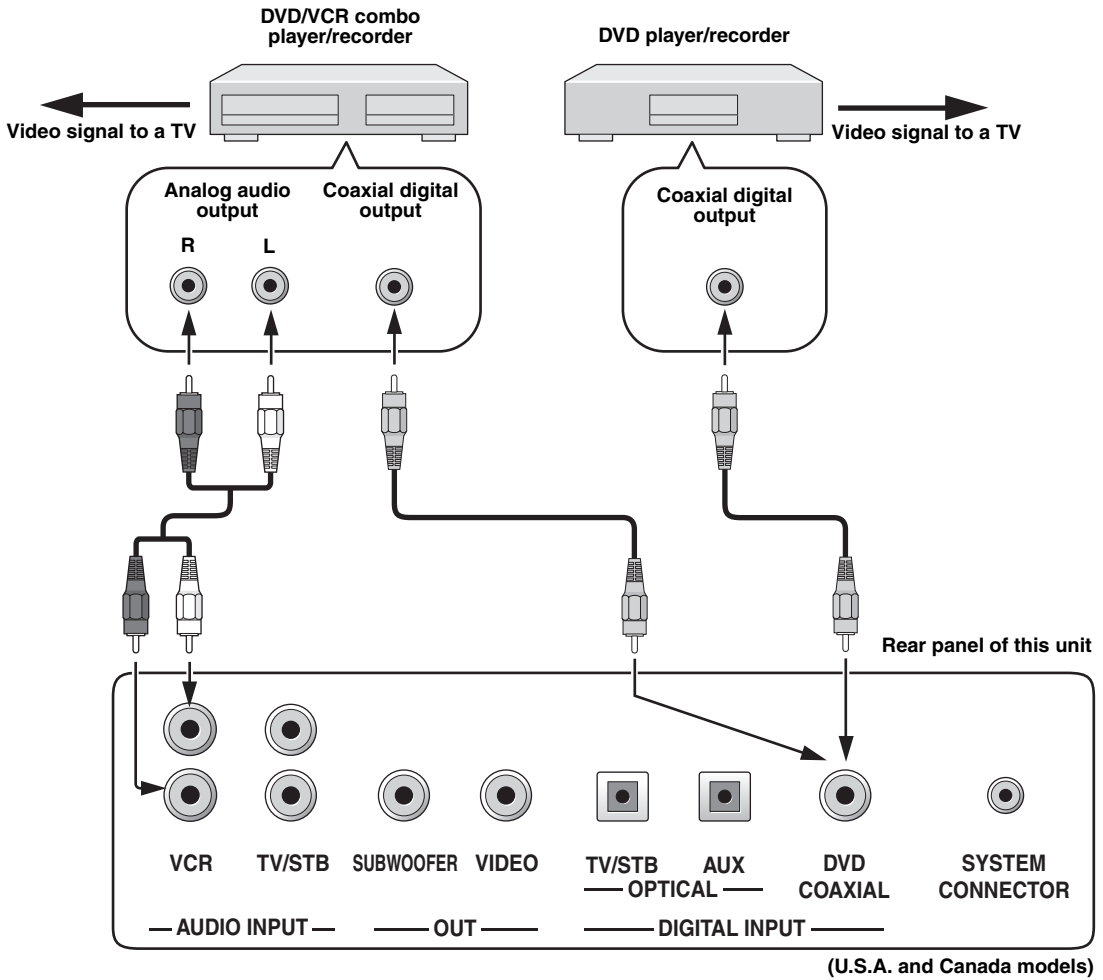


### Cables used for connections

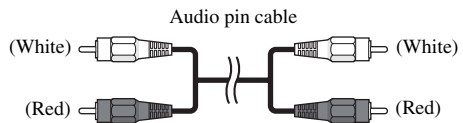 


## Connecting a VCR

To connect a VCR, connect the analog audio output jacks on your VCR to the analog audio input jacks (VCR R/L) on this unit. Connect red plugs to the right jacks and white plugs to the left jacks.

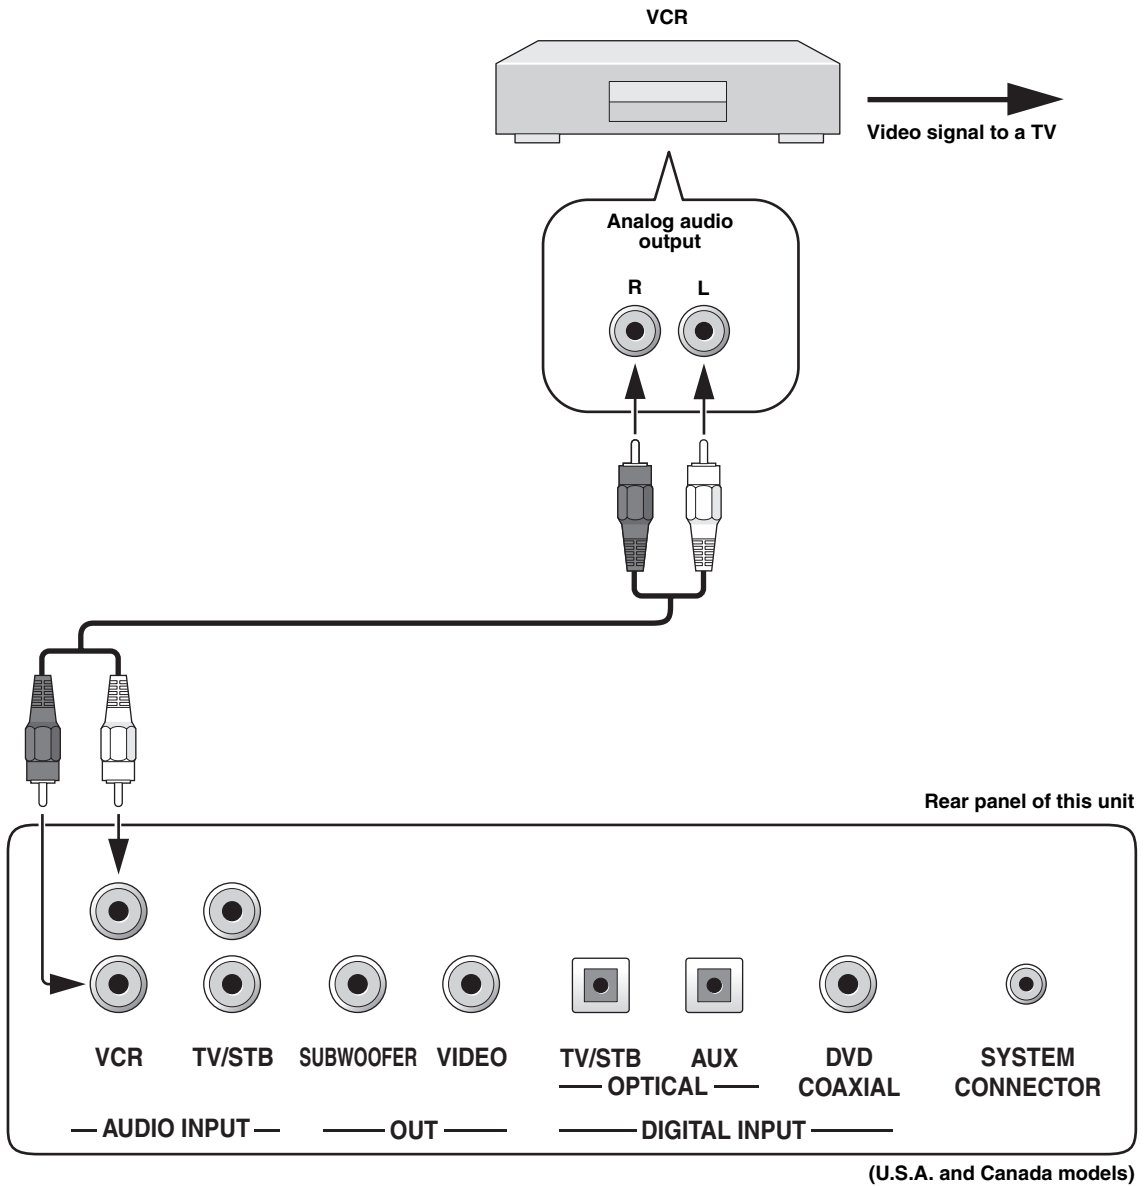

### Cables used for connections

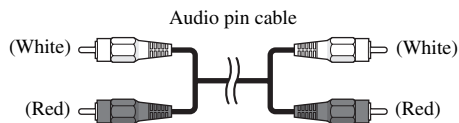


## Connecting a digital satellite tuner or a cable TV tuner


To connect a digital satellite tuner or a cable TV tuner, connect the optical digital output jack on your digital satellite tuner or cable TV tuner to the optical digital input jack (TV/STB OPTICAL) on this unit. In addition, connect the analog audio output jacks on your VCR to the analog audio input jacks (TV/STB R/L) on this unit. Connect red plugs to the right jacks and white plugs to the left jacks.

### Note

If your TV and tuner connected to this unit do not support digital broadcasting, connect the analog audio output jacks (TV/STB R/L) on this unit to the analog audio output jacks on your TV.

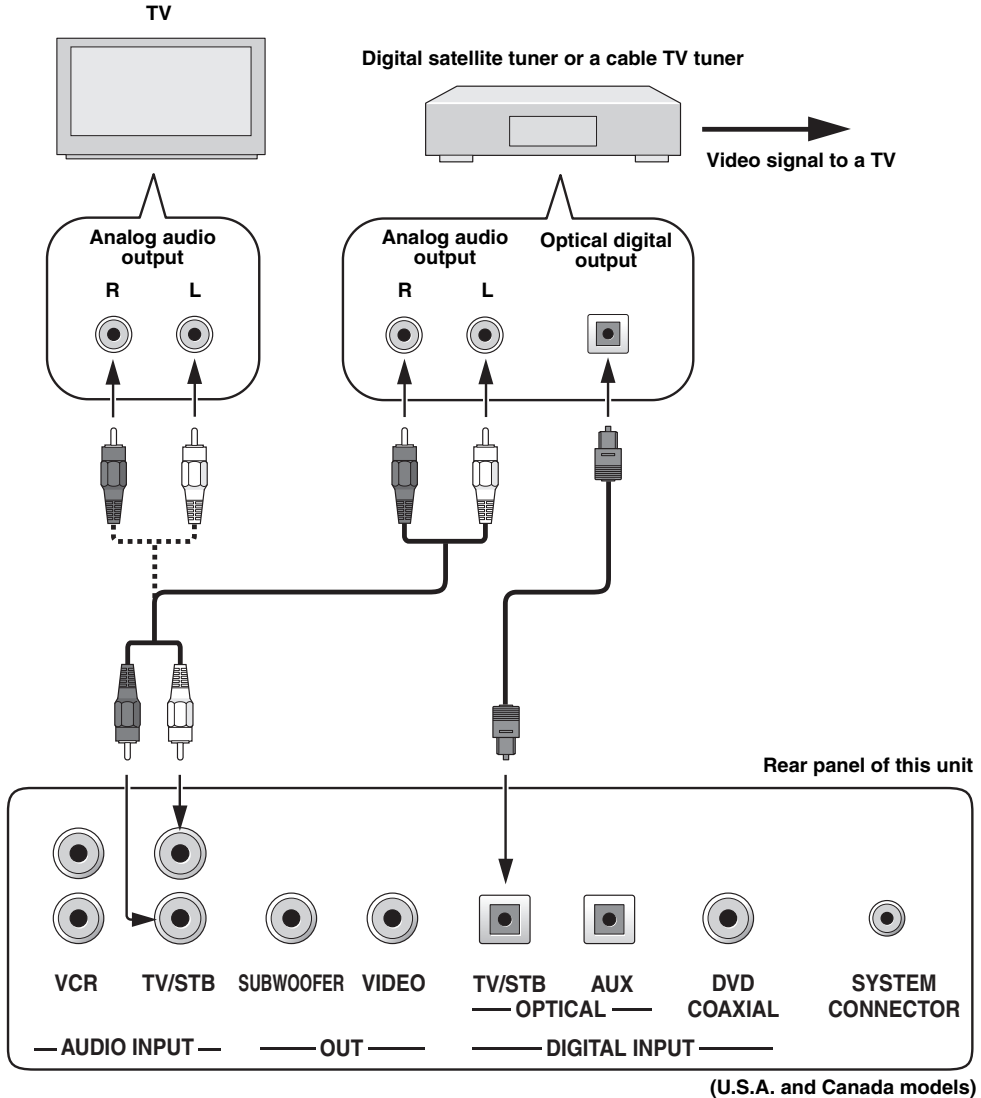


### Cables used for connections

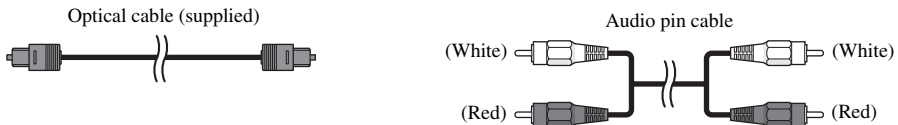


## Connecting other external components

To connect other external components, connect the optical digital output jack on the component to the optical digital input jack (AUX OPTICAL) on this unit.

You can connect a DVD player/recorder or a component that supports optical digital connections.

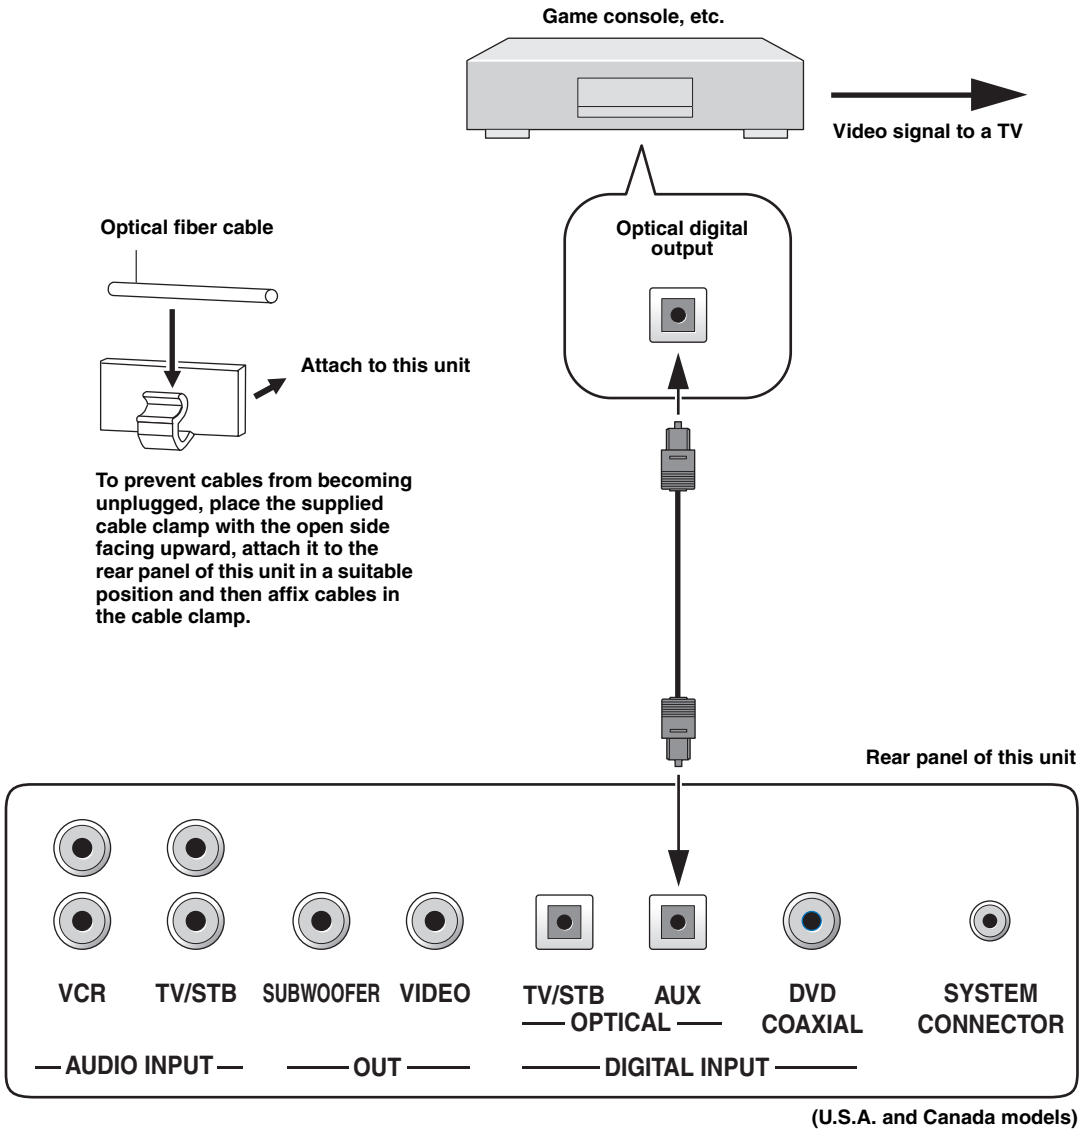

### Cables used for connections

 


## Connecting a subwoofer

To connect a subwoofer, connect the monaural input jack on your subwoofer to the monaural audio output jack (SUBWOOFER OUT) on this unit.

If a subwoofer is connected to this unit, turn on the power of your subwoofer and then run AUTO SETUP (see page 26) or select SWFR for BASS OUT in SUBWOOFER SET (see page 70).


### Connecting to the SYSTEM CONNECTOR jack (U.S.A. and Canada models only)

When connecting a YAMAHA subwoofer equipped with a SYSTEM CONNECTOR jack, connect it to the SYSTEM CONNECTOR jack on this unit. If the subwoofer is connected using a system type connection, changing the power mode of this unit controls the power mode of the subwoofer.

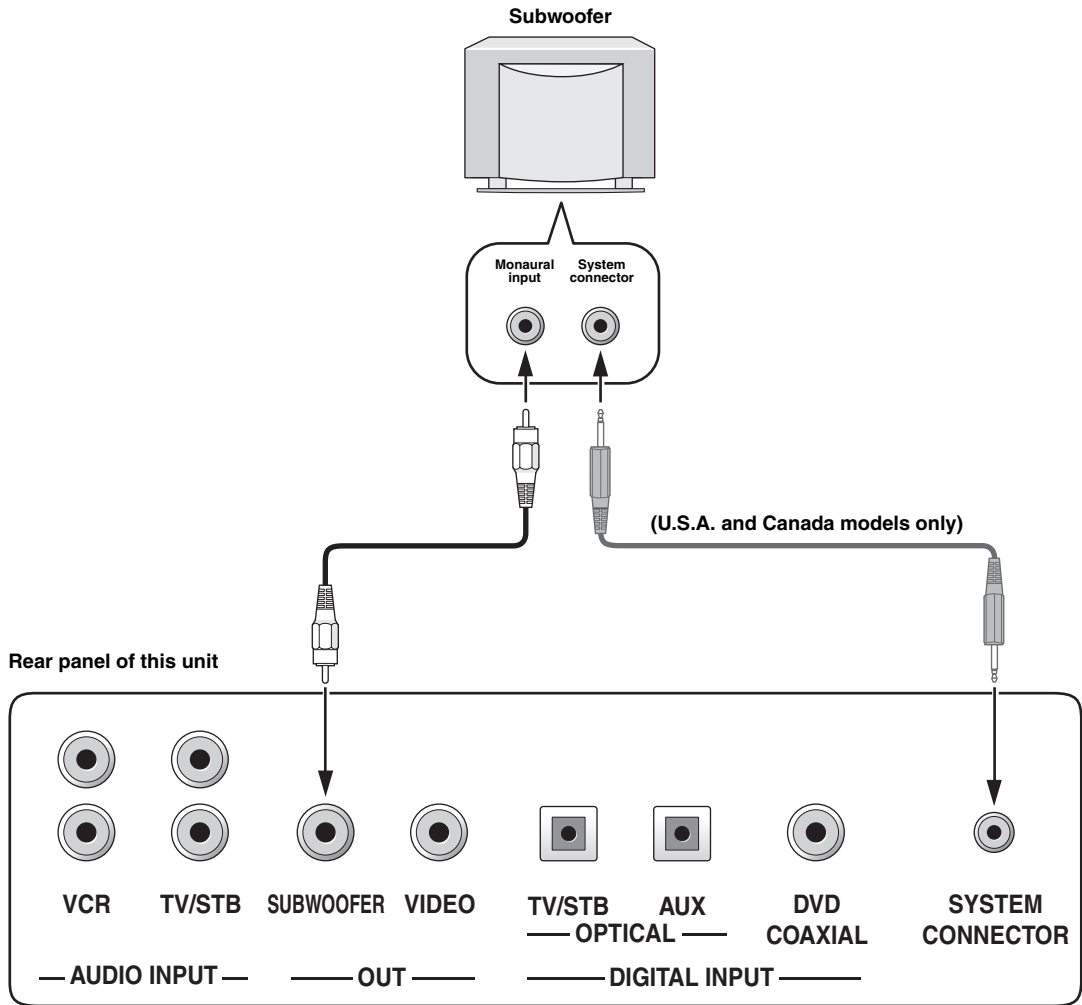


### Cables used for connections

 Subwoofer pin cable



 
System connector cable  
 (supplied with the YAMAHA subwoofer with the SYSTEM CONNECTOR jack)






## ***Connecting the power supply cable***

Once all other connections are complete, plug the power supply cable into the AC wall outlet.

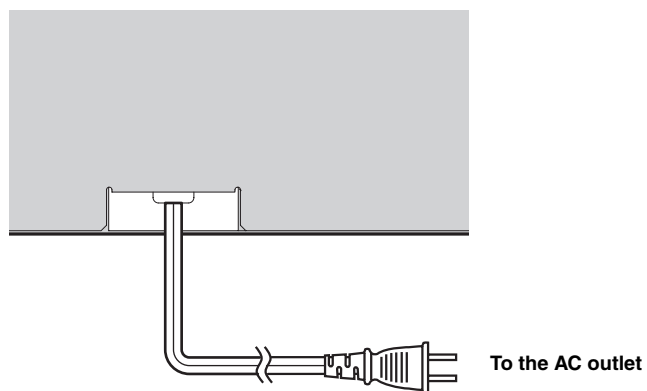

# GETTING STARTED

## Installing batteries in the remote control

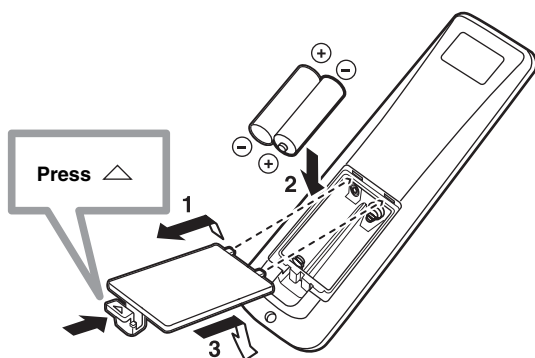

**1** Press and hold the  $\triangle$  mark on the battery cover and then slide off the cover.

**2** Insert the two supplied batteries (AA, R6, UM-3) into the battery compartment.

Make sure you insert the batteries according to the polarity markings (+/-).


**3** Close the battery cover.

### Notes

- Change all of the batteries if you notice the following conditions; the operation range of the remote control decreases, the indicator does not blink or its light becomes dim.
- Do not use old batteries together with new ones.
- Do not use different types of batteries (such as alkaline and manganese batteries) together. Read the packaging carefully as these different types of batteries may have the same shape and color.
- Exhausted batteries may leak. If the batteries have leaked, dispose of them immediately. Avoid touching the leaked material or letting it come into contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.
- Do not throw away batteries with general house waste. Dispose of them correctly in accordance with your local regulations.
- The contents of the memory stored in the remote control may be erased in the following cases:
  - The remote control is left without batteries for more than 2 minutes.
  - Exhausted batteries remain in the remote control.
  - The buttons on the remote control are accidentally pressed when you change batteries.
- If the memory stored in the remote control is unwantedly erased, insert new batteries and reset the remote control codes again.

## Operation range of the remote control

The remote control transmits a directional infrared beam. Use the remote control within 6 m of this unit and point it toward the remote control sensor on this unit during operation.

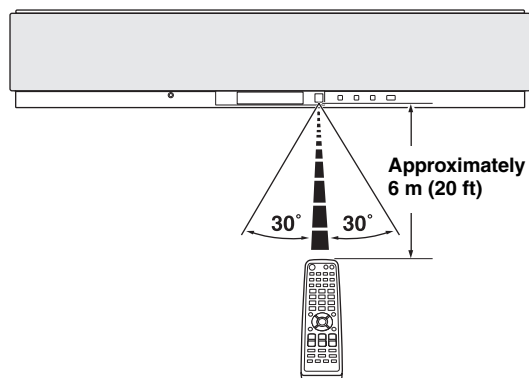

### Notes


- Do not spill water or other liquids on the remote control.
- Do not drop the remote control.
- Do not leave or store the remote control in the following types of conditions:
  - places of high humidity, such as near a bath
  - places of high temperatures, such as near a heater or a stove
  - places of extremely low temperatures
  - dusty places
- Do not expose the remote control sensor on this unit to direct sunlight or lighting such as inverted fluorescent lamps.
- If the batteries grow old, the effective operation distance of the remote control decreases considerably. If this happens, replace the batteries with two new ones as soon as possible.

## Using the remote control

The control area and the corresponding functions of the remote control change depending on the currently selected input source. Press the input selector buttons (TV, STB, VCR, DVD or AUX) to select an input source and switch to the operation mode of the corresponding input source. Press YSP to switch to the operation mode of this unit. The buttons on the remote control numbered ③ to ⑨ are operational only after you press YSP to switch to the operation mode of this unit.




You can control other components by setting the appropriate remote control codes (see page 82). Once the remote control code for each input source (TV, STB, VCR, DVD or AUX) is set, see "Controlling other components" on page 83 for further information on the specific functions of the available remote control buttons for each input source. Note that the buttons on the remote control numbered ③ to ⑨ have different functions depending on the currently selected input source.

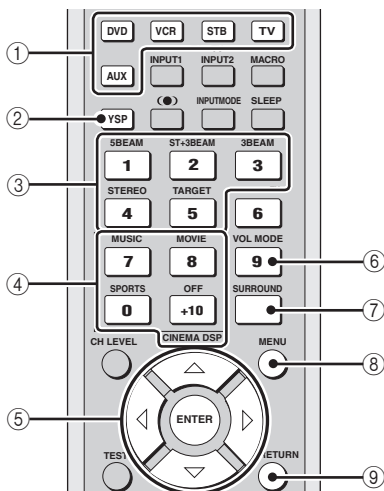

- 1 Input selector buttons
- 2 YSP
- 3 Beam mode buttons
- 4 Sound field program buttons
- 5 Cursor buttons  $\triangle / \nabla / \triangleleft / \triangleright$ , ENTER
- 6 VOL MODE
- 7 SURROUND
- 8 MENU
- 9 RETURN

## Turning on the power

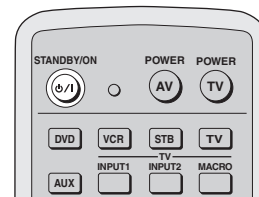

- 1 Press STANDBY/ON on the front panel or on the remote control to turn on the power of this unit.



Front panel

or



Remote control

- 2 Press STANDBY/ON on the front panel or on the remote control again to set this unit to the standby mode.

### Note

When the unit is in the standby mode, only STANDBY/ON on the front panel or on the remote control is operational, and the other control buttons on the front panel or on the remote control are not operational until the power of this unit is turned on.

# USING SET MENU

## Displaying the OSD

This section simply describes how to display the OSD (on-screen display) of this unit on your TV screen and set the parameters for your listening room. Once this is complete, you can enjoy real surround sound while watching TV in the comfort of your own home.

**1 Check that the video input jack on your TV is connected to the VIDEO OUT jack of this unit to display the OSD of this unit.**

**2 Press STANDBY/ON on the front panel or on the remote control to turn on the power of this unit.**



Front panel

or




Remote control

**3 Turn on the power of your TV.**

**4 Press TV on the remote control to display the OSD of this unit on your TV screen.**

It may take a few seconds before this unit's OSD appears on your TV screen.


If the OSD does not appear, use the remote control provided with your TV to switch the video input until the OSD appears.

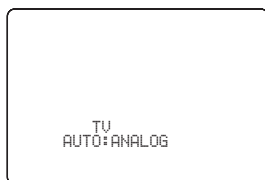

OSD screen example


## Other buttons that display the OSD

Remote control buttons that display the OSD	Page
① Input selector buttons	37
② ● TruBass	54
③ Beam mode buttons	40
④ Sound field program buttons	49
⑤ CH LEVEL	79
⑥ VOLUME +/-	38
⑦ MUTE	39
⑧ INPUTMODE	81
⑨ SLEEP	55
⑩ VOL MODE	52
⑪ SURROUND	44
⑫ MENU	28, 57, 64

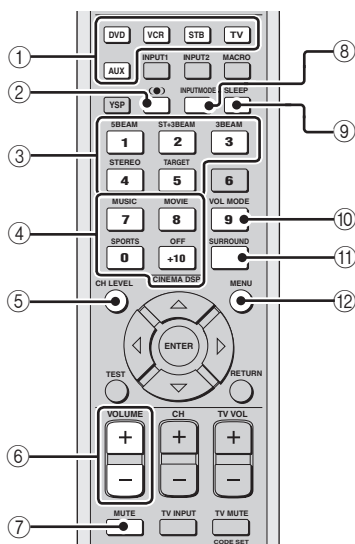

## The flow chart of SET MENU

The following diagram illustrates the overall flow of the setup procedure.

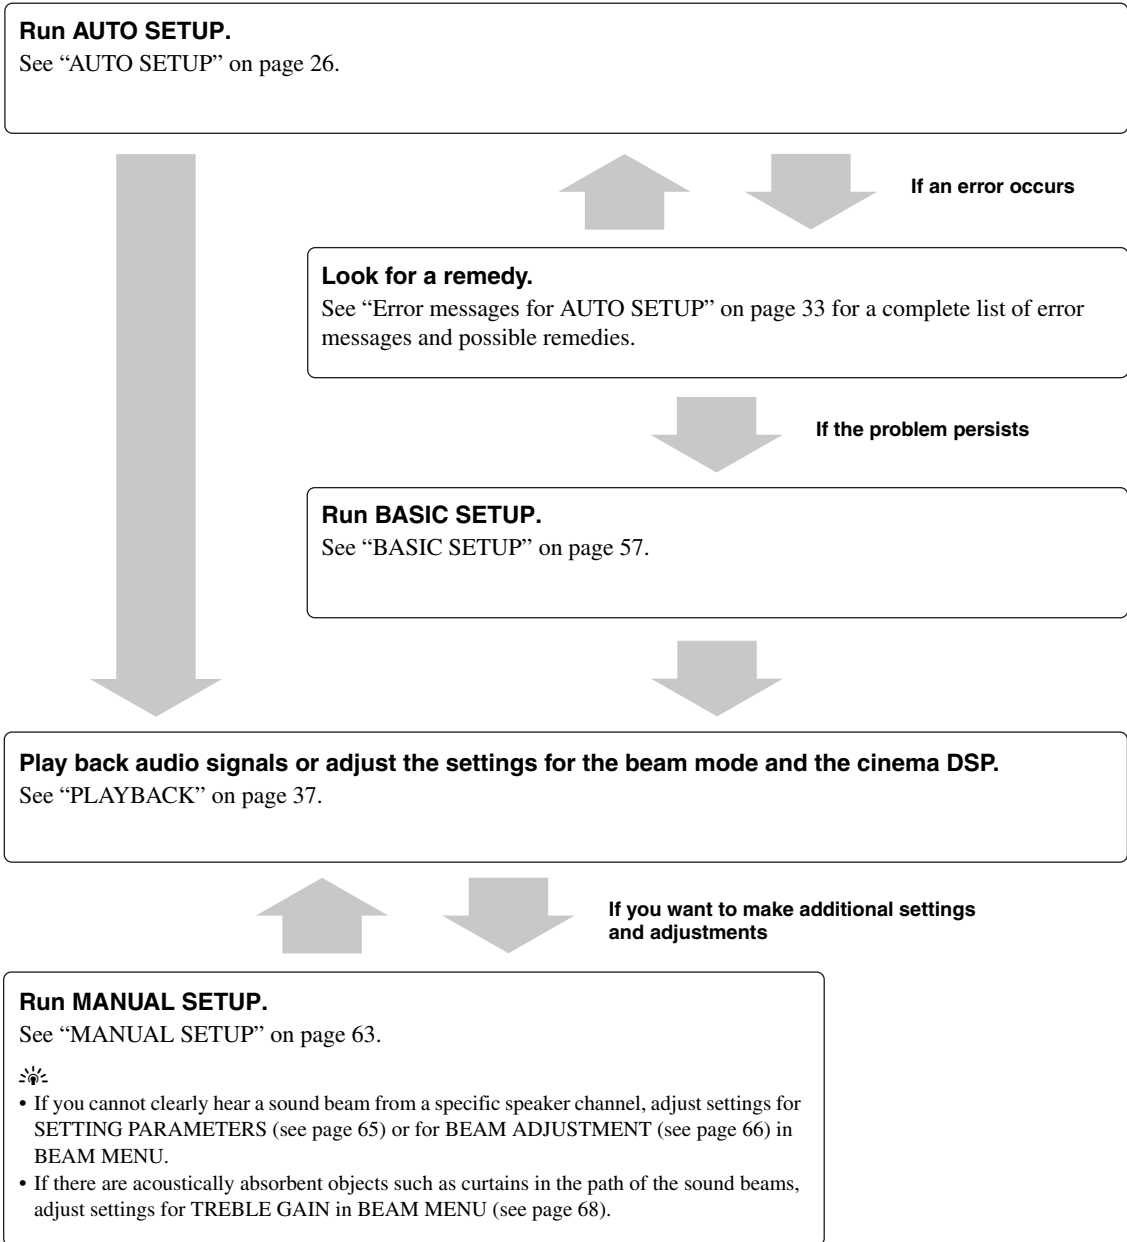

# AUTO SETUP

This unit creates a sound field by reflecting sound beams on the walls of your listening room and broadening the cohesion between speaker channels. Just as you would arrange the speaker position of other audio systems, you need to set the beam angle to enjoy the best possible sound from this unit.

This unit employs the beam optimization feature and the YAMAHA Parametric Room Acoustic Optimizer (YPAO) technology with the aid of the supplied optimizer microphone, allowing you to avoid troublesome listening-based speaker setup and achieving highly accurate sound adjustments that best match your listening environment.

The beam optimization is the automated feature of BASIC SETUP, which creates the best possible surround sound field without manually setting the parameters for your listening room.

The YAMAHA Parametric Room Acoustic Optimizer (YPAO) technology performs the following checks and automatically makes appropriate sound adjustments.

## DISTANCE:

Checks the phase and the distance of each beam from this unit and adjusts the delay of each channel so that each sound beam reaches the listening position at the same time.

## EQUALIZING:


Adjusts frequency and levels of each channel's parametric equalizer to reduce coloration across the channels and create a cohesive sound field. YPAO equalizing calibration incorporates three parameters (frequency, level and Q factor) for each of the seven bands in its parametric equalizer to provide highly precise automatic adjustment of frequency characteristics.

## LEVEL:

Checks and adjusts the sound output level of each channel.

## The flow chart of AUTO SETUP

This unit performs a series of checks to optimize the beam angle, delay, volume and quality. You can choose to optimize all or part of the parameters.

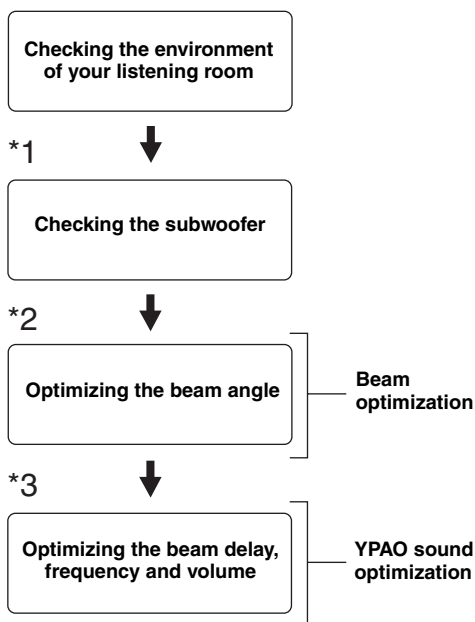

### Notes


- \*1 The subwoofer checking procedure is skipped if BEAM OPTIMZ only is selected.
- \*2 The beam angle checking procedure is skipped if SOUND OPTIMZ only is selected.
- \*3 The YPAO sound optimization procedure is skipped if BEAM OPTIMZ only is selected.

## Installing the optimizer microphone

The supplied optimizer microphone collects and analyzes the sound that this unit produces in your actual listening environment. Follow the procedure below to connect the optimizer microphone to this unit and make sure that the optimizer microphone is placed in a proper location and that there are no large obstacles between the optimizer microphone and the walls in your listening room.


### Notes

- After you have completed the AUTO SETUP procedure, be sure to disconnect the optimizer microphone.
- The optimizer microphone is sensitive to heat.
  - Keep it away from direct sunlight.
  - Do not place it on top of this unit.
- Do not connect the optimizer microphone to an extension cable as doing so may result in an inaccurate sound optimization.
- An error may occur during the AUTO SETUP procedure if the optimizer microphone is not properly placed in your listening room. To avoid the possibility of an error:
  - Do not place the optimizer microphone to the extreme right or left from the center of this unit.
  - Do not place the optimizer microphone within 2 m from the front of this unit.
  - Do not place the optimizer microphone more than 1 m from the center height of this unit.
- Make sure that there are no obstacles between the optimizer microphone and the walls in your listening room as these objects obstruct the path of sound beams. However, any objects that are in contact with the walls will be regarded as a protruding part of the walls.
- The best possible results are achieved if the optimizer microphone is placed at the same height as your ears would be when you are seated in your listening position. However, if this is not possible, you can manually fine-tune the sound beam angle and balance the sound beam output levels using MANUAL SETUP (see page 63) once the AUTO SETUP procedure is completed.
- If a subwoofer with adjustable volume and crossover/high cut frequency controls is connected to this unit, set the volume between 9 and 12 o'clock as viewed on a conventional clockface and set the crossover/high cut frequency to the maximum.

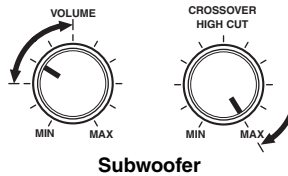

Subwoofer

- 1 **Connect the supplied optimizer microphone to the OPTIMIZER MIC jack on the front panel.**

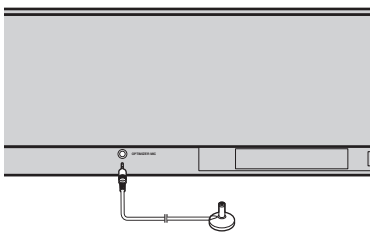

- 2 **Place the optimizer microphone on a flat level surface more than 2 m from the front of the unit and within 1 m from the center height of the unit with the optimizer microphone head upward at your normal listening position.**


### Note

Be sure to place the optimizer microphone on an imaginary center line drawn from this unit.




You may want to use a tripod or the supplied cardboard microphone stand to affix the optimizer microphone at the same height as your ears would be when you are seated in your listening position.

### Example of using a tripod

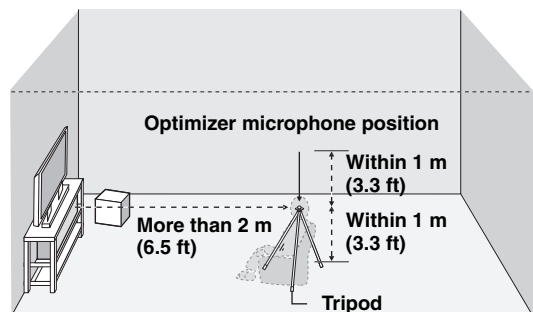


**Example of using the supplied cardboard microphone stand**

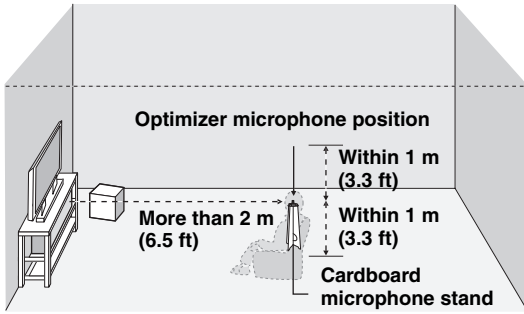

**Assembling the supplied cardboard microphone stand**


You will find three separate parts (one circular-shaped part and two longitudinal-shaped parts) of the cardboard microphone stand originally put together.

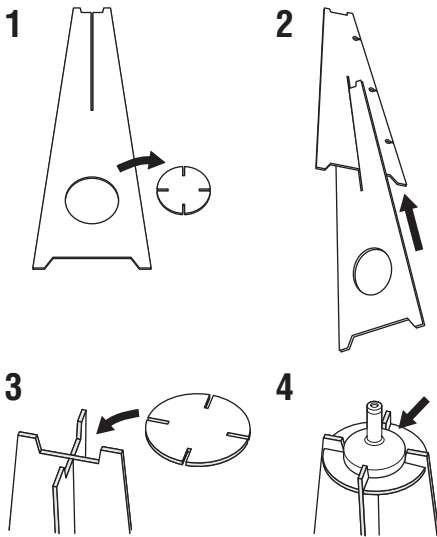

- 1** Disassemble the three parts of the cardboard microphone stand originally put together.
- 2** Insert one of the longitudinal-shaped part into the crevice of the other longitudinal-shaped part.
- 3** Place the circular-shaped part on top of the two combined longitudinal-shaped parts.
- 4** Place the supplied optimizer microphone on top of the circular-shaped part.

**Using AUTO SETUP**

Once the optimizer microphone is firmly connected to this unit and properly placed in your listening room, follow the procedure below to start the AUTO SETUP procedure.

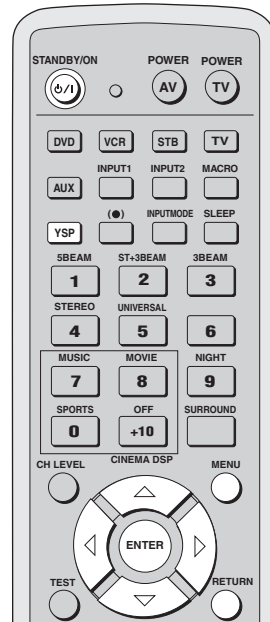



**Notes**

- If your listening room has curtains, open the curtains before starting the BEAM OPT+SOUND OPTIMZ or the BEAM OPTIMZ only procedure.
- Make sure that your listening room is as quiet as possible while this unit is performing the AUTO SETUP procedure.
- Once the AUTO SETUP procedure has started, position yourself beside or behind this unit so that you may not obstruct the path of sound beams. To achieve the best results possible, however, it is strongly recommended that you should evacuate yourself from your listening room until the AUTO SETUP procedure is completed.
- Be advised that it is normal for loud test tones to be output during the AUTO SETUP procedure.
- The AUTO SETUP procedure may not be run successfully if this unit is installed in one of the rooms described in “Before installing this unit” on page 11. In such cases, run BASIC SETUP (see page 57) or MANUAL SETUP (see page 63) to manually adjust the corresponding parameters.
- If the AUTO SETUP procedure stops and an error message appears on the screen, see “Error messages for AUTO SETUP” on page 33 for appropriate remedies.



You can save the settings optimized by the AUTO SETUP procedure (see page 34). A set of settings optimized according to specific conditions of your listening environment can be recalled later depending on the varying conditions of your listening environment (see page 35).

**1 Press STANDBY/ON on the front panel or on the remote control to turn on the power of this unit.**



Front panel

or



Remote control

**2 Press YSP on the remote control to switch to the operation mode of this unit.**



**3 Press MENU on the remote control.**


The SET MENU screen appears on your TV.



- The control buttons used for SET MENU are displayed on the bottom of the screen.
- To return to the previous screen while using SET MENU, press RETURN on the remote control.
- To resume cursor button operations after changing the control area by pressing an input selector button, press TEST on the remote control.
- To cancel the SET MENU screen, press MENU once more.
- You can also perform the following operations in the front panel display.
- If you press an input selector button during the SET MENU operations, the cursor buttons become ineffective. In this case, press TEST once.

**4 Press ▲ / ▼ on the remote control to select AUTO SETUP and then press ENTER.**

The following screen appears on your TV.

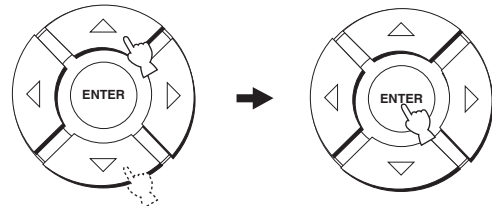


SETUP

English

- 5 Press  $\triangle$  /  $\nabla$  to select BEAM OPT+SOUND OPTIMZ, BEAM OPTIMZ only or SOUND OPTIMZ only and then press ENTER.**

The following screen appears on your TV.

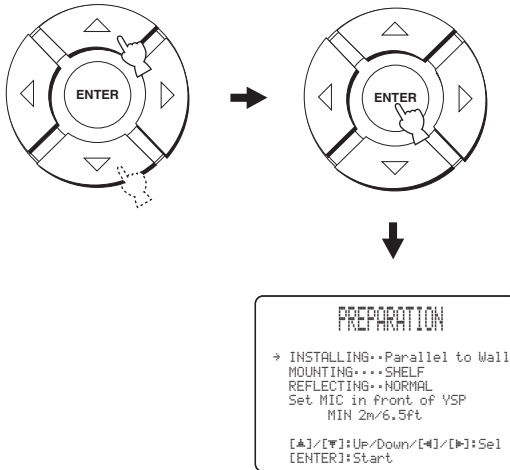

**BEAM OPT+SOUND OPTIMZ  
(Beam optimization and YPAO sound optimization)**

Use to optimize the beam angle, delay, volume and quality so that the parameters best match your listening environment.

It is recommended that you should select this optimization feature in the following cases:

- If you make settings for the first time.
- If the unit has been relocated.
- If your listening room has been restructured.
- If the objects in your listening room (furniture, etc.) have been rearranged.

**BEAM OPTIMZ only  
(Beam optimization only)**

Use to optimize the beam angle so that the parameter best matches your listening environment.

**SOUND OPTIMZ only  
(YPAO sound optimization only)**

Use to optimize the beam delay, volume and quality so that the parameters best match your listening environment.


It is recommended that you should select this optimization feature in the following cases:

- If you have opened or closed the curtains in your listening room before using this unit.
- If you have manually set the beam angle.

**Note**

You must optimize the beam angle in the BEAM OPTIMZ only procedure before starting the SOUND OPTIMZ only procedure.

- 6 Press  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  to select and configure each parameter and then press ENTER.**

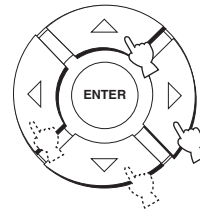


**INSTALLING (Installing)**


Use to select the installed position of the unit in your listening room.

Choices: **Parallel to Wall** (Parallel with wall installation),  
**Angle to Wall or corner** (Corner installation)

**Angle to Wall or corner**

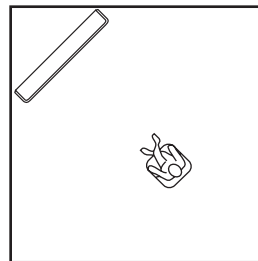

**Parallel to Wall**

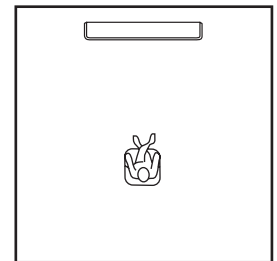


- Select Angle to Wall or corner if the unit is installed in the corner. The beam mode is set to ST+3BEAM (see page 41).
- Select Parallel to Wall if the unit is installed in parallel with the wall. The beam mode is set to 5BEAM (see page 41).

### MOUNTING (Mounting)

Use to select the mounted position of the unit in your listening room.

Choices: **SHELF** (Shelf mount), **WALL** (Wall mount)

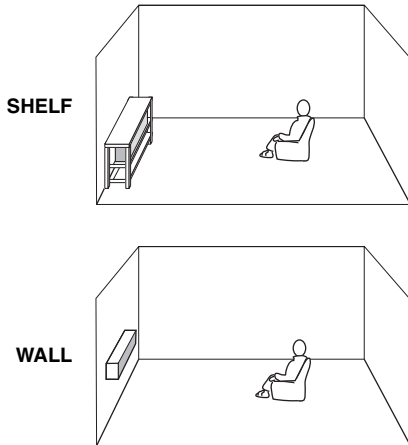

- Select **WALL** if the unit is mounted on the wall.
- Select **SHELF** if the unit is mounted on the shelf.

### REFLECTING (Reflecting)

Use to select the reflectivity of your listening room.

Choices: **NORMAL** (Normal), **HI ECHO** (High echo)

- Select **NORMAL** if your listening room has a normal reflectivity.
- Select **HI ECHO** if your listening room has highly reflective surfaces such as concrete walls.



### 7 Check the following points once again before starting the AUTO SETUP procedure.

- Is the optimizer microphone firmly connected to this unit?
- Is the optimizer microphone placed in a proper location?
- Are there any large obstacles in between the optimizer microphone and the walls in your listening room?


### 8 Press ENTER to start the AUTO SETUP procedure.

The following screen appears on your TV.


ENVIRONMENT CHECK (Environmental noise check), SUB WOOFER CHECK (Subwoofer check) and WILL START in 10 SEC (Will start in 10 sec) are displayed in order as the PREPARATION procedure is in progress.

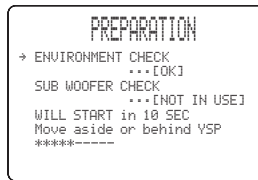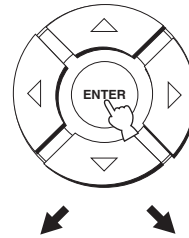


If you selected **BEAM OPT+ SOUND OPTIMZ** or **SOUND OPTIMZ** only in step 5.

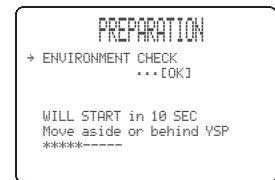

If you selected **BEAM OPTIMZ** only in step 5.

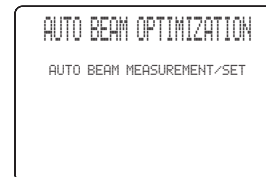

Skipped if you selected **SOUND OPTIMZ** only in step 5.

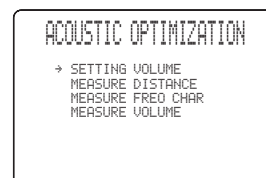


Skipped if you selected **BEAM OPTIMZ** only in step 5.

If an error occurs, an error message is displayed. See “Error messages for AUTO SETUP” on page 33 for a complete list of error messages and their proper remedies. Follow the instructions and perform the AUTO SETUP procedure again.

**9 Check that the following screen is displayed on your TV.**


The results of the AUTO SETUP procedure are displayed on your TV.

**Example of the SHOW RESULT screen**

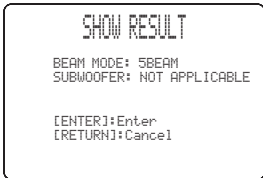

**10 Press ENTER to confirm the results or press RETURN to cancel the results.**

The following screen is displayed temporarily for a few seconds and then disappear from your TV.

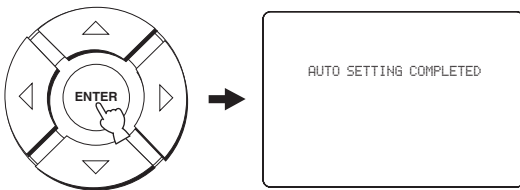

■ Error messages for AUTO SETUP

Before the AUTO SETUP procedure starts

Error message	Cause	Remedy	See page
<b>ERROR E-2</b> <b>No MIC Detected. Please check MIC connection and re-try.</b>	The optimizer microphone is not connected to this unit.	Connect the optimizer microphone to this unit.	27

While the AUTO SETUP procedure is in progress-


Error message	Cause	Remedy	See page
<b>ERROR E-1</b> <b>Please test in more quiet environment.</b>	There is too much unwanted noise in your listening room.	Make sure that your listening room is as quiet as possible. You may want to choose certain hours during the day when there is not much noise coming from outside.	—
<b>ERROR E-2</b> <b>No MIC detected. Please check MIC connection and re-try.</b>	The optimizer microphone was disconnected while the AUTO SETUP procedure was in progress.	Make sure that the optimizer microphone is firmly connected to this unit.	27
<b>ERROR E-3</b> <b>Unexpected control is detected. Please re-try.</b>	Some other operations were performed on this unit while the AUTO SETUP procedure was in progress.	Do not perform any other operations while the AUTO SETUP procedure is in progress.	—
<b>ERROR E-4</b> <b>Please check MIC position. MIC should be set in front of YSP.</b>	The optimizer microphone is not placed in front of this unit.	Make sure that the optimizer microphone is installed in front of this unit.	27
<b>ERROR E-5</b> <b>Please check MIC position. MIC should be set above 2m/6.5ft.</b>	The optimizer microphone is not placed in the right distance from this unit.	Make sure that the optimizer microphone is installed more than 2 m from the front of this unit and within 1 m from the center height of this unit.	27
<b>ERROR E-6</b> <b>Volume level is smaller than expected. Please check MIC position/connection and re-try.</b>	The optimizer microphone cannot collect the sound produced by this unit because the sound output level is too low.	Make sure that the optimizer microphone is firmly connected to this unit and placed in a proper location. If the problem persists, contact the nearest YAMAHA service center for assistance.	27
<b>ERROR E-7</b> <b>Unexpected Error Happened. Please re-try.</b>	An internal system error occurred.	Repeat the AUTO SETUP procedure.	—

# USING THE SYSTEM MEMORY


## Saving settings

You can save the current settings adjusted in SET MENU in the system memory of this unit. It is handy to save certain settings according to the varying conditions of your listening environment. For example, if there are curtains in the path of beams, the effectiveness of the beams will vary depending on whether the curtains are open or closed.

When the curtains are open

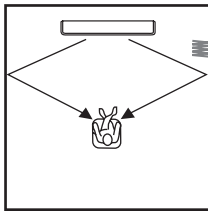

When the curtains are closed

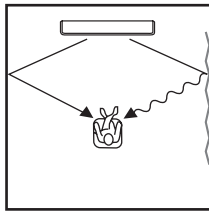

- 1 Press YSP on the remote control to switch to the operation mode of this unit.



- 2 Press MENU on the remote control.


The SET MENU screen appears on your TV.



- The control buttons used for SET MENU are displayed on the bottom of the screen.
- To return to the previous screen while using SET MENU, press RETURN on the remote control.
- To resume cursor button operations after changing the control area by pressing an input selector button, press TEST on the remote control.
- To cancel the SET MENU screen, press MENU once more.
- You can also perform the following operations in the front panel display.
- If you press an input selector button during the SET MENU operations, the cursor buttons become ineffective. In this case, press TEST once.


- 3 Press ▲ / ▼ to select MEMORY and then press ENTER.

The following screen appears on your TV.

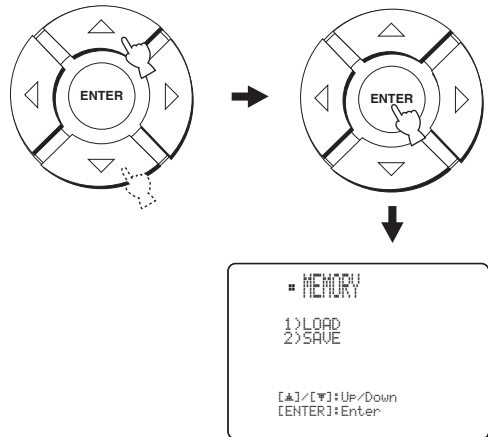


- 4 Press ▲ / ▼ to select SAVE and then press ENTER.

The following screen appears on your TV.

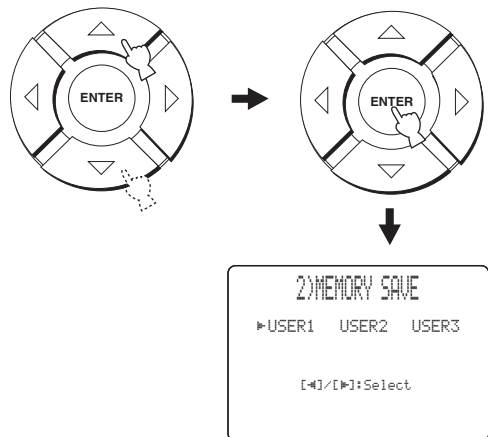


- 5 Press  $\triangleleft$  /  $\triangleright$  to select USER1, USER2 or USER3 and then press ENTER.**

The following screen appears on your TV.

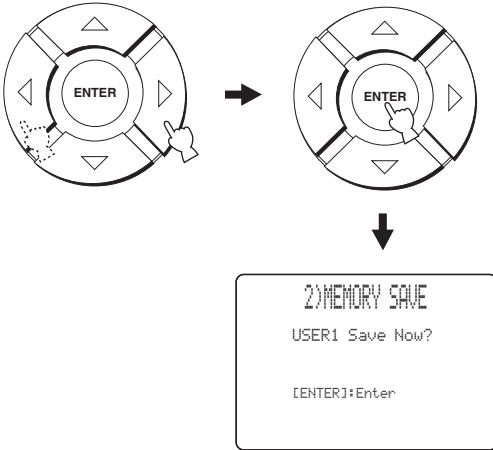

- 6 Press ENTER again.**

The new parameters are saved as USER1, USER2 or USER3. Once the parameters are saved, the display returns to the SET MENU screen.

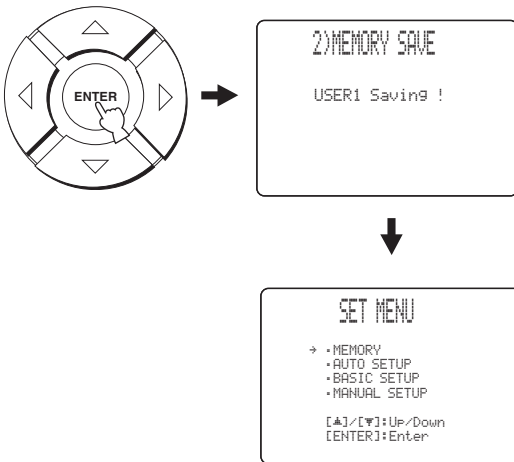

- 7 Press MENU to exit.**

The SET MENU screen disappears from your TV.



## Loading settings


You can recall the settings saved in “Saving settings” on page 34 according to the varying conditions of your listening environment.

- 1 Press YSP on the remote control to switch to the operation mode of this unit.**



- 2 Press MENU on the remote control.**


The SET MENU screen appears on your TV.

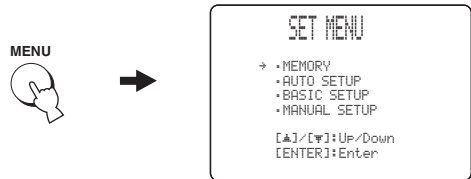

- The control buttons used for SET MENU are displayed on the bottom of the screen.
- To return to the previous screen while using SET MENU, press RETURN on the remote control.
- To resume cursor button operations after changing the control area by pressing an input selector button, press TEST on the remote control.
- To cancel the SET MENU screen, press MENU once more.
- You can also perform the following operations in the front panel display.
- If you press an input selector button during the SET MENU operations, the cursor buttons become ineffective. In this case, press TEST once.


- 3 Press  $\Delta$  /  $\nabla$  to select MEMORY and then press ENTER.**

The following screen appears on your TV.

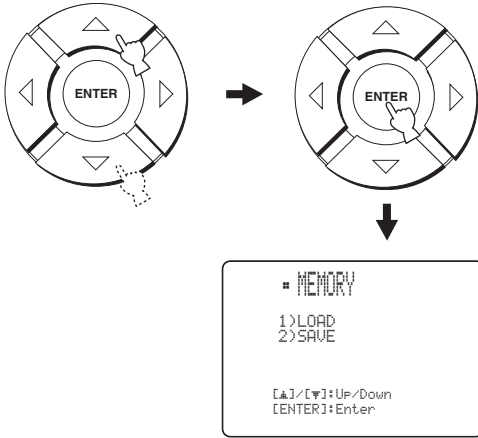


- 5 Press  $\leftarrow$  /  $\rightarrow$  to select USER1, USER2 or USER3 and then press ENTER.**

The following screen appears on your TV.

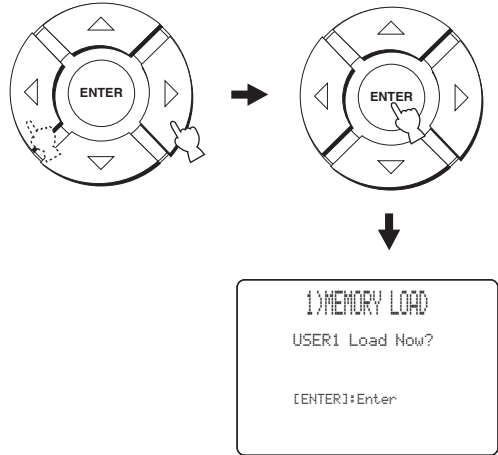


- 4 Press  $\Delta$  /  $\nabla$  to select LOAD and then press ENTER.**

The following screen appears on your TV.

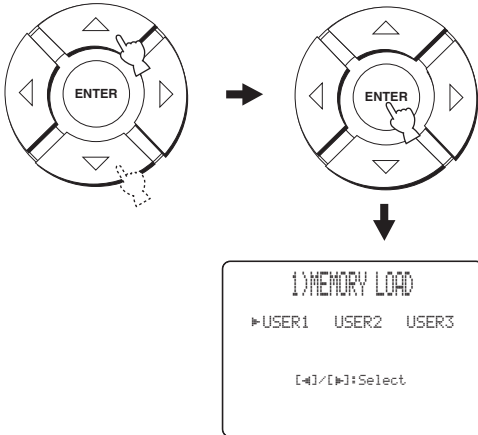

- 6 Press ENTER again.**

The new parameters are saved as USER1, USER2 or USER3. Once the parameters are saved, the display returns to the SET MENU screen.

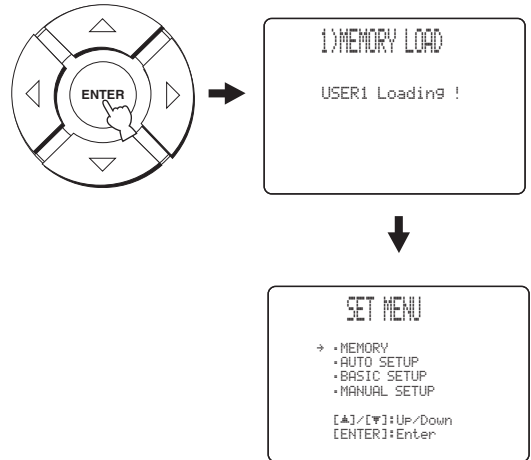

- 7 Press MENU to exit.**

The SET MENU screen disappears from your TV.






# PLAYBACK

## Selecting the input source

You can play back sound from the components connected to this unit simply by pressing INPUT on the front panel repeatedly or pressing one of the input selector buttons (TV, STB, VCR, DVD or AUX) on the remote control. The name of the selected input source and the type of the corresponding input mode appear in the front panel display.

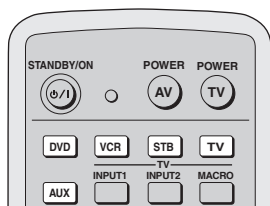


### ■ Front panel operations

Press **INPUT** on the front panel repeatedly to toggle between **TV, STB, DVD, VCR** and **AUX**.


The name of the corresponding input source and the type of the current input mode are shown in the front panel display.

### ■ Remote control operations


Press **TV** on the remote control to play back a **TV** program.

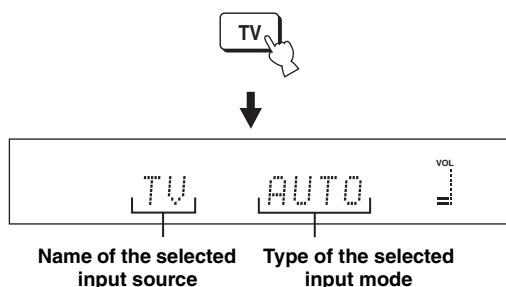

 Press **STB** on the remote control to play back a satellite broadcast.



 
Press **DVD** on the remote control to play back a DVD.



Press **VCR** on the remote control to play back a video tape.



 Press **AUX** on the remote control to play back a component connected to the AUX jack on the rear panel of this unit.



## Playing back sources

Once an input source is selected (see page 37), you can play back the selected input source.

### Note

This section uses a DVD player as an example of the playback source.



For details on the TV and the DVD player you are using, refer to the owner's manual supplied with the TV and the DVD player.

- 1 Turn on the power of your DVD player using the remote control supplied with the DVD player.
- 2 Switch to the video input on your TV using the remote control supplied with the TV so that the DVD menu screen is displayed.
- 3 If necessary, turn down the volume of your TV until you cannot hear any sound.
- 4 Press DVD on the remote control to select DVD as the input source.




- 5 Play back the DVD on your DVD player using the supplied remote control.

Audio signals from your DVD player are output from the speakers of this unit.



- If the output volume is too low, increase the volume on this unit to around  $-25$  dB.
- If you have set the appropriate remote control codes for your TV and DVD player, you can use the remote control supplied with this unit to operate these components. For details on how to set remote control codes, see page 82.



## Adjusting the volume

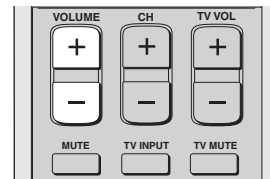


Press **VOLUME +/-** on the front panel or on the remote control to increase or decrease the volume level.

The numeric value of the volume level appears in the front panel display.

Control range: 0.0 dB to  $-99.5$  dB, MIN (minimum)

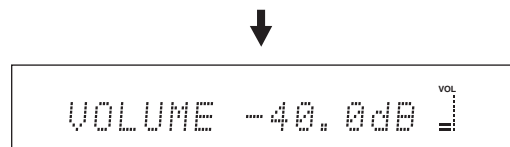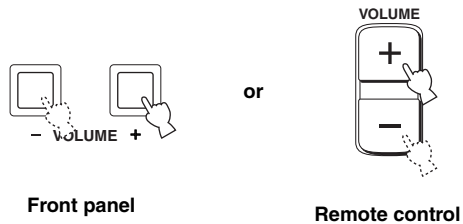

 
VOLUME MUTE appears at the minimum volume level.



### Notes


- The volume level of all input sources (including multi-channel as well as stereo sources) changes at the same time.
- 0.5 dB of the volume level increases or decreases each time you press VOLUME +/-.
- You can continuously increase or decrease the volume level if you press and hold VOLUME +/-.

## Muting the sound

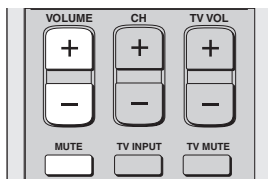


### 1 Press MUTE on the remote control to mute the sound.

AUDIO MUTE ON appears in the front panel display, and the volume level indicator flashes.

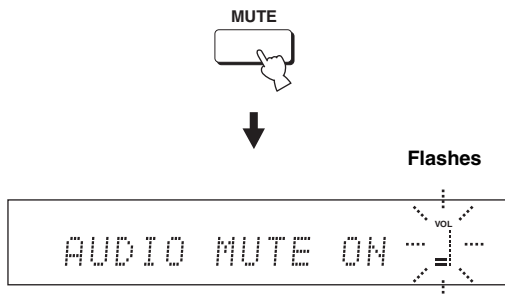

### 2 Press MUTE on the remote control again (or press VOLUME +/-) to resume the sound output.

AUDIO MUTE OFF appears temporarily in the front panel display (or the numeric value of the current volume level appears if you press VOLUME +/-), and the volume level indicator lights up.

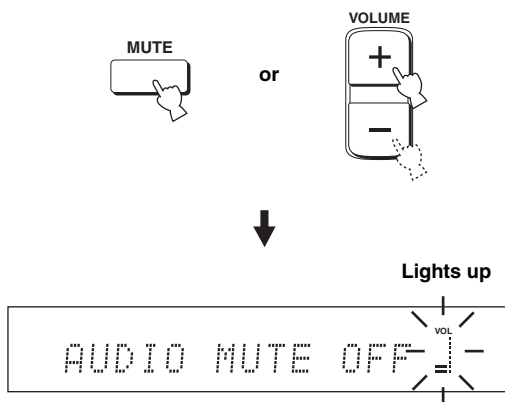

#### Note

The sound output of all input sources (including multi-channel as well as stereo sources) is muted at the same time.



You can select whether the sound output is to be muted completely or by 20 dB when you press MUTE (see page 70).

# BEAM MODE

You can change the beam mode to suit the input source of this unit using the beam mode buttons on the remote control (STEREO, 3BEAM, 5BEAM, ST+3BEAM or TARGET). Select stereo mode for 2-channel sources, 3 beam mode, 5 beam mode and stereo plus 3 beam mode for 5.1-channel playback.

All the beam modes are available in the following cases:

- If you selected Parallel to Wall for INSTALLING in AUTO SETUP (see page 30)
- If you selected settings other than CORNER RIGHT or CORNER LEFT for INSTALLED POSITION in BASIC SETUP (see page 59)
- If you selected FLAT TO WALL for INSTALLED POSITION in MANUAL SETUP (see page 65)

Only stereo, stereo plus 3 beam and target modes are available in the following cases:

- If you selected Angle to Wall or corner for INSTALLING in AUTO SETUP (see page 30)
- If you selected CORNER RIGHT or CORNER LEFT for INSTALLED POSITION in BASIC SETUP (see page 59)
- If you selected ANGLE TO WALL OR CORNER for INSTALLED POSITION in MANUAL SETUP (see page 65)

Beam mode	AUTO SETUP		BASIC SETUP		MANUAL SETUP	
	INSTALLING (see page 30)		INSTALLED POSITION (see page 59)		INSTALLED POSITION (see page 65)	
	Parallel to Wall	Angle to Wall or corner	CORNER RIGHT or CORNER LEFT	Other settings	FLAT TO WALL	ANGLE TO WALL OR CORNER
<b>STEREO</b>	Yes	Yes	Yes	Yes	Yes	Yes
<b>3BEAM</b>	Yes	No	No	Yes	Yes	No
<b>5BEAM</b>	Yes	No	No	Yes	Yes	No
<b>ST+3BEAM</b>	Yes	Yes	Yes	Yes	Yes	Yes
<b>TARGET</b>	Yes	Yes	Yes	Yes	Yes	Yes

## Note

Yes: the corresponding beam mode is available.


No: the corresponding beam mode is not available.



**1** Press YSP on the remote control to switch to the operation mode of this unit.




**2** Press one of the beam mode buttons to select the desired beam mode.

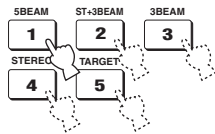

## 5 beam mode

Outputs sound beams from the front left and right, center, and surround left and right speakers. This mode is ideal for enjoying surround sound effects to the fullest when watching DVDs recorded in a multi-channel format or playing back 2-channel sources in a multi-channel format.

**Press 5BEAM on the remote control to select the 5 beam mode.**

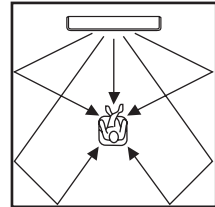



### Notes

- To achieve the best surround sound effect, make sure that there are no obstacles placed in the path of sound beams in that the objects may prevent the beams from rebounding directly off the walls in your listening room.
- The front left and right sound beams are output towards the walls in your listening room.

## Stereo plus 3 beam mode

Outputs sound beams from the front left and right, center, and surround left and right speakers. This mode is ideal for watching live recordings on a DVD. Vocals and instrumental sounds can be heard close to the center of the listening position while sound reflections from the venue itself can be heard on your right and left, giving you the feeling that you are sitting right in front of the stage.

**Press ST+3BEAM on the remote control to select the stereo plus 3 beam mode.**

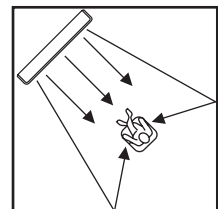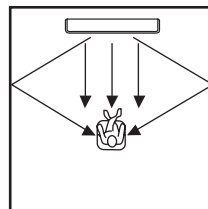


### Note

The front left and right sound beams are output directly to the listening position.

## 3 beam mode

Outputs sound beams from the front left and right and center speakers. This mode is ideal for enjoying movies with the whole family. Because the listening position area is widened, you can enjoy excellent quality surround sound over a wider area.

**Press 3BEAM on the remote control to select the 3 beam mode.**

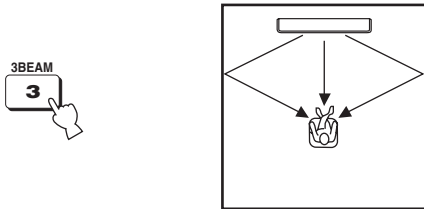

You can achieve a more realistic surround effect if you adjust settings for IMAGE LOCATION in BEAM MENU (see page 68).


### Notes

- When you play back multi-channel sources, surround left and right signals are mixed down and output from the front left and right speakers.
- The front left and right sound beams are output towards the walls in your listening room.

## Stereo mode

Outputs sound beams from the front left and right speakers in the 2-channel stereo mode. This mode is ideal for playing back hi-fi sources, such as CDs, and can be used to replace your TV speakers.

**Press STEREO on the remote control to select the stereo mode.**

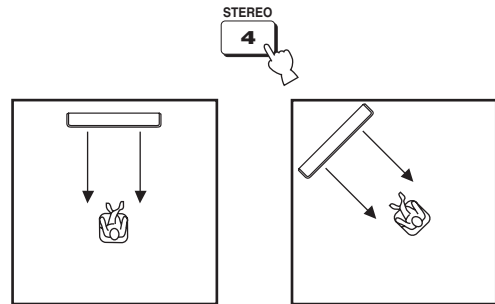


### Notes


- When you play back multi-channel sources, all signals except those for the front left and right speakers are mixed down and output from the front left and right speakers. No audio is output from the center and rear channels.
- The surround mode becomes disabled when the stereo mode is selected.
- When you play back Dolby Digital audio signals in the stereo mode, the dynamic range becomes compressed. If the volume level decreases to the extreme, use other beam modes except the target mode.
- If the stereo mode is selected as the beam mode, the surround modes (see page 44) and the CINEMA DSP programs (see page 49) become ineffective.

## Target mode

Outputs sound beams in a single channel. This mode is ideal if you do not want the sound beams to be reflected on the walls in your listening room or if you do not disturb others asleep while enjoying music or movies at night.

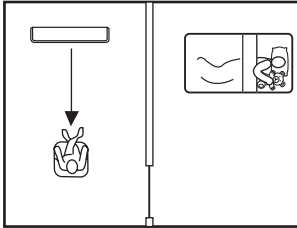




In addition, you can adjust the horizontal angle of the sound beams so that you can hear dialogues clearly even from a distant location such as the kitchen area in your listening room.

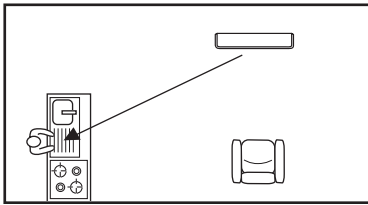

Press **TARGET** on the remote control to select the target mode and then press ◀ / ▶ to adjust the angle.

Control range: L90° to R90°

- Press ◀ repeatedly to increase the horizontal angle on the left side.
- Press ▶ repeatedly to increase the horizontal angle on the right side.

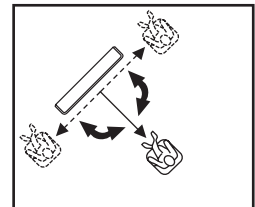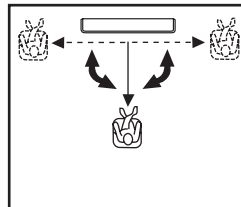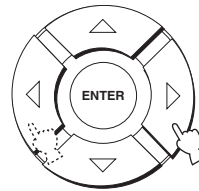

### Notes

- The sound beams are not rebounded off the walls in your listening room.
- If the target mode is selected as the beam mode, the surround modes (see page 44), the CINEMA DSP programs (see page 49) and the TruBass (see page 54) become ineffective. In addition, no audio is output from the subwoofer connected to this unit.

# ENJOYING SURROUND SOUND

## ■ Decoder indicators

Depending on the input source and the selected surround mode, the indicators in the front panel display light up as follows:

Status	Indicator
When PCM signals are being input	PCM
When DTS digital signals are being input or when DTS Neo:6 is selected	<b>dts</b>
When Dolby Digital signals are being input	<b>DIGITAL</b>
When Dolby Pro Logic is selected	<b>PL</b>
When Dolby Pro Logic II is selected	<b>PL II</b>



- You can select an input mode (AUTO, DTS or ANALOG) by pressing INPUTMODE on the remote control repeatedly (see page 81).
- Discs encoded in DTS-ES or Dolby Digital 5.1 EX will be played back in DTS or Dolby Digital.

## ■ Surround modes and recommended sources

Surround mode		Recommended source
Dolby Pro Logic	–	All sources
Dolby Pro Logic II	Movie Music Game	Movies Music Games
DTS Neo:6	Cinema Music	Movies Music

### Notes

- Surround modes are available when the beam mode is set to a setting other than the stereo or the target mode.
- When you select an input source (see page 37), the surround mode used for the previously selected input source is selected.
- If the power of this unit is turned off and on again, the surround mode used for the previously selected input source before the power was turned off is selected.
- The surround modes are available only when the CINEMA DSP programs are turned off (see page 51) or when the movie program is selected as the CINEMA DSP program (see page 50).
- Only Dolby Pro Logic, Dolby Pro Logic II Movie and DTS Neo:6 Cinema are available when the movie program is selected as the CINEMA DSP program (see page 50).
- If the surround modes are not available, “Prohibit” appears in the front panel display when you press SURROUND on the remote control.
- The surround modes are available only when 2-channel signals are being input. If you try to switch between the surround modes when 5.1 channel signals are being input, “Prohibit” appears in the front panel display.



## Enjoying 2-channel sources in surround sound

This unit can decode 2-channel sources for 5.1 channel playback so that you can enjoy a variety of surround sound effects by switching the surround mode.





The surround modes are available only when the CINEMA DSP programs are turned off (see page 51) or when the movie program is selected as the CINEMA DSP program (see page 50). In addition, the beam mode must be set to the 5 beam mode, the stereo plus 3 beam mode or the 3 beam mode (see page 40).



**1** Press YSP on the remote control to switch to the operation mode of this unit.



**2** Press SURROUND on the remote control repeatedly (or press SURROUND and then press ◀/▶) to switch between surround modes.

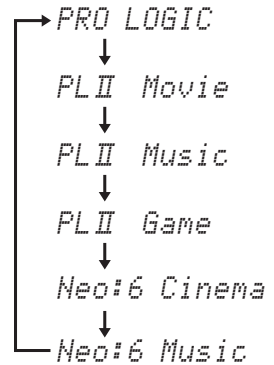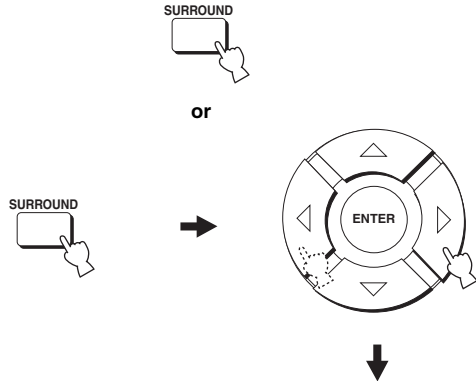


Example of the surround mode display in the front panel display when the CINEMA DSP program is turned off

## Enjoying TV in surround sound

You can enjoy analog audio signals output from your TV in real surround sound.



Before performing the steps below, set the volume of this unit to -40 dB. If necessary, adjust the volume level in step 4 below.

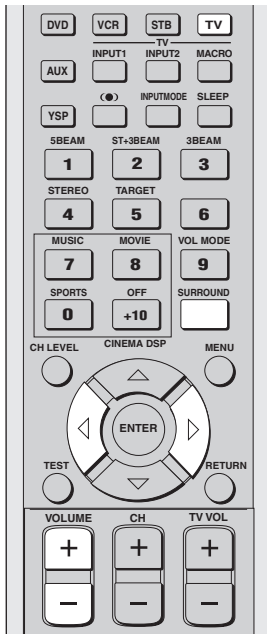

### 1 Select the TV channel you want to watch.

To select a TV channel, use the remote control supplied with your TV.

### 2 Press TV on the remote control.

 
This unit outputs audio signals from your TV.



### 3 If you hear sound from your TV speakers, reduce the volume level of your TV until you can no longer hear any audio being output.

To reduce the TV volume level, use the remote control supplied with your TV.

### 4 Press VOLUME +/- on the remote control to adjust the volume level.




### 5 Press SURROUND repeatedly (or press SURROUND and then press < / >) on the remote control to select a surround mode.

Signals input from 2-channel sources are played back on multiple channels.

For more information on surround modes, see page 44.




or

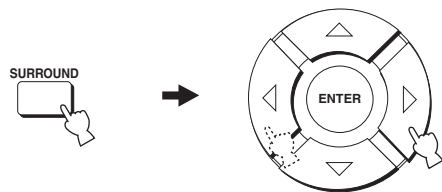

## Adjusting surround mode parameters

You can configure the parameters for Dolby Pro Logic II Music and DTS Neo:6 Music to fine-tune the surround sound effect.

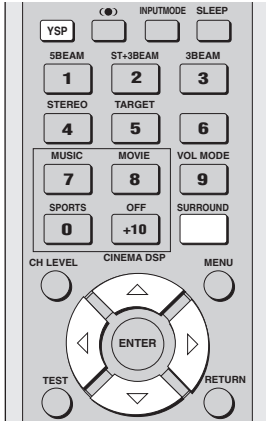



- 1 Press YSP on the remote control to switch to the operation mode of this unit.



- 2 Press SURROUND on the remote control repeatedly (or press SURROUND and then press  $\triangle/\nabla$ ) to select PL II Music or Neo:6 Music.




or

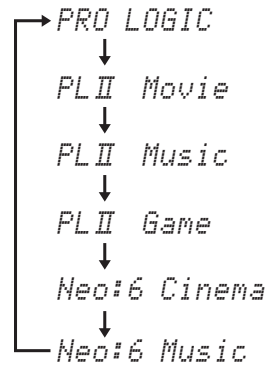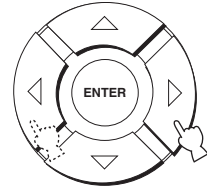


Example of the surround mode display in the front panel display when the CINEMA DSP program is turned off

- 3 Press  $\triangle/\nabla$  to select the parameter.

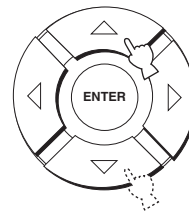

- 4 Press  $\triangle/\nabla$  to configure the parameter.

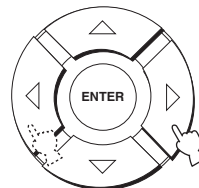

## ■ When Dolby Pro Logic II Music is selected

### **PANORAMA**

Gives front left and right channel sound a wraparound effect, distributed throughout the entire surround sound field to give you an expansive feeling.

Choices: ON/OFF

Default setting: OFF

### **DIMENSION**

Adjusts the difference in volume between front and surround channels to the volume balance you desire.

Control range: -3 (toward the surround direction) to +3 (toward the front direction)

Default setting: STD

### **CT WIDTH**

Distributes the center channel sound to the left and right. If set to 0, center channel sounds output only from the center speaker.

Control range: 0 to 7

Default setting: 3

## ■ When DTS Neo:6 Music is selected

### **C. IMAGE**

Adjusts the center image from three speakers (front and center) to varying degrees.

Control range: 0.0 (wider) to 1.0 (toward the center)

Default setting: 0.3

# USING SOUND FIELD PROGRAMS

This unit is equipped with a variety of precise digital decoders that allow you to enjoy multi-channel playback from stereo or multi-channel sources. This unit is also equipped with a YAMAHA CINEMA DSP (digital sound field processing) chip containing several sound field programs which you can use to enhance your playback experience. Most of the sound field programs are precise digital recreations of actual acoustic environments found in famous concert halls, music venues and movie theaters.



The YAMAHA CINEMA DSP modes are compatible with all Dolby Digital, DTS and Dolby Surround sources.

## **Note**

Choose a sound field program based on your listening preference and do not purely rely on the name of the sound field program itself.

## ***What is a sound field?***

A significant factor that creates the rich, full tones of a live instrument are the multiple reflections from the walls of the room. In addition to making the sound live, these reflections enable the listener to tell where the player is situated as well as the size and shape of the room in which the listening is sitting.

### **■ Elements of a sound field**

In any environment, there are two distinct types of sound reflections that combine with the direct sound coming straight to our ears from the player's instrument to make up the sound field.

#### **Early reflections**

Reflected sounds reach our ears extremely rapidly (50 ms to 100 ms after the direct sound) after reflecting from one surface only (from the ceiling or a wall, for example). Early reflections help add clarity to the direct sound.

#### **Reverberations**

These are caused by reflections from more than one surface (i.e. wall, ceiling, the back of the room, etc.) so numerous that they merge together to form a continuous sonic afterglow. They are non-directional and lessen the clarity of the direct sound.

Direct sound, early reflections and subsequent reverberation taken together help us to determine the subjective size and shape of the room, and it is this information that the digital sound field processor reproduces in order to create sound fields.


If you could create the appropriate early reflections and subsequent reverberations in your listening room, you would be able to create your own listening environment. The acoustics in your room could be changed to those of a concert hall, a dance floor or a listening room of virtually any size at all. This ability to create sound fields at will is exactly what YAMAHA has done with the CINEMA DSP technology.

## Turning on CINEMA DSP programs

You can select from three different sound field programs (MUSIC, MOVIE and SPORTS) depending on the type of sources you want to enjoy.

### Notes

- The CINEMA DSP programs are not available if the stereo mode (see page 42) or the target mode (see page 43) is selected as the beam mode.
- If the CINEMA DSP programs are not available, “Prohibit” appears in the front panel display when you press one of the sound field program buttons on the remote control.

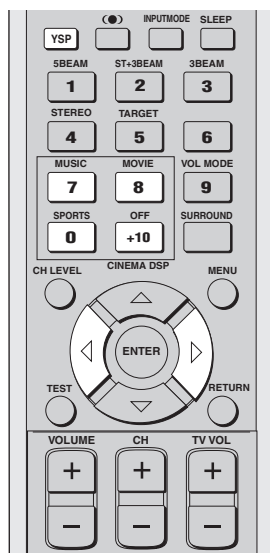

### ■ Music program

Select this sound field program when you play music sources. This program produces a vibrant atmosphere and lets you feel as if you are seated in an actual rock or jazz concert hall.

- 1 Press **YSP** on the remote control to switch to the operation mode of this unit.



- 2 Press **MUSIC** on the remote control to select the music sound field program.



### ■ Movie program

Select this sound field program when you play movie sources, especially the ones encoded in Dolby Digital, DTS or Dolby Surround. This program clearly reproduces dialog and sound effects, thus creating a broad and expansive cinematic space amid silence.

- 1 Press **YSP** on the remote control to switch to the operation mode of this unit.



- 2 Press **MOVIE** on the remote control to select the movie sound field program.



### ■ Sports program

Select this sound field program when you play sports sources. This program densely concentrates the vocal sound of the commentator in the center while broadening the sound from the audience or the environment all around your listening room.

- 1 Press **YSP** on the remote control to switch to the operation mode of this unit.



- 2 Press **SPORTS** on the remote control to select the sports sound field program.



## Turning off CINEMA DSP programs

Turn off the CINEMA DSP programs if you want to enjoy the original sound without the sound field program effect.

- 1 Press **YSP** on the remote control to switch to the operation mode of this unit.



- 2 Press **OFF** on the remote control to turn off the sound field programs.



## Adjusting CINEMA DSP levels

You can enjoy good quality sound with the factory preset parameters. However, you can also adjust the effect level of the CINEMA DSP programs relative to the level of the direct sound so that each sound field program can reflect your listening environment and your preference even more accurately.

 
- 1 Press **YSP** on the remote control to switch to the operation mode of this unit.




- 2 Press **MUSIC**, **MOVIE** or **SPORTS** on the remote control to select the desired sound field program.



- 3 Press **△ / ▽** on the remote control. DSP LEVEL is shown in the front panel display.



- 4 Press **◀ / ▶** on the remote control to adjust the effect level of the CINEMA DSP programs.

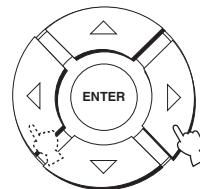

Control range: -6 dB to +3 dB

- A larger value increases the effect level.
- A smaller value decreases the effect level.

# USING THE VOLUME MODE

The night listening modes are designed to improve listenability at lower volumes or at night. In addition, you can limit the volume level of the TV so that it will not vary suddenly to a great extent whenever the contents being broadcast change (i.e. due to commercials, etc.).



- 1 Press YSP on the remote control to switch to the operation mode of this unit.**



- 2 Press VOL MODE on the remote control to switch to the volume mode.**

The NIGHT indicator lights up in the front panel display.





- 3 Press VOL MODE on the remote control repeatedly to select NIGHT:CINEMA, NIGHT:MUSIC, TV EQUAL VOL or NIGHT OFF.**



- Select NIGHT:CINEMA when watching films to reduce the dynamic range of film soundtracks and make dialog easier to hear at lower volumes.
- Select NIGHT:MUSIC when listening to music sources to preserve ease-of-listening for all sounds.
- Select TV EQUAL VOL when watching TV programs.
- Select NIGHT OFF to turn off the night listening modes.



- 4 Press  $\triangleleft/\triangleright$  on the remote control to adjust the effect level of compression while NIGHT:CINEMA, NIGHT:MUSIC or TV EQUAL VOL is displayed.

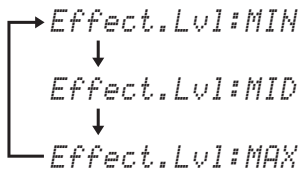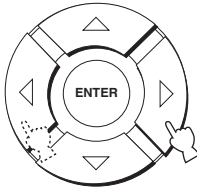

- Select Effect.Lvl:MIN for minimum compression.
- Select Effect.Lvl:MID for standard compression.
- Select Effect.Lvl:MAX for maximum compression.

#### Note


The volume mode settings are canceled if you press STANDBY/ON on the front panel or on the remote control or if you disconnect the power supply cable from the AC wall outlet.

# USING TruBass

This unit can produce the perception of an improved low frequency performance with the aid of the SRS TruBass technology, which improves bass even without a subwoofer and provides deeper, richer bass in the presence of a subwoofer.


## Note

The TruBass is not available when the target mode is selected as the beam mode (see page 43).

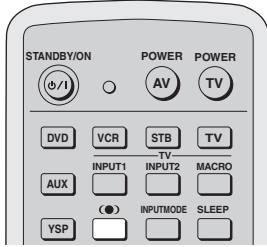


### 1 Press on the remote control.

 The current setting (TruBass ON or TruBass OFF) is shown in the front panel display.





or

 



### 2 Press on the remote control repeatedly to turn on SRS TruBass.

  TruBass ON is shown in the front panel display.



### 3 Press on the remote control repeatedly to turn off SRS TruBass.

  
TruBass OFF is shown in the front panel display.




# USING THE SLEEP TIMER

Use this feature to automatically set this unit to the standby mode after a specified time period. The sleep timer is useful if you are going to sleep after a certain amount of time while this unit is still playing back a source.

## Setting the sleep timer

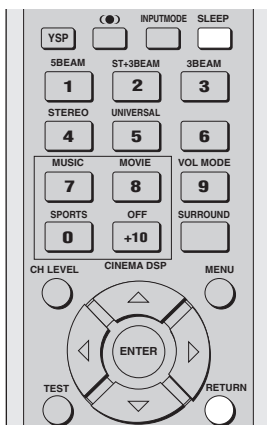


Each time you press SLEEP on the remote control, the front panel display changes as shown below.

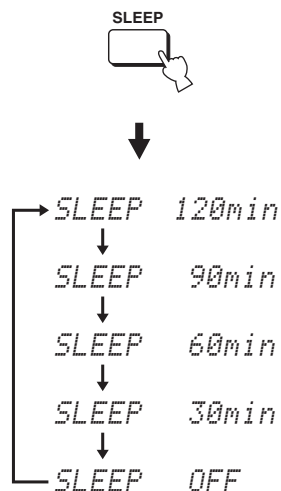


- 1 Press SLEEP on the remote control repeatedly to set the amount of time for the sleep timer.

Choices: 120 min, 90 min, 60 min, 30 min, OFF  
The SLEEP indicator in the front panel display flashes while switching the amount of time for the sleep timer.

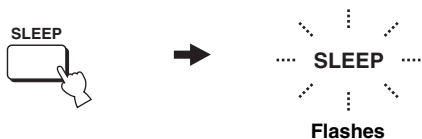


- 2 Wait for a few seconds without operating this unit to confirm the setting for the sleep timer.

The SLEEP indicator lights up in the front panel display, indicating that the sleep timer is activated.

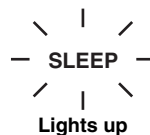

## Canceling the sleep timer

 - 1 Press **SLEEP** on the remote control repeatedly so that **SLEEP OFF** appears in the front panel display.



- 2 Wait for a few seconds without operating this unit to confirm the setting for the sleep timer. The **SLEEP** indicator disappears from the front panel display, indicating that the sleep timer is deactivated.

**SLEEP**  
Disappears

### Note

The previous setting for the sleep timer before you deactivate it is stored in the system memory and automatically restored when you make a new setting next time.



The sleep timer setting can also be deactivated if you press **STANDBY/ON** on the front panel or on the remote control to set this unit to the standby mode or unplug the power cable from the AC outlet.

# BASIC SETUP


If you cannot run AUTO SETUP successfully or if an error occurs during the AUTO SETUP procedure, you can use BASIC SETUP to individually set the parameters of this unit in the following order:

- 1) ROOM TYPE (Room type)
- 2) INSTALLED POSITION (Installed position of this unit)
- 3) ROOM SIZE (Room size)

- You can save the settings optimized by the AUTO SETUP procedure (see page 34). A set of settings optimized according to specific conditions of your listening environment can be recalled later depending on the varying conditions of your listening environment (see page 35).
- In order to fine-tune the listening environment parameters, as well as to make advanced settings for speaker positions, sound beams, digital input and the OSD, see MANUAL SETUP (see page 63).
- Items with an asterisk (\*) appearing next to them may be displayed differently on your screen depending on your individual settings.

## Note

Each listening environment parameter must be set before the next parameter in order is set.

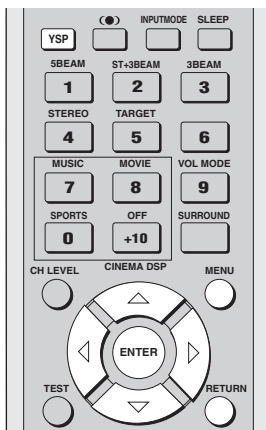

## ■ Displaying the SET MENU screen

- 1 Press YSP on the remote control to switch to the operation mode of this unit.**




- 2 Press MENU on the remote control.**  
The SET MENU screen appears on your TV.



- The control buttons used for SET MENU are displayed on the bottom of the screen.
- To return to the previous screen while using SET MENU, press RETURN on the remote control.
- To resume cursor button operations after changing the control area by pressing an input selector button, press TEST on the remote control.
- To cancel the SET MENU screen, press MENU once more.
- You can also perform the following operations in the front panel display.
- If you press an input selector button during the SET MENU operations, the cursor buttons become ineffective. In this case, press TEST once.

- 3 Press ▲ / ▼ to select BASIC SETUP and then press ENTER.**

The following screen appears on your TV.

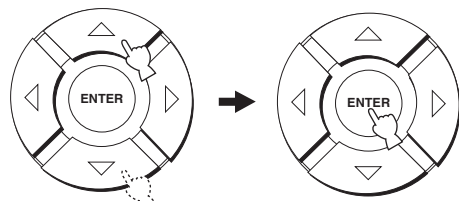


■ ROOM TYPE (Room type)

4 Check that the following screen is displayed on your TV.


If this screen is not displayed, repeat steps 1 to 3.



5 Press ENTER.

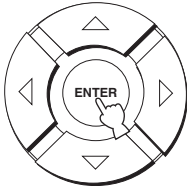

6 Press ◀ / ▶ to switch between the SQUARE and RECTANGLE selection screens and then press ENTER to select the desired setting.

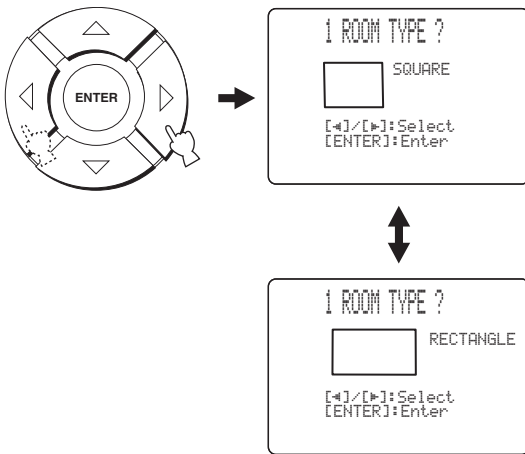


- Select SQUARE if the shape of your listening room is nearest to a square.
- Select RECTANGLE if the shape of your listening room is nearest to a rectangle.



If the shape of your listening room is irregular, select the shape that most closely resembles your room. In Example 1, the shape that best describes the listening room is RECTANGLE. In Example 2, it is SQUARE.

Example 1:  
Rectangular room

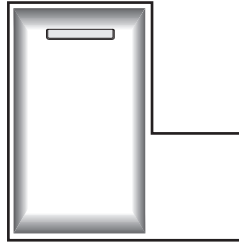


Example 2:  
Square room



7 Press ENTER to confirm the setting for the room type.

The following screen appears in the front panel display.

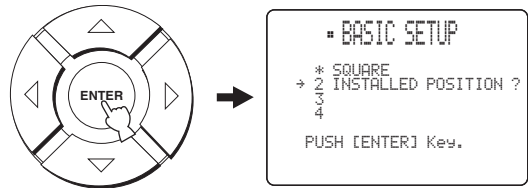

**8 INSTALLED POSITION**  
(Installed position of this unit)


**8 Check that the following screen is displayed on your TV.**

If this screen is not displayed, make settings for ROOM TYPE.



**If RECTANGLE is selected for ROOM TYPE**

Select WIDE LEFT, WIDE CENTER, WIDE RIGHT, CORNER RIGHT, CORNER LEFT, NARROW LEFT, NARROW CENTER or NARROW RIGHT that best matches the installed position of this unit in your listening room.

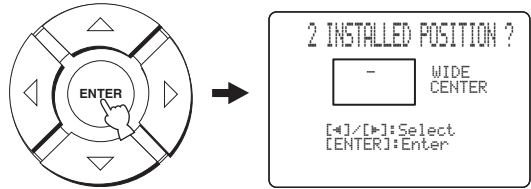


**9 Press ENTER.**

If you selected SQUARE for ROOM TYPE (see page 58), four different installed position types in a square room are displayed.

If you selected RECTANGLE, eight different installed position types in a rectangular room are displayed.





**If SQUARE is selected for ROOM TYPE**

Select LEFT, CENTER, RIGHT or CORNER that best matches the installed position of this unit in your listening room.

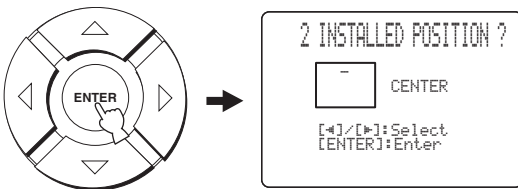


**LEFT**  
(Left)

**CENTER**  
(Center)

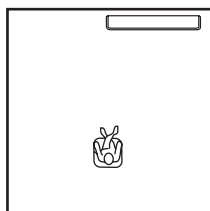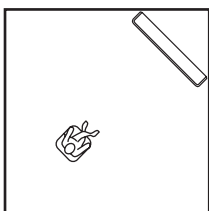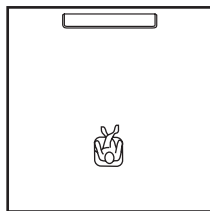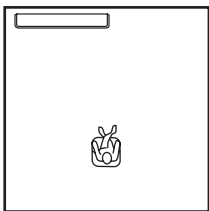


**CORNER**  
(Corner left or right)

 
**RIGHT**  
(Right)



**WIDE LEFT**  
(Wide wall left)

 


**WIDE CENTER**  
(Wide wall center)

 


**WIDE RIGHT**  
(Wide wall right)



 
**CORNER RIGHT**  
(Corner right)




**CORNER LEFT**  
(Corner left)

 

**NARROW LEFT**  
(Narrow wall left)

 

 
**NARROW CENTER**  
(Narrow wall center)



**NARROW RIGHT**  
(Narrow wall right)

- 10** Press  $\triangleleft / \triangleright$  to select the installed position type that best suits the installed position of this unit in your listening room and then press **ENTER**.

The following screen appears in the front panel display.

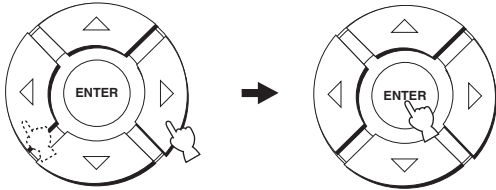

**ROOM SIZE (Room size)**

- 11** Check that the following screen is displayed on your TV.





If this screen is not displayed, make settings for **INSTALLED POSITION**.



- 12** Press **ENTER**.



Three different room sizes (**SMALL**, **MID** or **LARGE**) are displayed for both **SQUARE** and **RECTANGLE**.

**If SQUARE is selected for ROOM TYPE**

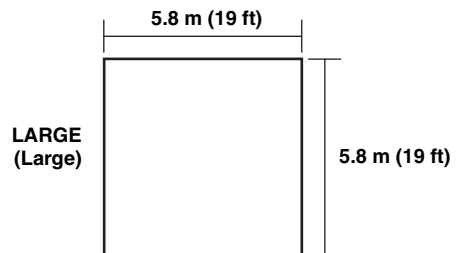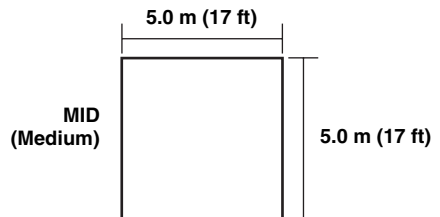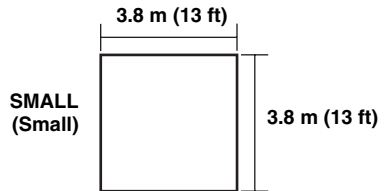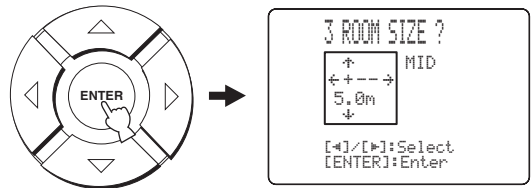




If **RECTANGLE** is selected for **ROOM TYPE**

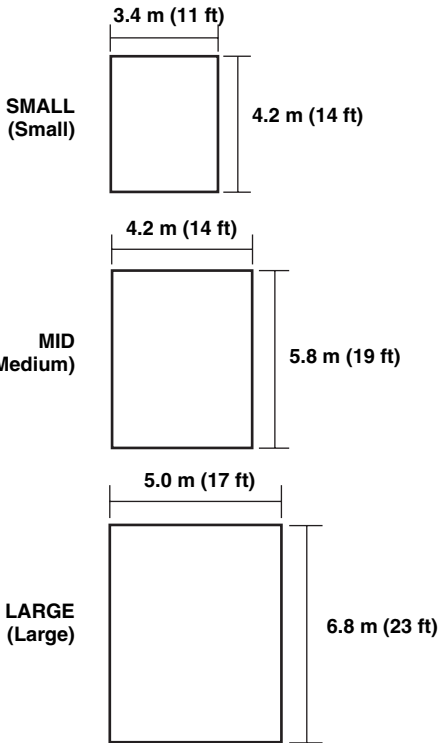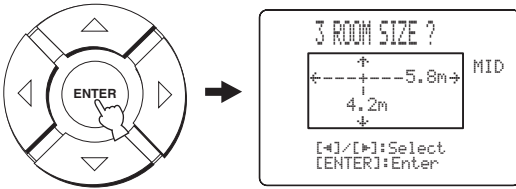

**13** Press **←/→** to select the room size that best suits your listening room and then press **ENTER**.

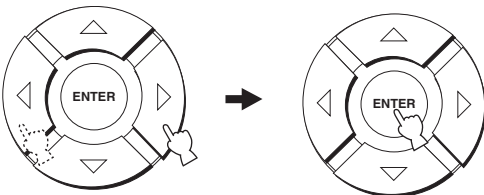

**■ SETUP OK (Confirming settings)**


**14** Check that the following screen is displayed on your TV.

If this screen is not displayed, make settings for **ROOM SIZE**.




**15** Press **ENTER**.

The following screen appears in the front panel display.

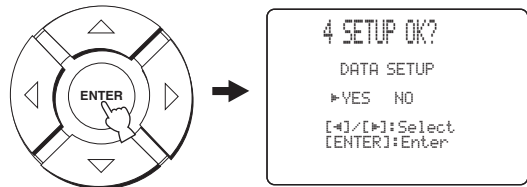

**16** Press ◀/▶ to select YES or NO and then press ENTER.

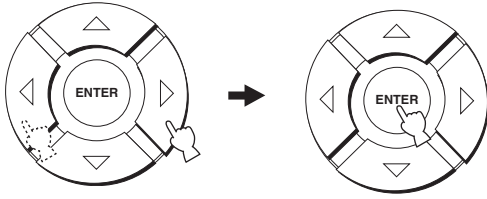

- Select YES to register the settings if they are satisfactory. The following screen appears, and your BASIC SETUP settings are registered.



- Select NO to cancel the settings and return to the initial SET MENU screen.



**17** Press MENU to complete the BASIC SETUP procedure.

The SET MENU display disappears from your TV screen.



This completes the parameter settings for BASIC SETUP. To select a playback source and enjoy surround sound on this unit, see “PLAYBACK” on page 37.

# MANUAL SETUP

To achieve the best quality surround sound, you can use MANUAL SETUP to fine-tune the listening environment parameters, as well as to make advanced settings for speaker positions, sound beams, digital input and the OSD. Change the initial settings (indicated in bold under each parameter) to reflect the needs of your own listening environment.



- You can save the settings optimized by the AUTO SETUP procedure (see page 34). A set of settings optimized according to specific conditions of your listening environment can be recalled later depending on the varying conditions of your listening environment (see page 35).
- Most of the parameters in SOUND MENU and BEAM MENU are automatically set when you run AUTO SETUP (see page 26). Use SOUND MENU and BEAM MENU to make additional adjustments.
- BEAM MENU allows you to make settings for the surround sound effects normally available in the speaker settings menu.
- Make settings for the parameters in BEAM MENU first before you make settings for the parameters in SOUND MENU, INPUT MENU and DISPLAY MENU.

## SOUND MENU

Use to manually adjust various parameters related to the sound output.

Item	Features	Page
<b>TONE CONTROL</b>	Adjusts the output level of high-frequency or low-frequency sound.	69
<b>BEAM LEVEL</b>	Adjusts the output level of each beam.	69
<b>SUBWOOFER SET</b>	Adjusts the various subwoofer settings.	70
<b>MUTE LEVEL</b>	Adjusts the muting level.	70
<b>AUDIO DELAY</b>	Adjusts audio delay.	70
<b>ROOM EQ</b>	Adjusts the tonal quality of the listening room.	70
<b>DD/DTS Dynamic Range</b>	Adjusts the dynamic range of Dolby Digital or DTS signals.	71

## BEAM MENU

Use to manually adjust various parameters related to the sound beam output.

Item	Features	Page
<b>SETTING PARAMETERS</b>	Adjusts listening room and listening position settings.	65
<b>BEAM ADJUSTMENT</b>	Adjusts various beam settings.	66
<b>IMAGE LOCATION</b>	Adjusts the position of the front left and right speakers.	68

## INPUT MENU

Use to manually adjust various parameters related to the audio and video input.

Item	Features	Page
<b>INPUT ASSIGNMENT</b>	Assigns jacks according to the component to be used.	71
<b>INPUT MODE</b>	Selects the initial input of the source.	72
<b>INPUT TRIM</b>	Adjusts the input level of the source.	72
<b>INPUT RENAME</b>	Renames the displayed input source.	72

## DISPLAY MENU

Use to manually adjust various parameters related to the display.

Item	Features	Page
<b>DIMMER SET</b>	Adjusts the brightness of the display.	73
<b>OSD SET</b>	Adjusts the display position and the background color of the OSD.	74
<b>UNIT SET</b>	Changes the display unit of measurement.	74

## Using MANUAL SETUP

Use the remote control to access and adjust each parameter.



You can adjust the SET MENU parameters while the unit is reproducing sound.

- 1 Press **YSP** on the remote control to switch to the operation mode of this unit.



- 2 Press **MENU** on the remote control.



The SET MENU screen appears on your TV.




- The control buttons used for SET MENU are displayed on the bottom of the screen.
- To return to the previous screen while using SET MENU, press RETURN on the remote control.
- To resume cursor button operations after changing the control area by pressing an input selector button, press TEST on the remote control.
- To cancel the SET MENU screen, press MENU once more.
- You can also perform the following operations in the front panel display.
- If you press an input selector button during the SET MENU operations, the cursor buttons become ineffective. In this case, press TEST once.

- 3 Press **▲ / ▼** to select **MANUAL SETUP** and then press **ENTER**.


The following screen appears on your TV.

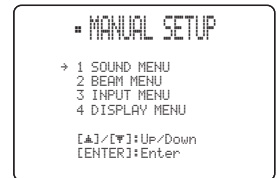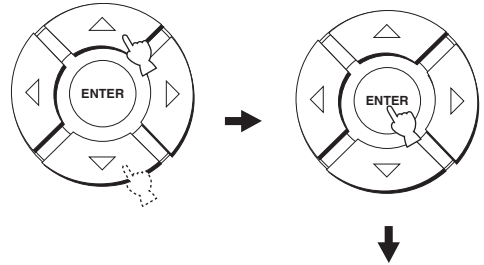

- 4 Press **▲ / ▼** to select a sub menu and then press **ENTER**.

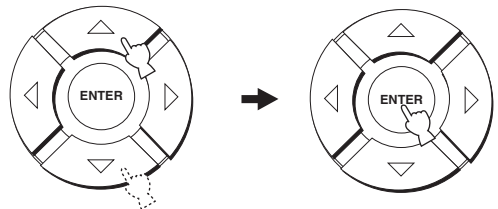

- 5 Press **▲ / ▼ / ◀ / ▶** and **ENTER** to configure each parameter.

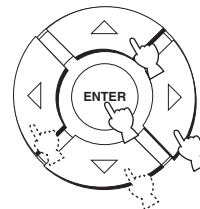

- 6 Press **MENU** to exit.

The OSD disappears from your TV screen.



## BEAM MENU

Use to manually adjust various parameters related to the sound beam output.

SET MENU → MANUAL SETUP → BEAM MENU



### SETTING PARAMETERS (Setting parameters)

Use to set the position of this unit in your listening room and the distance of this unit from the listening position. When you make settings for each parameter, other related parameters are automatically adjusted to best match your listening environment.

#### Note

If you make adjustments in SETTING PARAMETERS, the beam optimization settings made in the AUTO SETUP procedure will be lost. If you want to keep the beam optimization settings made in the AUTO SETUP and make further adjustments, adjust settings in BEAM ADJUSTMENT first (see page 66).




### INSTALLED POSITION (Installed position of this unit)


Use to adjust the installed position of this unit.

Choices: **FLAT TO WALL** (Parallel to wall installation), **ANGLE TO WALL OR CORNER** (Corner installation)


FLAT TO WALL

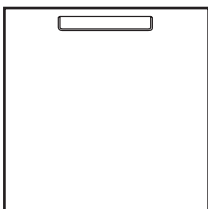

ANGLE TO WALL OR CORNER

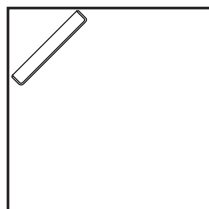

- Select **FLAT TO WALL** if this unit is installed in parallel with the wall in your listening room. Adjust the width and length of your listening room as well as the distance of the listening position from this unit and the distance of the center of this unit from the left wall.

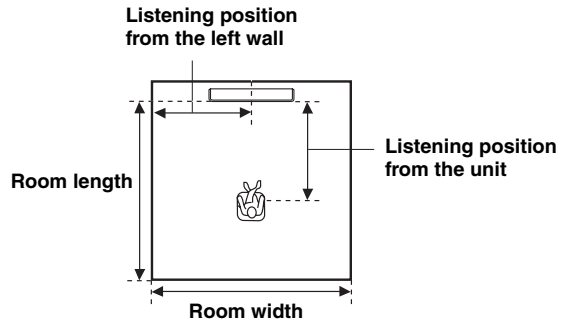

Choices for the room width and length:

2.0 m to 12.0 m (6.5 ft to 40.0 ft)


Choices for the listening position from this unit:

2.0 m to 9.0 m (6.5 ft to 30.0 ft)


Choices for the listening position from the left wall:

0.6 m to 11.4 m (2.0 ft to 38.0 ft)


Room width and length

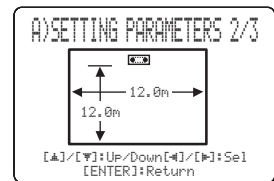


Listening position from the unit and the left wall

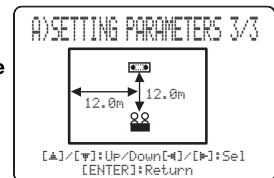

- Select ANGLE TO WALL OR CORNER if this unit is installed in the corner in your listening room. Adjust the width and length of your listening room as well as the distance of the listening position from this unit and the distance of the center of this unit from the left wall.

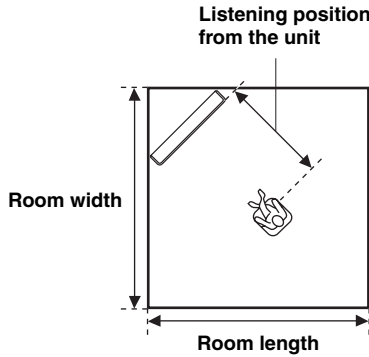

- Choices for the room width and length:  
2.0 m to 12.0 m (6.5 ft to 40.0 ft)
- Choices for the listening position from this unit:  
2.0 m to 9.0 m (6.5 ft to 30.0 ft)
- Choices for the listening position from the left wall:  
0.6 m to 11.4 m (2.0 ft to 38.0 ft)

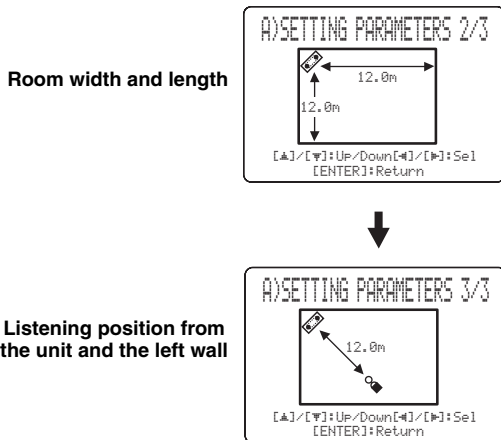

**Note**


When you set the INSTALLED POSITION parameter in BASIC SETUP (see page 59) or MANUAL SETUP (see page 65), the parameters newly set for the width and length of your listening room are automatically set as the factory default value.

**BEAM ADJUSTMENT (Beam adjustment)**

Use to manually adjust the various speaker beam angles. We recommend that you select 5 beam mode before adjusting these parameters.


**Notes**

- When INSTALLED POSITION is adjusted in BASIC SETUP (see page 59) or MANUAL SETUP (see page 65), the factory default value is automatically set for this parameter except when FOCAL LENGTH is set to CENTER (see page 67).
- Depending on the beam mode settings (see page 40), some speaker positions may not be available for selection. In this case, “- -” is displayed. When using the stereo plus 3 beam mode, set the surround left and right signals to be output from the front left and right speakers.

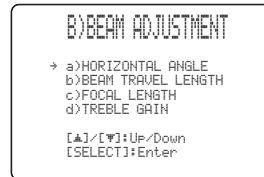


**HORIZONTAL ANGLE (Horizontal angle)**

Use to adjust the horizontal angle of beams for each speaker. By adjusting the horizontal angle of the beams, you can optimize the sound beam paths. A test tone is automatically output.

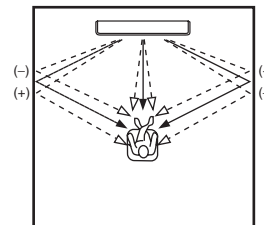

Choices: L90° to R90°


Adjust towards L (left) to move the direction of the output to the left and adjust towards R (right) to move it to the right.

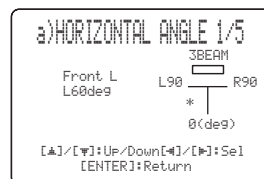

### BEAM TRAVEL LENGTH (Beam travel length)

Use to set the distance that sound beams travel after being output and reflected off the wall until they arrive at the listening position for each speaker.

The lines in the illustration below indicate the distance.

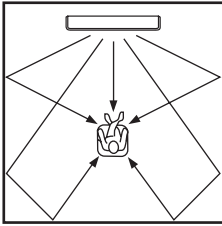

Choices: 0.3 m to 24.0 m (1.0 ft to 80.0 ft)


- **Front L** adjusts the distance the front left speaker sound beams travel.
- **Front R** adjusts the distance the front right speaker sound beams travel.
- **Center** adjusts the distance the center speaker sound beams travel.
- **Surround L** adjusts the distance the surround left speaker sound beams travel.
- **Surround R** adjusts the distance the surround right speaker sound beams travel.

```

b)BEAM TRAVEL LENGTH
      3Beam
→ Front L.....7.1m
  Front R.....7.1m
   Center.....3.0m
  Surround L...10.0m
  Surround R...10.0m
[▲]/[▼]:Up/Down[◀]/[▶]:Sel
[ENTER]:Return
    
```

### FOCAL LENGTH (Focal length)

Use to set the distance from the front of this unit to the focal point of output for each speaker.

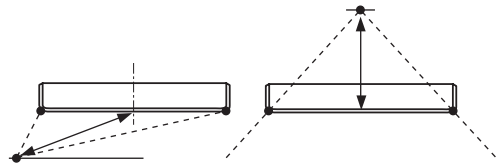

Choices: -1.0 m to +13.0 m (-3.5 ft to +43.5 ft)

Adjust towards - (minus) to move the focus outward and adjust towards + (plus) to move the focus towards the normal position.

- **Front L** adjusts the focal length for the front left sound beams.
- **Front R** adjusts the focal length for the front right sound beams.
- **Center** adjusts the focal length for the center sound beams. Initial setting: -0.5 m (-1.5 ft)
- **Surround L** adjusts the focal length for the surround left sound beams.
- **Surround R** adjusts the focal length for the surround right sound beams.



We recommend that you use the initial setting (-0.5 m) for the center speaker.

```


c)FOCAL LENGTH
      3Beam
→ Front L.....+6.0m
  Front R.....+6.0m
   Center.....-1.0m
  Surround L...+13.0m
  Surround R...+13.0m
[▲]/[▼]:Up/Down[◀]/[▶]:Sel
[ENTER]:Return
    
```

### TREBLE GAIN (Treble gain)

Use to adjust the high frequency output level of each speaker.



If the reflection point of the front left and right or surround left and right sound beams is a curtain or other acoustically absorbent surface, you can achieve more effective surround sound by increasing the treble level for those sound beams.

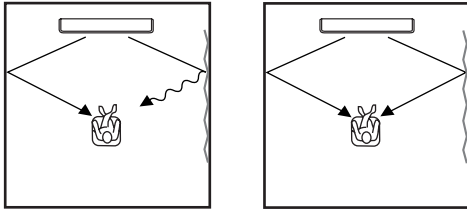

Choices: -12.0 dB to +12.0 dB

Initial setting: 0 dB

- **FL** adjusts the high frequency output level of the front left speaker.
- **FR** adjusts the high frequency output level of the front right speaker.
- **C** adjusts the high frequency output level of the center speaker.
- **SL** adjusts the high frequency output level of the surround left speaker.
- **SR** adjusts the high frequency output level of the surround right speaker.



### IMAGE LOCATION (Image location)

Use to adjust the direction from which the front left and right speaker sound is heard by directing these audio signals so that they are also output from the center speaker.


Use this feature to redirect audio signals if the sound coming from the left and right speakers seems unnatural, such as when your listening position is not the center of your listening room.

You can only adjust this parameter when 3 beam mode or 5 beam mode is selected as the beam mode (see page 42).

Choices: ON, OFF

Setting range: 0% to 95%

Initial setting: 0%

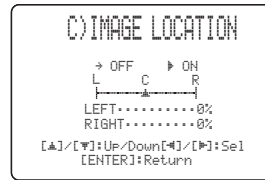


#### LEFT (Left)


Adjusts audio signals towards the left.

The higher the percentage, the louder the output from the center.

Without adjustment

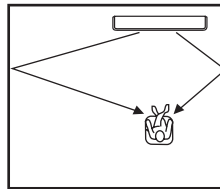

With the front left speaker adjusted

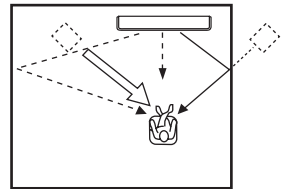


#### RIGHT (Right)


Adjusts audio signals towards the right.

The higher the percentage, the louder the output from the center.

Without adjustment

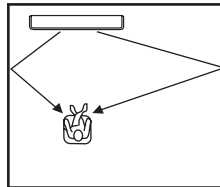

With the front right speaker adjusted

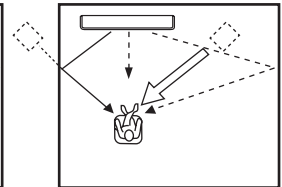




## SOUND MENU


Use to manually adjust various parameters related to the sound output.

SET MENU → MANUAL SETUP → SOUND MENU

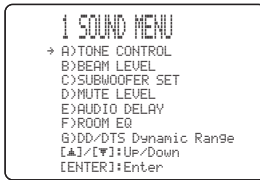

### ■ TONE CONTROL (Tone control)

You can adjust the tonal quality of your speakers.

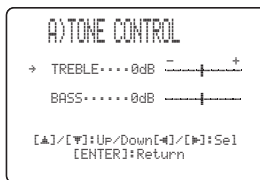

#### TREBLE (Treble)

Use to adjust the high frequency response.

Choices: -12 dB to +12 dB

Initial setting: 0 dB

#### BASS (Bass)

Use to adjust the low frequency response.

Choices: -12 dB to +12 dB

Initial setting: 0 dB

### ■ BEAM LEVEL (Beam level)


Use to manually balance the speaker levels between the front left or surround left speakers and each speaker selected.

When setting the front right, center or surround left speakers or the subwoofer, the test tone is output from the front left speakers and the selected speaker position.

When setting the surround right speaker, the test tone is output alternately from the surround left and right speakers.

The factory default value is automatically set for this parameter depending on the parameters set in AUTO SETUP, BASIC SETUP or ROOM EQ in MANUAL SETUP.


Depending on the beam mode settings, some channels may not be available for selection. In this case, NONE is displayed.

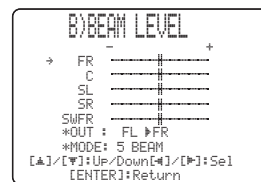

- **FR** adjusts the balance of the front left and front right speakers.
- **C** adjusts the balance of the front left and center speakers.
- **SL** adjusts the balance of the front left and surround left speakers.
- **SR** adjusts the balance of the surround left and surround right speakers.
- **SWFR** adjusts the balance of the front left speaker and subwoofer.

■ **SUBWOOFER SET (Subwoofer set)**

Use to manually adjust various subwoofer settings.

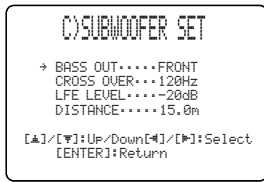

**BASS OUT (Bass out)**

Low-frequency (bass) signals can be directed to the subwoofer or the front left and right speaker positions. This setting also determines the routing of LFE (low-frequency effect) signals found in Dolby Digital or DTS sources.

Choices: SWFR (subwoofer), **FRONT**

- Select SWFR if you connect a subwoofer. LFE and low-frequency signals from other channels are directed to the subwoofer according to the speaker settings.
- Select FRONT if you do not use a subwoofer. LFE and low-frequency signals from other channels are directed to the front speakers according to the speaker settings (even if you have previously set the front speakers to SMALL).

**CROSS OVER (Cross over)**

When BASS OUT is set to SWFR, you can use this feature to select a cross-over (cut-off) frequency for all low-frequency signals. All frequencies below the selected frequency will be sent to the subwoofer speaker position.

Choices: 80Hz, **100Hz**, 120Hz

**LFE LEVEL (Low-frequency effect level)**

Select to adjust the output level of the LFE (low-frequency effect) channel according to the capacity of your subwoofer. The LFE channel carries low-frequency special effects which are only added to certain scenes.

This setting is effective only when this unit decodes Dolby Digital or DTS signals.

Choices: -20 to **0** dB

**DISTANCE (Distance)**

Select to adjust the distance of the subwoofer from the listening position.

Choices: 0.3 to 15.0 m (1 to 50 ft)

Initial setting: 3.0 m (10 ft)

■ **MUTE LEVEL (Muting level)**

Use to adjust how much the mute function reduces the volume level.

Choices: **MUTE**, -20 dB

- Select MUTE to completely halt all sound output.
- Select -20 dB to reduce the current volume level by 20 dB.



■ **AUDIO DELAY (Audio delay)**

Use to delay the sound output and synchronize it with the video image. This may be necessary when using certain LCD monitors or projectors.

Choices: **0** to 160 msec




■ **ROOM EQ (Room equalizer)**

Use to change the tonal qualities of your listening room when the unit is mounted on the wall.

Choices: MOUNT (Mount),

REFLECTING (Reflectivity type)

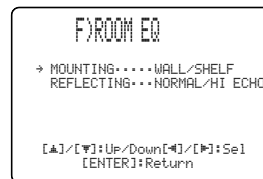

**MOUNT (Mount)**

Use to enhance medium to low range sounds.

Choices: WALL (Wall mount), SHELF (Shelf mount)

- Select WALL if this unit is mounted on the wall in your listening room.
- Select SHELF if this unit is mounted on the shelf in your listening room.

**REFLECTING (Reflectivity type)**

Use to select the reflectivity of your listening room.


Choices: NORMAL (Normal), HI ECHO (High echo)

- Select NORMAL if your listening room has a normal reflectivity.
- Select HI ECHO if your listening room has highly reflective surfaces such as concrete walls.

## ■ DD/DTS Dynamic Range (Dynamic range of Dolby Digital and DTS signals)

Use to select the amount of dynamic range compression to be applied to the speakers. This setting is effective only when the unit is decoding Dolby Digital and DTS signals. Dynamic range is the difference between the smallest sound that can be heard above the noise of the equipment and the biggest sound that can be heard without distortion.

Choices: MIN (minimum), STD (standard),  
**MAX** (maximum)

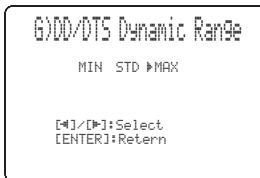

Select to adjust the speaker compression.

- Select MIN for listening to sources at low volume levels.
- Select STD for general use.
- Select MAX for feature films.

## INPUT MENU

Use to manually adjust various parameters related to the audio and video input.


SET MENU → MANUAL SETUP → INPUT MENU




## ■ INPUT ASSIGNMENT (Input assignment)

Use to assign the optical and coaxial digital input jacks of this unit to other components if the initial settings of this unit do not correspond to your needs. By assigning other components to the input jacks on this unit, you can display the name of the connected component in the front panel display and OSD, and operate the component with the input selector button of the same name. If you connect a component to the input jacks of this unit and do not assign it, the default component name for that input jack is displayed in the front panel and OSD when selected.

- Select OPTICAL IN (1) to assign components to the TV OPTICAL IN jack of this unit.  
Choices: **TV**, VCR
- Select OPTICAL IN (2) to assign components to the AUX OPTICAL IN jack of this unit.  
Choices: **AUX**, DVD

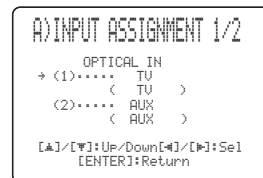

- Select COAX IN (3) to assign components to the COAXIAL IN jack of this unit.  
Choices: **DVD**, AUX

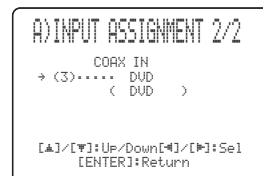

### ■ INPUT MODE (Input mode)

Use to designate the input mode for the input sources connected to the DIGITAL INPUT jacks when you turn on the power of this unit. For information on the types of audio signals that can be output by this unit, see “Surround modes and recommended sources” on page 44.


Choices: **AUTO**, **LAST**



- Select **AUTO** to allow this unit to automatically detect the type of input signal and select the appropriate input mode.
- Select **LAST** to set this unit to automatically select the last input mode used for that input source. If the type of input signal is different from the setting, no sounds will be produced.

### ■ INPUT TRIM (Input trim)

Use to adjust the input level of the input source.

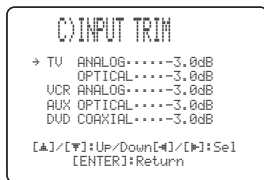

- Select **TV ANALOG** to adjust the level of audio and video signals input at the TV/STB analog audio input jacks of this unit.  
Control range: -6.0 dB to 0.0 dB  
Initial setting: -3.0 dB
- Select **TV OPTICAL** to adjust the level of audio and video signals input at the TV OPTICAL IN jack of this unit.  
Control range: -6.0 dB to 0.0 dB  
Initial setting: -3.0 dB
- Select **VCR ANALOG** to adjust the level of audio and video signals input at the VCR analog audio input jacks of this unit.  
Control range: -6.0 dB to 0.0 dB  
Initial setting: -3.0 dB
- Select **AUX OPTICAL** to adjust the level of audio and video signals input at the AUX OPTICAL IN jack of this unit.  
Control range: -6.0 dB to 0.0 dB  
Initial setting: -3.0 dB
- Select **DVD COAXIAL** to adjust the level of audio and video signals input at the COAXIAL IN jack of this unit.  
Control range: -6.0 dB to 0.0 dB  
Initial setting: -3.0 dB

### ■ INPUT RENAME (Input rename)

Use to change the name of the input source in the OSD and the front panel display. Press an input selector button (TV, STB, DVD, VCR, or AUX) to select the component you want to change the name for and then perform the following procedure.




#### 1 Press **TEST** on the remote control.




#### 2 Press **◀/▶** to place the **\_** (underbar) under the space or the character you want to edit.

The **\_** (underbar) flashes.

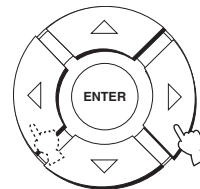

#### 3 Press **▲/▼** to select the desired character.


- You can use up to 8 characters for each input.
- Press **▲** to change the character in the following order or press **▼** to go in the reverse order:  
A to Z, a space, 0 to 9, a space, a to z, a space, #, \*, +, etc.

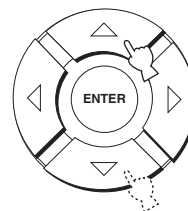

**4 Repeat steps 1 to 3 to rename each input.**

**5 Press ENTER to exit.**

The new names are registered, and the display returns to the previous screen.

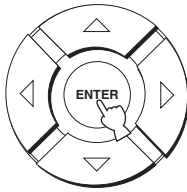

## DISPLAY MENU


Use to manually adjust various parameters related to the display.

SET MENU → MANUAL SETUP → OPTION MENU



### ■ DIMMER SET (Dimmer settings)

Use to adjust the brightness of the front panel display.

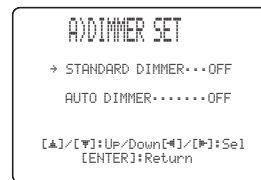

#### STANDARD DIMMER (Standard dimmer)

Use to adjust the brightness of the front panel display when you operate this unit by using the control buttons on the front panel or on the remote control.

Choices: **-2**, -1, OFF


#### AUTO DIMMER (Auto dimmer)

If no operation is performed for a specified period, the front panel display dims. Use to adjust the brightness of the front panel display in this case.

Choices: DISPLAY OFF, -3 to -1 (based on the STANDARD DIMMER setting), **OFF**

■ **OSD SET (OSD settings)**

Use to adjust the display position and the background color of the OSD.

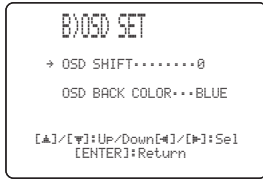

■ **OSD SHIFT (OSD shift)**

Use to adjust the vertical position of the OSD. Adjust towards the – (minus) direction to raise the position of the OSD, and adjust towards the + (plus) direction to lower it.

Choices: –5 to +5

Initial setting: 0

■ **OSD BACK COLOR (OSD background color)**

Use to select the background color of the OSD.

Choices: **BLUE**, GRAY

■ **UNIT SET (Unit settings)  
 (U.S.A. and Canada models only)**

Use this to change the display unit of measurement.

Choices: METERS, **FEET**





- Select METERS to input speaker distances in meters.
- Select FEET to input speaker distances in feet.

# ADJUSTING SYSTEM PARAMETERS

## Setting the maximum volume level

You can set the maximum volume level so that this unit will not output sound beyond the limited volume level.

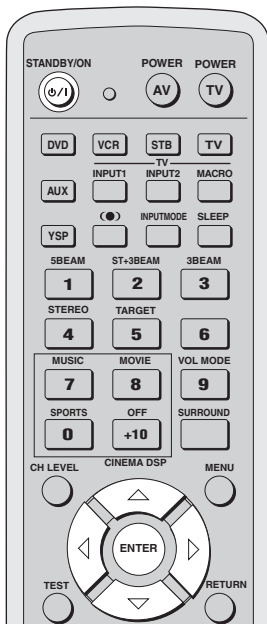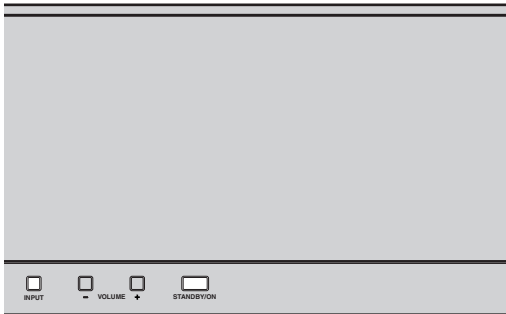

- 1 Press **STANDBY/ON** on the front panel or on the remote control to turn off the power of this unit.



Front panel

or



 
Remote control

- 2 Press and hold **INPUT** on the front panel and then press **STANDBY/ON** on the front panel to turn on the power of this unit.


MAX VOLUME SET is shown in the front panel display.




- 3 Release **INPUT** on the front panel.



- 4 Press **ENTER** on the front panel.

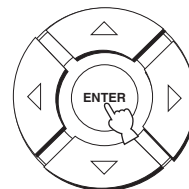

- 5 Press ◀ / ▶ to adjust the maximum volume level.

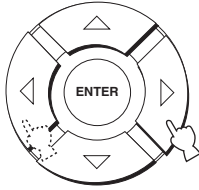

Control range: 0 dB to -99.0 dB  
Control step: 1 dB

- 6 Press STANDBY/ON on the front panel or on the remote control to set this unit to the standby mode.



Front panel

or




Remote control

The new setting for the maximum volume level will be activated when you turn on the power of this unit next time.


## Protecting the current settings

You can protect the current settings from being accidentally erased or unwantedly changed.

- 1 Repeat steps 1 to 3 in “Setting the maximum volume level” on page 75.
- 2 Press ▲ / ▼ on the remote control so that MEMORY PROTECT is shown in the front panel display.

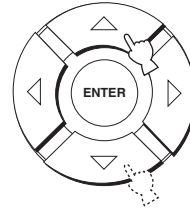


- 3 Press ENTER.

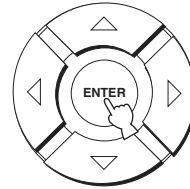



- 4 Press  $\triangle / \triangleright$  to switch between PROTECT: ON and PROTECT: OFF.

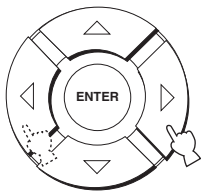

- Select PROTECT: ON to activate the protection feature.
- Select PROTECT: OFF to deactivate the protection feature.

- 5 Press STANDBY/ON on the front panel or on the remote control to set this unit to the standby mode.



Front panel

or



Remote control

The new setting will be activated when you turn on the power of this unit next time.



## Initializing the current settings

 You can reset all of the parameters of this unit to the factory presets. This procedure completely resets ALL the parameters in SET MENU.


### Note

After performing the following procedure you must reset the ROOM TYPE, SP POSITION and ROOM SIZE parameters to match your surround sound environment.


- 1 Repeat steps 1 to 3 in “Setting the maximum volume level” on page 75.
- 2 Press  $\triangle / \triangleright$  on the remote control so that FACTORY PRESET is shown in the front panel display.

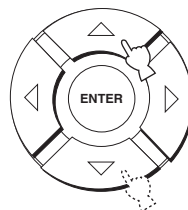

- 3 Press ENTER.

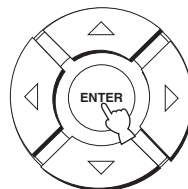

- 4 Press ◀ / ▶ to switch between PRESET: RESET and PRESET: CANCEL.

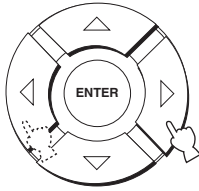

- Select PRESET: RESET to reset all of the current settings.
- Select PRESET: CANCEL to cancel the resetting procedure.

- 5 Press STANDBY/ON on the front panel or on the remote control to set this unit to the standby mode.



Front panel

or



Remote control

The new setting will be activated when you turn on the power of this unit next time.

## Adjusting the audio balance

You can adjust the sound beam output level of each speaker by using the test tone or the audio output being played back in each beam mode to achieve a more true-to-life surround sound experience.

### Notes


- All the speaker levels cannot be adjusted when the stereo mode is selected as the beam mode (see page 42).
- FRONT L/R cannot be adjusted when the stereo plus 3 mode is selected as the beam mode (see page 41).
- Only CENTER can be adjusted when the target mode is selected as the beam mode (see page 43).



If the level of a particular speaker cannot be adjusted, –dB appears in the front panel display.

### Using the test tone

You can use the test tone feature to output a test tone from each speaker to manually balance the speaker levels. Use the test tone to set speaker levels so that the volume level of each speaker is identical when heard from your listening position.

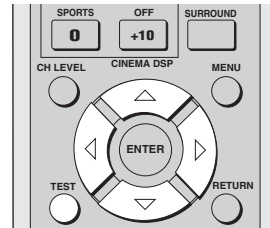


- 1 Press TEST on the remote control.

TEST LEFT appears in the front panel display and a test tone is output from the front left speaker.



**2 Press  $\Delta$  /  $\nabla$  to select the speaker you want to adjust.**


The front panel display changes as follows.

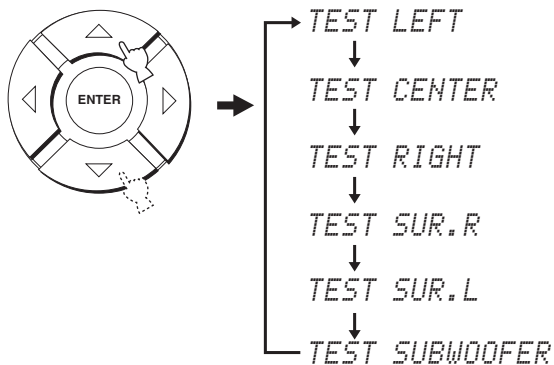

**Note**


TEST SUBWOOFER is only available when a subwoofer is connected to this unit and SWFR is selected for BASS OUT in SOUND MENU (see page 70).

**3 Press  $\triangleleft$  /  $\triangleright$  to adjust speaker volumes.**

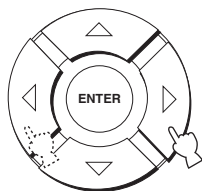

Control range: -10 dB to +10 dB

**4 Press VOLUME +/- on the remote control to adjust the volume level of this unit.**

 


**5 Press TEST when you have completed all your adjustments.**



To adjust the output level of your subwoofer, set BASS OUT to BOTH or SWFR (page 70).


**Using the audio output being played back**

You can also manually adjust the speaker levels while playing back an input source such as a DVD.

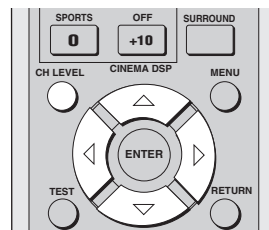


**1 Press CH LEVEL repeatedly (or press CH LEVEL and then  $\Delta$  /  $\nabla$ ) to select the speaker you want to adjust.**

The front panel display changes as follows.

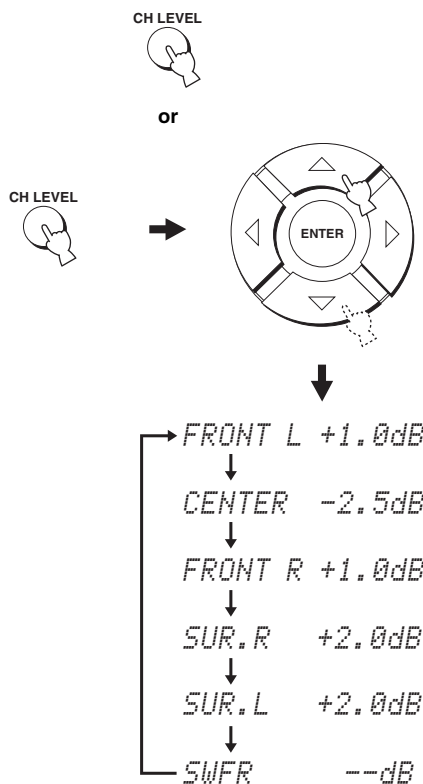

- 
- 2** Press ◀ / ▶ to adjust speaker volumes.

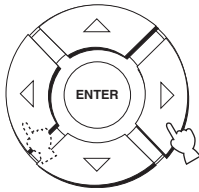

Control range: -10 dB to +10 dB

- 
- 3** Press CH LEVEL (or wait for a few seconds without operating this unit) when you have completed your adjustment.




# SELECTING THE INPUT MODE


You can select the type of audio input signals of the selected input source according to your preference or the conditions of the input source.




We recommend setting the input mode to AUTO in most cases.

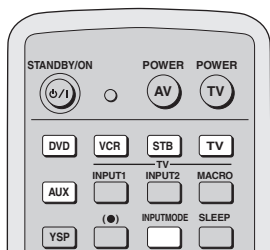

- 1 Press one of the input selector buttons on the remote control to select the desired input source.

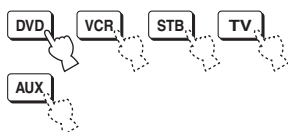

- 2 Press INPUTMODE on the remote control repeatedly to toggle between input modes.

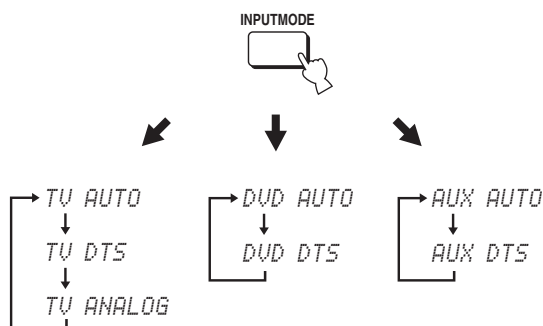

When TV or STB is selected as the input source

When DVD is selected as the input source

When AUX is selected as the input source

## Notes

- The input mode of VCR is fixed to ANALOG. However, if the TV OPTICAL IN jack of this unit is assigned to VCR, AUTO, DTS and ANALOG become available as the input mode of VCR (see page 71).
- ANALOG is not available as the input mode of DVD and AUX.

## • AUTO

Automatically selects audio input signals in the following priority order:

- 1) Dolby Digital or DTS
- 2) PCM
- 3) Analog

Use this input mode in most cases.

## • DTS

Selects only digital signals encoded in DTS.

Compared to AUTO, this input mode provides greater stability during playback.

Use this input mode when playing back CDs or LDs encoded in DTS.

## • ANALOG

Selects only analog signals.

Even when both digital and analog signals are input simultaneously, only analog signals are selected.

## Notes

- When the input mode is set to AUTO, this unit automatically plays back multi-channel sources in the selected input mode.
- ANALOG cannot be selected as an input mode if analog signals are not being input from the selected input source.



You can adjust the default input mode to be selected when the power of this unit is turned on (see page 72).

# REMOTE CONTROL FEATURES


In addition to controlling this unit, the remote control can also operate other A/V components made by YAMAHA and other manufacturers. To control other components, you must set up the remote control with the appropriate remote control codes.

## Note

Depending on the external A/V component you are using, you may not be able to operate the component with the remote control, even if a remote control code is set. In this case, operate the component using the supplied remote control.

## Setting remote control codes


You can control other components by setting the appropriate remote control codes. Codes can be set up for each input area (TV, STB, DVD, VCR and AUX). For a complete list of available remote control codes, refer to “LIST OF REMOTE CONTROL CODES” at the end of this manual.

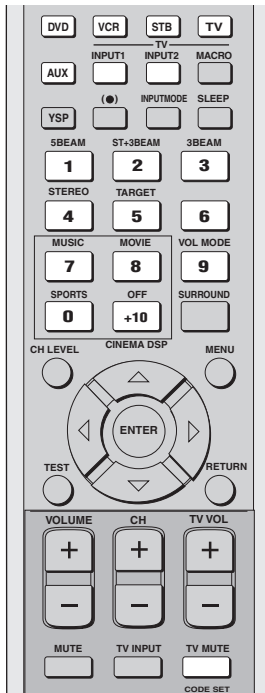

- 1 While holding down CODE SET, press the input selector button for the component you want to set up and then without releasing CODE SET, enter the remote control code using the numeric buttons.**

The following illustrations show an example of setting the remote control code for a DVD player made by YAMAHA.

### Setting example: YAMAHA DVD input area

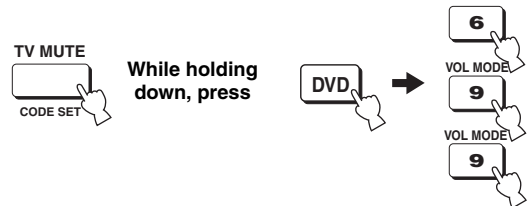

- 2 Refer to “Controlling other components” on page 83 to operate the external component using the remote control.**

If the external component functions correctly, the remote control code setup was successful.

If the external component does not function correctly, the remote control code may be incorrect. Confirm that the remote control code is correct (see “LIST OF REMOTE CONTROL CODES” at the end of this manual) and start over from step 1.

## Note


If the manufacturer of your component has more than one code, try each of them until you find the correct one.

If the remote control is without batteries for more than 2 minutes, or if exhausted batteries remain in the remote control, the contents of the memory may be cleared. When the memory is cleared, insert new batteries and reset the remote control codes. When changing the batteries, be careful not to press any of the buttons on the remote control. Doing so will clear the contents of the memory.

## Controlling other components

### ■ Operating your TV

Press TV to select TV as the input source.

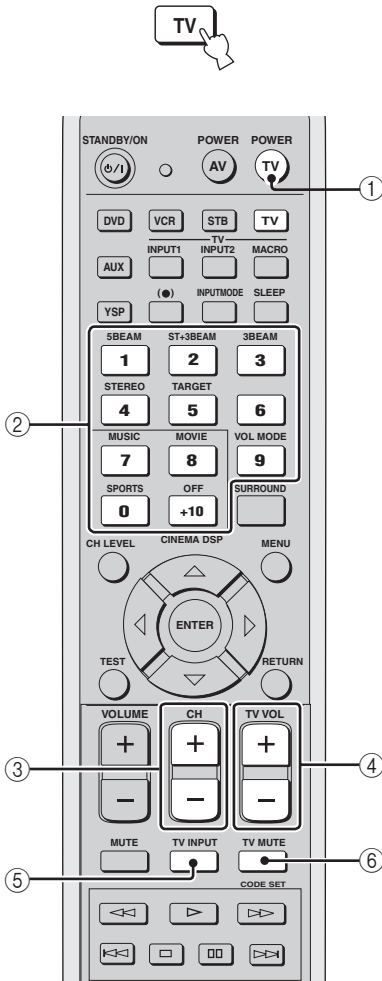

① **TV POWER**

Turns on or off the power of your TV.

② **Numeric buttons**

Selects a TV channel for playback.

③ **CH +/-**

Switches between the available TV channels.

④ **TV VOL +/-**

Adjusts the audio output level of the TV.

⑤ **TV MUTE**


Temporarily mutes audio output from the TV.

⑥ **TV INPUT**

Switches the input source for the TV.

### ■ Operating your DVD player

Press DVD to select DVD as the input source.

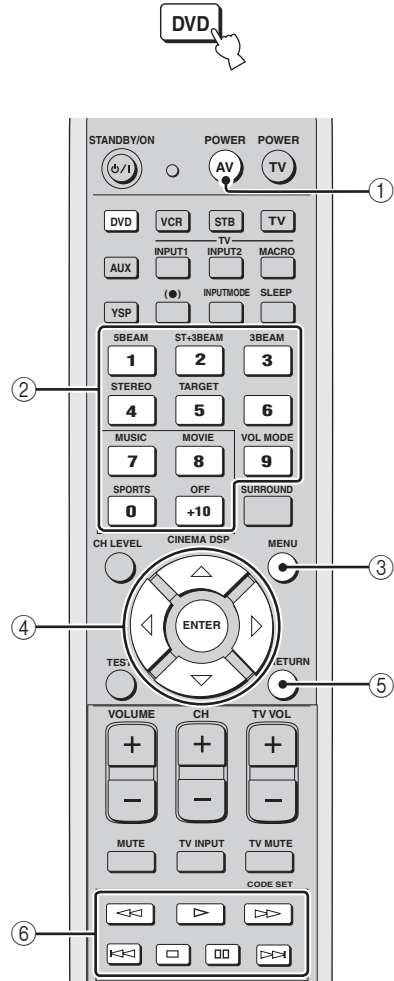

① **AV POWER**

Turns on or off the power of your DVD player.

② **Numeric buttons**

Use to enter numeric digits.

③ **Operation buttons for DVD and VCR players**

Use to perform DVD player operations, such as play and stop.

④ **MENU**

Displays the DVD menu.

⑤ **Cursor buttons**

Use to select DVD menu items.

⑥ **RETURN**


Use to return to the previous DVD menu screen or exit the DVD menu.

■ **Operating your VCR player**

Press **VCR** to select VCR as the input source.



Press **YSP** on the remote control to return to the operation mode of this unit.

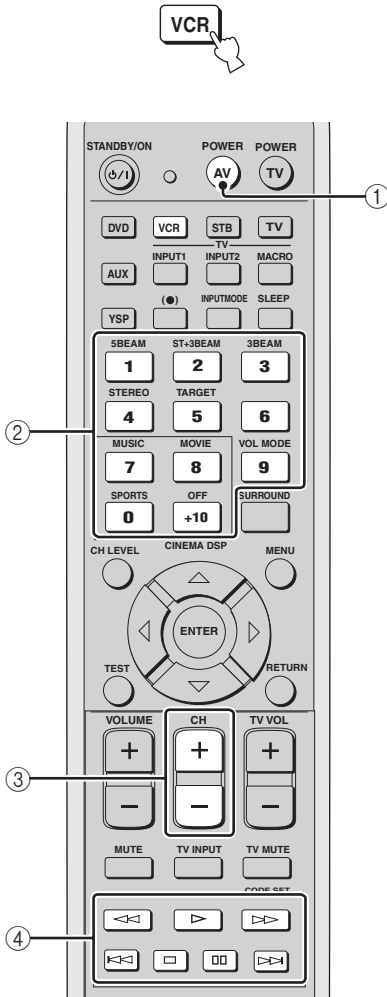

① **AV POWER**

Turns on or off the power of your VCR.

② **Numeric buttons**

Use to enter numeric digits.

③ **CH +/-**

Switches between the available VCR channels.

④ **Operation buttons for DVD and VCR players**

Use to perform VCR player operations, such as play and stop.



## Using the TV macro

The TV macro feature makes it possible to perform a series of operations with the press of a single button. For example, when you want to play a DVD, you would normally turn on the component, select DVD as the input source and press the play button to start playback. The TV macro feature lets you perform all of these operations simply by pressing the DVD macro button.

### Notes


- The ways to set macros differ if your TV does not have the tuning capability.
- If you press any control buttons on the remote control other than the ones used to set macros while setting macros, the setting procedure is automatically canceled.
- If it takes more than 10 seconds in steps 2 and 3, the setting procedure is automatically canceled. In this case, repeat from step 1.



## Setting macros for the TV with the tuning capability

- 1 Press and hold CODE SET on the remote control and then press one of the input selector buttons to select the input source you want to set macros for.**

Proceed to step 2 while holding down CODE SET.

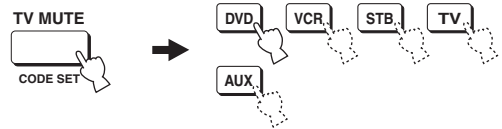


- 2 Press MACRO on the remote control while holding down CODE SET.**



- 3 Press CH +/- or the numeric buttons to select the TV channel.**


Check that the TV screen changes to the tuner screen.

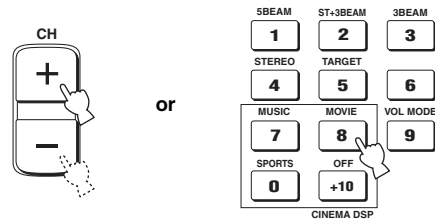

- 4 Press TV INPUT on the remote control repeatedly so that the screen changes to the display of the input source selected in step 1.**




- 5 Press ENTER on the remote control to confirm the macro setting.**

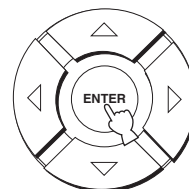

■ **Setting macros for the TV without the tuning capability**

- 1 Press and hold **CODE SET** on the remote control and then press one of the input selector buttons to select the input source you want to set macros for.

Proceed to step 2 while holding down **CODE SET**.

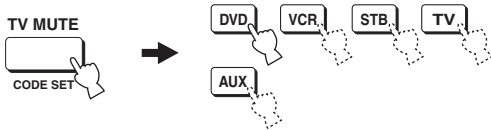


- 2 Press **MACRO** on the remote control while holding down **CODE SET**.




- 3 Press **INPUT1** on the remote control.



- 4 Press **CH +/-** or **TV INPUT** on the remote control repeatedly so that the screen changes to the display of the input source selected in step 1.

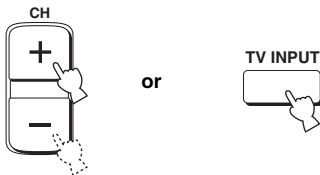


- 5 Press **ENTER** on the remote control to confirm the setting.

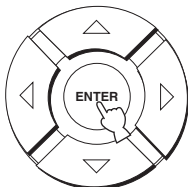

■ **Operating macros**

- 1 Press and hold one of the input selector buttons for approximately 2 seconds to select the input source you want to operate macros for.


The TV input changes at the same time the input mode changes.

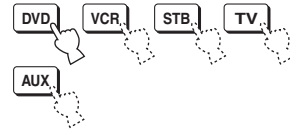

■ **Canceling the macros**

- 1 Press and hold **CODE SET** on the remote control and then press one of the input selector buttons to select the input source you want to cancel the macros for.


Proceed to step 2 while holding down **CODE SET**.

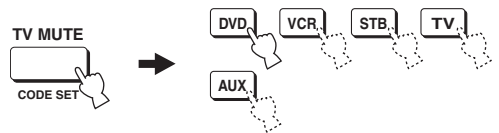

- 2 Press **MACRO** on the remote control while holding down **CODE SET**.



- 3 Press **ENTER** on the remote control to cancel the macros.

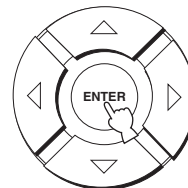

# TROUBLESHOOTING

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, set this unit to the standby mode, disconnect the power cord and contact the nearest authorized YAMAHA dealer or service center.

## ■ General

Problem	Cause	Remedy	See page
<b>This unit fails to turn on when STANDBY/ON is pressed, or enters the standby mode soon after the power has been turned on.</b>	The power supply cable is not firmly connected to the AC wall outlet.	Connect the power supply cable firmly to the AC wall outlet.	21
	This unit has been exposed to a strong external electric shock (such as lightning and strong static electricity).	Set this unit to the standby mode, disconnect the power cable, plug it back in after 30 seconds, then use it normally.	—
<b>This unit suddenly enters the standby mode.</b>	The internal temperature becomes too high and the overheat protection circuitry has been activated.	Wait about 1 hour for this unit to cool down and then turn it back on.	—
	The sleep timer has turned the unit off.	Turn on the power, and play the source again.	—
<b>No sound</b>	Incorrect input or output cable connections.	Connect the cables properly. If the problem persists, the cables may be defective.	14
	No appropriate input source has been selected.	Select an appropriate input source with INPUT or the input selector buttons.	37
	The volume is turned down.	Turn up the volume.	38
	The sound is muted.	Press MUTE or VOLUME +/- on the remote control to resume audio output and then adjust the volume level.	39
	Signals this unit cannot reproduce (such as PCM signals with more than 96 kHz of sampling frequency) are being received from a source component.	Play a source whose signals can be reproduced by this unit.	—
		Change the system settings of the source component.	—
<b>The sound suddenly goes off.</b>	The sleep timer has turned the unit off.	Turn on the power, and play the source again.	—
	The sound is muted.	Press MUTE or VOLUME +/- on the remote control to resume audio output and then adjust the volume level.	39
<b>No sound from the effect speakers.</b>	You are playing back the source or program in the stereo mode.	Press one of the beam mode buttons on the remote control to select a multi-channel playback mode and then try to play back the source or program once more.	40
<b>No sound from the center speaker.</b>	The output level of the center speaker is set to minimum.	Raise the level of the center speaker.	78
<b>No sound from the surround speakers.</b>	The output level of the surround speakers is set to minimum.	Raise the output level of the surround speakers.	78
<b>No sound from the subwoofer.</b>	BASS OUT in SUBWOOFER SET is set to FRONT when a Dolby Digital or DTS signal is being played.	Select SWFR or BOTH.	70
	The source does not contain low bass signals.		

Problem	Cause	Remedy	See page
<b>Surround sound effects are insubstantial.</b>	The listening room is not a regular shape.	Install this unit in a square or rectangular shaped room.	—
	There is no wall in the path of the sound beam.	Try placing a flat object, such as a board, in the path of the sound beam.	—
<b>Dolby Digital or DTS sources cannot be played. (Dolby Digital or DTS indicator does not light up in the front panel display.)</b>	The connected component is not set to output Dolby Digital or DTS digital signals.	Make an appropriate setting following the operating instructions for your component.	—
	The input mode is set to ANALOG.	Set the input mode to AUTO.	81
<b>There is noise interference when a subwoofer is not connected to this unit.</b>	The protection circuitry was in operation because a source with strong bass elements was played back.	Turn down the volume level.	38
		Select SWFR for BASS OUT.	70
		Connect a subwoofer and adjust settings for SUBWOOFER SET.	70
<b>Low frequency sounds are distorted.</b>	CROSS OVER in SUBWOOFER SET is set incorrectly.	Set CROSS OVER correctly.	70
<b>On-screen display does not appear.</b>	The OSD video pin cable is not connected properly.	Connect the cable properly.	15
	TV is not selected as the input source.	Select TV as the input source.	37
<b>No picture is displayed for external components, such as a DVD player.</b>	The video cable is not connected properly.	Connect the cable properly.	15
	TV is not selected as the input source.	Select TV as the input source.	37
<b>This unit does not operate properly.</b>	The internal microcomputer has been frozen by an external electric shock (such as lightning or excessive static electricity) or by a power supply with low voltage.	Disconnect the AC power cable from the outlet and then plug it in again after about 30 seconds.	—
<b>There is noise interference from digital or high-frequency equipment.</b>	This unit is too close to the digital or high-frequency equipment.	Move this unit further away from such equipment.	—
<b>This unit does not output effect sounds properly.</b>	The original source includes surround effects.	Disable surround effect settings on this unit.	—

## ■ Remote control

Problem	Cause	Remedy	See page
<b>The remote control does not work and/or function properly.</b>	Wrong distance or angle.	The remote control will function within a maximum range of 6 m (20 ft) and no more than 30 degrees off-axis from the front panel.	22
	Direct sunlight or lighting (from an inverter type of fluorescent lamp, etc.) is striking the remote control sensor of this unit.	Reposition this unit.	—
	The batteries are weak.	Replace all batteries.	22
<b>You cannot operate external components with this unit's remote control.</b>	The external component you want to operate is not selected as the input source.	Press INPUT on the front panel or the input selector buttons on the remote control to select the external component you want to operate.	37
	The remote control code was not correctly set.	Set the remote control code correctly or try another code for the same manufacturer using the "LIST OF REMOTE CONTROL CODES" at the end of this manual.	82
	Even if the remote control code is correctly set, there are some models that do not respond to the remote control.	Use the remote control supplied with the external component.	—
<b>The cursor buttons do not work during SET MENU operation.</b>	You pressed an input selector button.	Press TEST once.	—

## *Audio formats*

### ■ **Dolby Digital**

Dolby Digital is a digital surround sound system that gives you completely independent multi-channel audio. With 3 front channels (left, center, and right), and 2 surround stereo channels, Dolby Digital provides 5 full-range audio channels. With an additional channel especially for bass effects, called LFE (low frequency effect), the system has a total of 5.1-channels (LFE is counted as 0.1 channel). By using 2-channel stereo for the surround speakers, more accurate moving sound effects and surround sound environment are possible than with Dolby Surround. The wide dynamic range (from maximum to minimum volume) reproduced by the 5 full-range channels and the precise sound orientation generated using digital sound processing provide listeners with previously unheard of excitement and realism.

With this unit, any sound environment from monaural up to a 5.1-channel configuration can be freely selected for your enjoyment.

### ■ **Dolby Pro Logic II**

Dolby Pro Logic II is an improved technique used to decode vast numbers of existing Dolby Surround software. This new technology enables a discrete 5-channel playback with 2 front left and right channels, 1 center channel, and 2 surround left and right channels (instead of only 1 surround channel for conventional Pro Logic technology). Music and Game modes are also available for 2-channel sources in addition to the Movie mode.

### ■ **Dolby Surround**

Dolby Surround uses a 4 channel analog recording system to reproduce realistic and dynamic sound effects: 2 front left and right channels (stereo), a center channel for dialog (monaural), and a surround channel for special sound effects (monaural). The surround channel reproduces sound within a narrow frequency range.

Dolby Surround is widely used with nearly all video tapes and laser discs, and in many TV and cable broadcasts as well. The Dolby Pro Logic decoder built into this unit employs a digital signal processing system that automatically stabilizes the volume on each channel to enhance moving sound effects and directionality.

### ■ **DTS (Digital Theater Systems) Digital Surround**

DTS digital surround was developed to replace the analog soundtracks of movies with a 6-channel digital sound track, and is now rapidly gaining popularity in movie theaters around the world. Digital Theater Systems Inc. has developed a home theater system so that you can enjoy the depth of sound and natural spatial representation of DTS digital surround in your home. This system produces practically distortion-free 6-channel sound (technically, a left, right and center channels, 2 surround channels, plus an LFE 0.1 channel as a subwoofer, for a total of 5.1-channels). The unit incorporates a DTS-ES decoder that enables 6.1-channel reproduction by adding the surround back channel to existing 5.1-channel format.

### ■ **Neo:6**

Neo:6 decodes the conventional 2-channel sources for 6 channel playback by the specific decoder. It enables playback with the full-range channels with higher separation just like digital discrete signal playback. Two modes are available; Music mode for playing music sources and Cinema mode for movies.

### ■ **PCM (Linear PCM)**

Linear PCM is a signal format under which an analog audio signal is digitized, recorded and transmitted without using any compression. This is used as a method of recording CDs and DVD audio. The PCM system uses a technique for sampling the size of the analog signal per very small unit of time. Standing for pulse code modulation, the analog signal is encoded as pulses and then modulated for recording.

## *Audio information*

### ■ **LFE 0.1 channel**

This channel is for the reproduction of low bass signals. The frequency range for this channel is 20 Hz to 120 Hz. This channel is counted as 0.1 because it only enforces a low frequency range compared to the full-range reproduced by the other 5/6 channels in Dolby Digital or DTS 5.1/6.1-channel systems.

# INDEX

## A

Audio Pin Cable..... 15 to 18

## B

Beam modes..... 40

## C

Coaxial digital output jack..... 8

Coaxial digital input jack..... 8

## D

Digital Audio Pin Cable..... 16

Display ..... 7, 24

Dolby Digital ..... 44

Dolby Pro Logic..... 44

Dolby Pro Logic II..... 44

DTS..... 44

Dynamic range..... 71

## E

BASIC SETUP ..... 57

## L

LFE 0.1 channel..... 70, 90

## M

MANUAL SETUP..... 63

MEMORY ..... 34, 35

## N

Night listening modes..... 52

## O

On-screen display (OSD) ..... 24

OSD video pin cable ..... 15

Optical cable ..... 15, 18, 19

## P

PCM ..... 81

Power cable ..... 21

## R

Remote control ..... 9, 22

Remote control code ..... 82

## S

Surround mode ..... 44

Sleep timer ..... 55

SET MENU ..... 24

## T

Test tone ..... 78

# SPECIFICATIONS

## AMP SECTION

- Maximum Output Power (EIAJ)
  - ..... 2 W (1 kHz, 10% THD, 4 Ω) × 21
  - ..... 20 W (100 Hz, 10% THD, 4 Ω) × 2

## SPEAKER SECTION

- Small dia. speakers
  - ..... 4 cm (1.5")-cone magnetic shielding type × 21
- Woofers
  - ..... 10 cm (3.9")-cone magnetic shielding type × 2
- Frequency response ..... 60 Hz – 20 kHz
- Crossover frequency ..... 400 Hz (Beam channel)  
1 kHz (Stereo channel)
- Input Jacks
  - AUDIO VCR, TV/STB (Analog) (1 V, 32 kΩ) .... 2 pairs (Analog)
  - AUDIO TV/STB, AUX (Optical) ..... 2 (Digital)
  - AUDIO DVD (Coaxial) ..... 1 (Digital)
- Output Jacks
  - SUBWOOFER OUT (1.5 V, less than 120 Hz) ..... 1 (Subwoofer)
  - VIDEO OUT (1 V<sub>p-p</sub>, 75 Ω) ..... 1 (OSD)
- System Connector Jack
  - OPTIMIZER MIC ..... 1 (Microphone input)
  - SYSTEM CONNECTOR ..... 1 (System control)

## GENERAL

- Power Supply
  - [U.S.A. and Canada models] ..... AC 120 V, 60 Hz
  - [Australia model] ..... AC 240 V, 50 Hz
  - [U.K. and Europe models] ..... AC 230 V, 50 Hz
  - [China model] ..... AC 220 V, 50 Hz
  - [Korea model] ..... AC 220 V, 60 Hz
  - [General model] ..... AC 110–120 V, 50/60 Hz
  - [Asia model] ..... AC 220–240 V, 50/60 Hz
- Power Consumption ..... 30 W
- Standby Power Consumption ..... 0.1 W or less
- Dimensions (W x H x D) ..... 800 × 153 × 115 mm  
(31-1/2" x 6" x 4-1/2")
- Weight ..... 9.0 kg (19 lbs 14oz)

\* Specifications are subject to change without notice.



**LIST OF REMOTE CONTROL CODES  
LISTE DES CODES DE COMMANDE  
LISTE DER FERNBEDIENUNGSCODES  
LISTA ÖVER FJÄRRSTYRNINGSKODER  
LISTA DEI CODICI DI TELECOMANDO  
LISTA DE CÓDIGOS DE MANDO A DISTANCIA  
LIJST MET AFSTANDBEDIENINGSCODES**

<b>TV</b>					
ADMIRAL	292, 293, 216	NORDMENDE	265, 266	PHILIPS	699, 647, 659
AIWA	294, 276, 283, 284	ONWA	296	PIONEER	636, 637, 638, 673, 674, 675
AKAI	295, 296	PANASONIC	234, 235, 236, 253, 288, 211	RCA	639
ALBA	296	PHILCO	297, 225, 239	SAMSUNG	642
AOC	297	PHILIPS	298, 225, 205	SHARP	643
BELL & HOWELL	292	PIONEER	226, 235, 254, 255, 268	SONY	644, 676, 677
BESTAR	298	PORTLAND	297, 256	SYLVANIA	662
BLAUPUNKT	229, 222	PROSCAN	293, 221	SYMPHONIC	662
BLUE SKY	298	PROSCAN	231, 241, 251	THOMSON	646
BRANDT	223	PROTON	297, 250, 260, 270	TOSHIBA	634, 665, 666, 667
BROC SONIC	297	QUASAR	234, 235	YAMAHA	699, 622, 623, 647
BUSH	296	RADIO SHACK	299, 293, 297	ZERITH	663, 664
BYD:SIGN	201, 202	RCA	293, 297, 234, 256, 257, 258, 221		
CLATRONIC	298	RUNCO	220, 230, 271	<b>VCR</b>	
CRAIG	224	SABA	223, 269, 265, 266	ADMIRAL	395
CROSLEX	225	SAMPO	281, 297, 280	AIWA	396, 397, 398, 329
CURTIS MATHIS	297, 226	SAMSUNG	297, 239, 248, 262, 275	AKAI	322, 323, 324
DAEWOO	297, 298, 224, 227, 228	SANYO	295, 233, 279, 272, 273, 274, 212	AUDIO DYNAMIC	392, 394
DAYTRON	239	SCHNEIDER	296	BELL & HOWELL	393
DUAL	298	SCOTT	297	BLAUPUNKT	325, 326
DWIN	293, 281	SHARP	292, 239, 232, 213	BROC SONIC	327
EMERSON	297, 224, 239, 232	SIEMENS	229	BUSH	322
FURGUSON	223, 265, 266	SIGNATURE	216	CANON	325, 328
FIRST LINE	298	SIGNATURE	292	CGM	396, 332
FISHER	295, 233	SONY	263, 214	CITIZEN	396
FRABA	298	SYLVANIA	297, 225	CRAIG	396, 363
FUJITSU	289	SYMPHONIC	217, 218, 219	CURTHIS MATHIS	397, 328, 333
FUNAI	277, 278	TELEFUNKUN	269, 264, 265, 266	DAEWOO	328, 334, 335
GE	293, 297, 234, 235, 236	THOMSON	223, 266	DBX	392, 394
GOODMANS	296, 298, 223	TOSHIBA	292, 226, 267, 215	DIMENSIA	333
GRUNDIG	229, 238, 249	VIDECH	297, 242	DYNATECH	397
HITACHI	297, 239, 242, 243, 285	WARDS	297, 239, 232, 216	EMERSON	327, 334, 396, 397
ICE	296	YAMAHA	299, 292, 242, 285, 287, 253	FISHER	393, 336
IRRADIO	296	ZENITH	216, 261, 271	FUNAI	397
ITT/NOKIA	244, 245			GE	328, 333, 387
JC PENNY	293, 297, 234, 237	<b>DVD PLAYER</b>		GO VIDEO	321, 331, 341, 351, 353, 363
JVC	296, 246, 247, 286	AIWA	648, 649	GOODMANS	334, 337
KENDO	298	APEX DIGITAL	652, 653, 654	GRUNDIG	332, 338
KTV	297, 239	BYD:SIGN	678, 679	HITACHI	325, 333, 349, 342, 343
LG/GOLDSTAR	297, 298, 239, 237	DAEWOO	655	INSTANT REPLAY	325, 328
LOEWE	298, 248	DENON	623, 624	ITT/NOKIA	393
LXI	293, 297, 225, 226, 233	FUNAI	625	JC PENNY	392, 393, 394, 328, 333, 349, 396, 363
MAGNAVOX	297, 225, 239	HARMAN/KARDON	656, 657	JVC	392, 394, 344, 345, 346, 347
MARANTZ	298, 210	HITACHI	626	KENDO	396
MATSUI	295	JVC	627	KENWOOD	392, 394, 396
MEDION	203, 204, 205	KENWOOD	628	LG/GOLDSTAR	396, 388
MEMOREX	297, 216	KLH	658	LOEWE	396, 337
mitsubishi	299, 297, 259, 287	LG/GOLDSTAR	645, 663, 664	LUXOR	395
NAD	226, 255	MARANTZ	699, 659	LXI	393, 396, 397, 336, 349
NEC	297, 252, 282	MITSUBISHI	629		
NOKIA	244, 245	ONKYO	632, 633, 634		
NOKIA OCEANIC	245	PANASONIC	623, 635, 668, 672		
				MAGNAVOX	325, 326, 328
				MARANTZ	392, 394
				MARTA	396
				MATSUI	396
				MEMOREX	328, 336, 396, 397
				MINOLTA	333, 349
				mitsubishi	399, 344, 348, 359, 352, 353
				MTC	363, 397
				MULTITECH	397, 348, 354
				NEC	392, 394, 344, 383
				NOKIA	393, 395
				NOKIA OCEANIC	395
				OKANO	323
				OLYMPIC	325, 328
				ORION	327
				PANASONIC	325, 328, 339, 355, 378, 384, 385, 386
				PENTAX	333, 349
				PHILCO	325, 328, 397
				PHILLIPS	325, 326, 328, 337, 356, 357
				PHONOLA	337
				PILOT	396
				PIONEER	325
				QUASAR	325, 328
				RCA/PROSCAN	325, 326, 328, 333, 335, 349, 358, 369, 363, 397
				REALISTIC	393, 397, 328, 336, 359, 362, 396, 363
				SAMSUNG	354, 358, 363, 364, 365, 366
				SANSUI	394
				SANYO	393, 336, 367
				SCHNEIDER	337
				SCOTT	399, 335, 336, 348, 359, 352, 354, 358
				SELECO	322
				SHARP	395, 362, 382
				SIEMENS	393
				SIGNATURE 2000	395, 397
				SONY	368, 379, 372, 373, 374, 375
				SYLVANIA	397, 325, 326, 328
				SYMPHONIC	397
				TANDBERG	334
				TANDY	397
				TASHIRO	396
				TATUNG	392, 394
				TEAC	392, 394, 397
				TECHNICS	325, 328
				TEKNIKA	396
				TELEFUNKUN	376, 377
				THOMAS	397

THORN 393, 396  
 TOSHIBA 335, 369, 389  
 TOTEVISION 363, 396  
 UNITECH 363  
 UNIVERSUM 396, 327, 376  
 VIDEOSONIC 363  
 W.WHOUSE 396  
 WARDS 395, 396, 336,  
 362, 397, 363  
 YAMAHA 399, 392, 393, 394  
 ZERITH 344, 361, 368,  
 371, 379, 396, 397

---

## CABLE TV TUNER

ABC 739, 752, 753,  
 755, 758, 759, 762  
 GENERAL INSTRUMENT  
 722  
 HAMIN 723, 724, 725,  
 726, 727  
 HITACHI 722  
 JEROLD 722, 728, 729,  
 732, 733, 734,  
 735, 736, 737  
 MAGNAVOX 738  
 MOTOROLA 748  
 OAK 739, 742, 743  
 PANASONIC 744, 745, 746,  
 747, 783, 784  
 PHILLIPS 763, 764, 765,  
 766, 767, 768  
 PIONEER 748, 785  
 RADIO SHACK 749  
 SCIENTIFIC ATLANTA  
 752, 753, 754  
 SONY 756, 757  
 TOCOM 755  
 UNIVERSAL 769, 772, 773,  
 774, 775  
 VIEWSTAR 764, 766, 776,  
 777, 778, 779, 782

---

## SATELLITE TUNER

ECHOSTAR 822  
 GE 837, 838, 839  
 GENERAL INSTRUMENT  
 823  
 HITACHI 824  
 HUGHES 843, 844, 845, 846  
 JVC 822  
 MAGNAVOX 825  
 PANASONIC 826, 829  
 PHILLIPS 825, 843, 844,  
 845, 846, 847,  
 848, 849  
 PRIMESTAR 827  
 PROSCAN 837, 838, 839, 842  
 RADIO SHACK  
 828  
 RCA 837, 838, 839, 842  
 SAMSUNG 852  
 SONY 832, 835  
 TOSHIBA 833, 836  
 UNIDEN 825  
 ZENITH 834



© 2006 YAMAHA CORPORATION All rights reserved.

YAMAHA ELECTRONICS CORPORATION, USA 6660 ORANGETHORPE AVE., BUENA PARK, CALIF. 90620, U.S.A.  
YAMAHA CANADA MUSIC LTD. 135 MILNER AVE., SCARBOROUGH, ONTARIO M1S 3R1, CANADA  
YAMAHA ELECTRONIK EUROPA G.m.b.H. SIEMENSSTR. 22-34, 25462 RELINGEN BEI HAMBURG, GERMANY  
YAMAHA ELECTRONIQUE FRANCE S.A. RUE AMBROISE CROIZAT BP70 CROISSY-BEAUBOURG 77312 MARNE-LA-VALLEE CEDEX02, FRANCE  
YAMAHA ELECTRONICS (UK) LTD. YAMAHA HOUSE, 200 RICKMANSWORTH ROAD WATFORD, HERTS WD18 7GQ, ENGLAND  
YAMAHA SCANDINAVIA A.B. J A WETTERGRENS GATA 1, BOX 30053, 400 43 VÄSTRA FRÖLUNDA, SWEDEN  
YAMAHA MUSIC AUSTRALIA PTY. LTD. LEVEL 1, 99 QUEENSBIDGE STREET, SOUTHBANK, VIC 3006, AUSTRALIA

YAMAHA CORPORATION  
Printed in Malaysia © WJ02460-1



# YSP-800 QUICK REFERENCE GUIDE


This quick reference guide explains steps to connect a TV and a DVD player to this unit and achieve the surround sound effects in a quick, easy manner.

## Before installing this unit

This unit creates surround sound by reflecting projected sound beams off the walls of your listening room. The surround sound effects produced by this unit may not be sufficient when the unit is installed in the following locations.

- Rooms with surfaces inadequate for reflecting sound beams
- Rooms with acoustically absorbent surfaces
- Rooms with measurements outside the following range W (3 to 7 m) x H (2 to 3.5 m) x D (3 to 7 m)
- Rooms with less than 2 m from the listening position to the speaker positions
- Rooms where objects such as furniture are likely to obstruct the path of sound beams
- Rooms where the listening position is close to the walls
- Rooms where the listening position is not in front of this unit

Make sure you leave an adequate amount of ventilation space so that heat can escape. Make at least 5 cm of space above or below this unit.

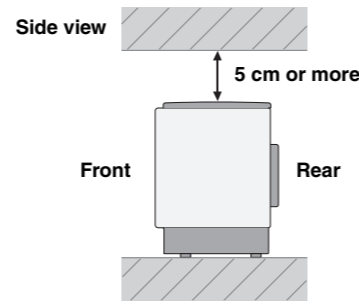


## 1. Installing this unit

Install this unit where there are no obstacles such as furniture obstructing the path of sound beams. Otherwise, the desired surround sound effects may not be achieved. You may install this unit in parallel with the wall or in the corner.

### Parallel installation


Install this unit in the exact center of the wall when it is measured from the left and right corners.

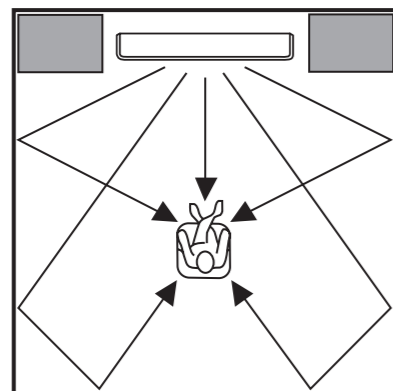

■ An object, such as furniture

### Corner installation


Install this unit in the corner at a 40° to 50° angle from the adjacent walls.

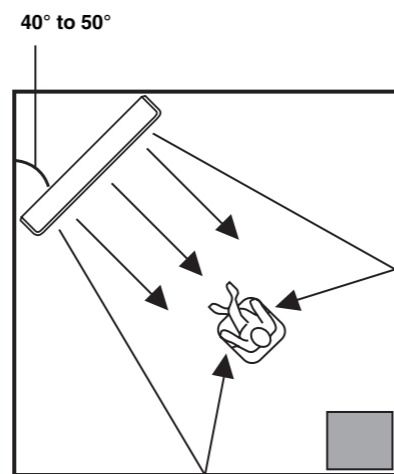

■ An object, such as furniture

### Installation example

Install this unit so that the sound beams can be reflected off the walls.

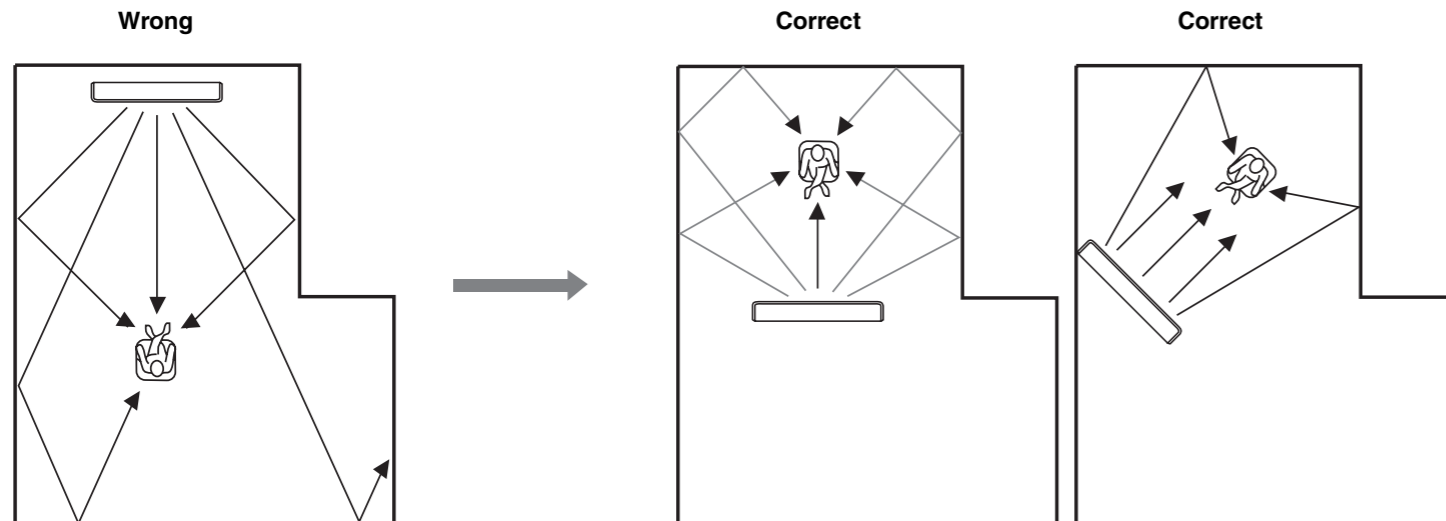

## 2. Connecting external components to this unit


Connect this unit to external components such as your TV, DVD player, VCR, digital satellite tuner, cable TV tuner, game console and a subwoofer.

### Connecting a TV and a DVD player

Connect a TV and a DVD player to this unit. If you connect a subwoofer to this unit, you can enjoy reinforced low bass sounds.


#### Note

For further information on connecting other components, see pages 14 to 20 in the supplied Owner's Manual.

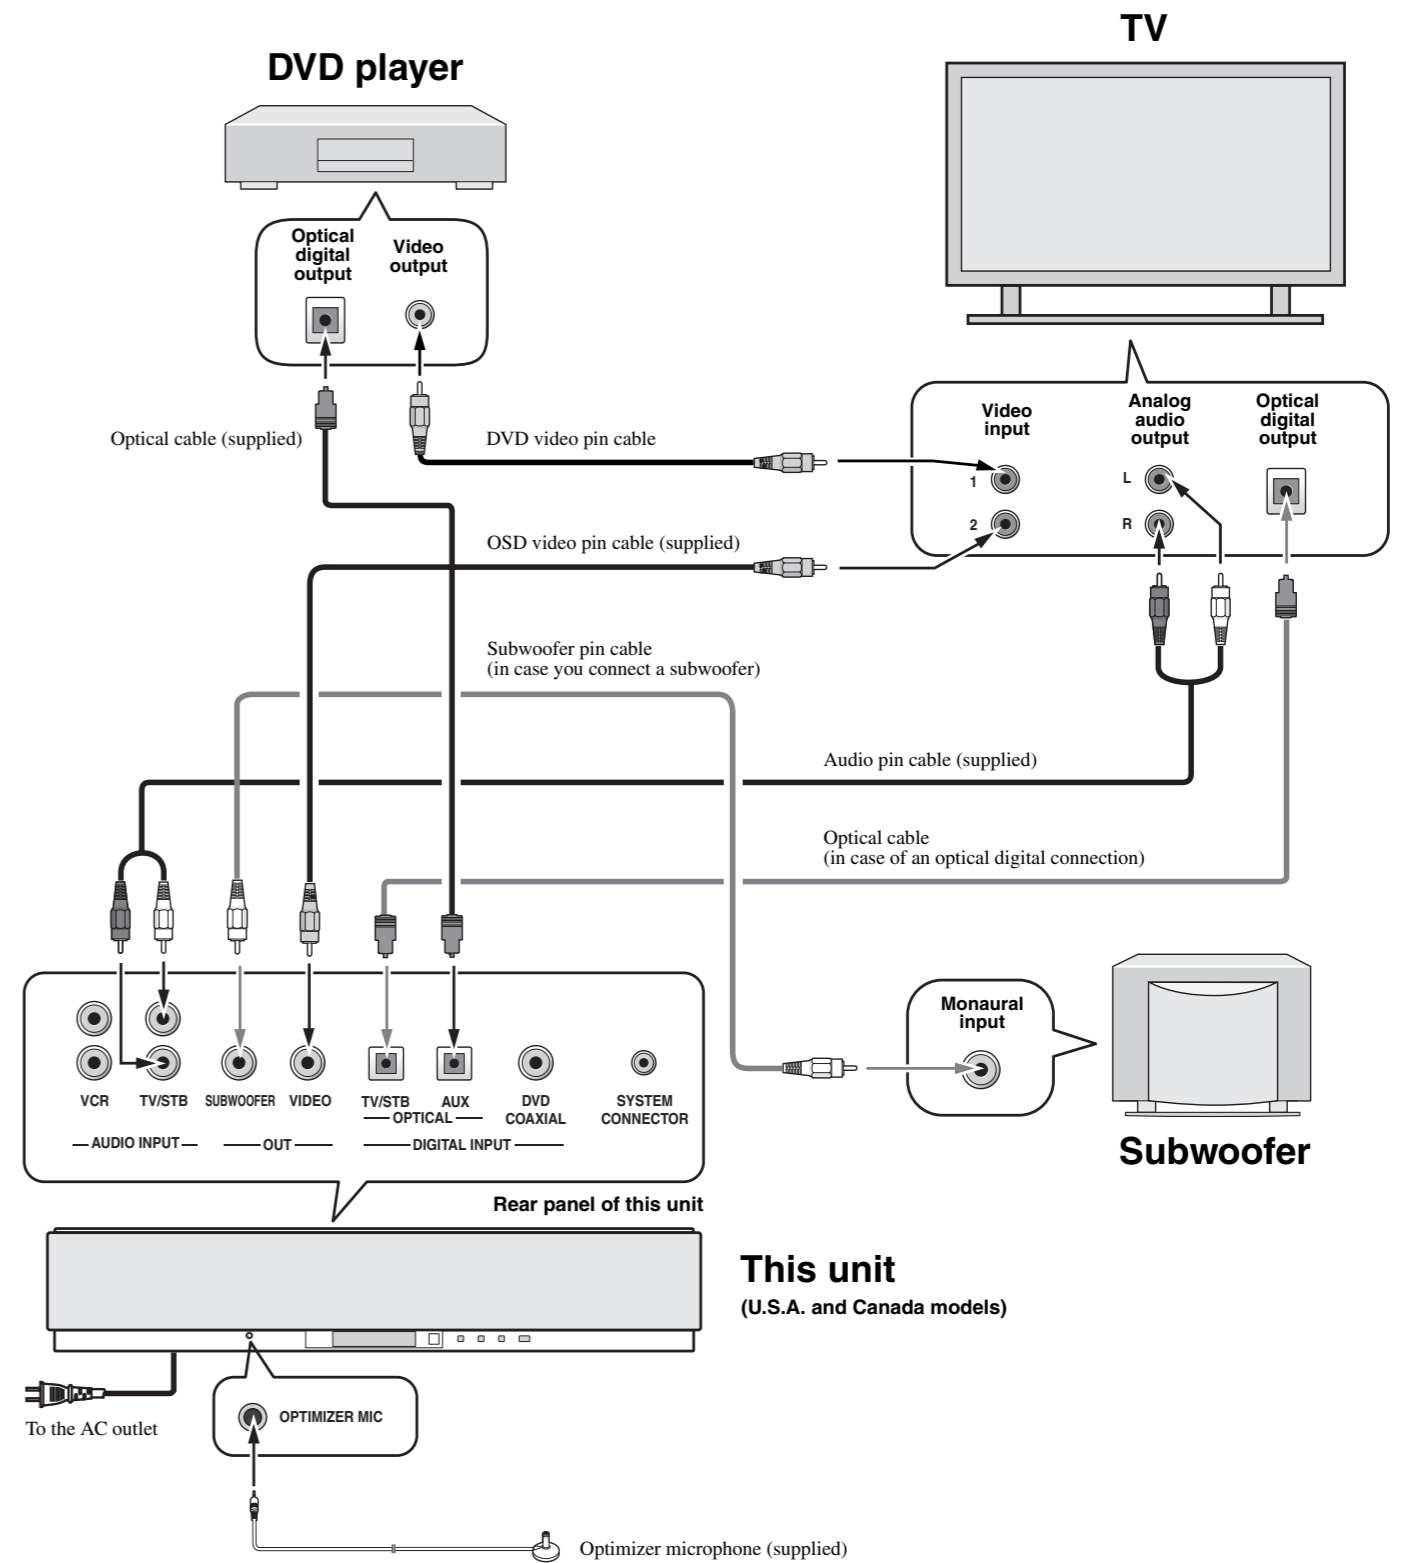

### Installing the optimizer microphone

The supplied optimizer microphone collects and analyzes the sound that this unit produces in your actual listening environment. Refer to the following two diagrams to install the optimizer microphone in a proper location once it is connected to this unit. If you use a tripod or the supplied cardboard microphone stand to affix the optimizer microphone, try to place the optimizer microphone at the same height as your ears would be when you are seated in your listening position.

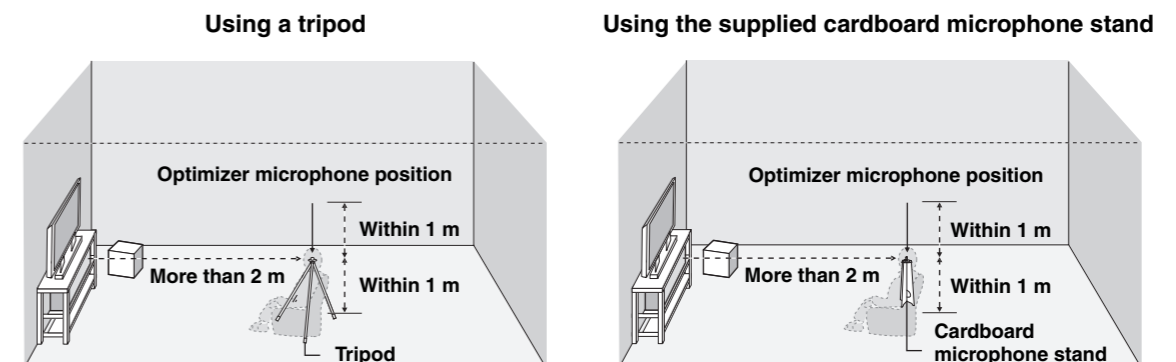

### 3. Automatically setting up the listening environment


This unit employs the beam optimization feature and the YAMAHA Parametric Room Acoustic Optimizer (YPAO) technology with the aid of the supplied optimizer microphone, allowing you to avoid troublesome listening-based speaker setup and achieve highly accurate sound adjustments that best match your listening environment.

#### Notes

- Be advised that it is normal for loud test tones to be output during the AUTO SETUP procedure. Make sure that there are no children around in the listening room while the AUTO SETUP procedure is in progress.
- Make sure that your listening room is as quiet as possible while the AUTO SETUP procedure is in progress.
- Once the AUTO SETUP procedure has started, position yourself beside or behind this unit so that you may not obstruct the path of sound beams. To achieve the best results possible, however, it is strongly recommended that you should evacuate yourself from your listening room until the AUTO SETUP procedure is completed.
- Once the AUTO SETUP procedure has completed, be sure to disconnect the optimizer microphone and keep it in a safe place for future usage.
- The optimizer microphone is sensitive to heat. Keep it away from direct sunlight and do not place it on top of this unit or other A/V components.

#### 1 Press STANDBY/ON on the remote control to turn on the power of this unit.

If a subwoofer with adjustable volume and crossover/high cut frequency controls is connected to this unit, set the volume between 9 and 12 o'clock as viewed on a conventional clockface and set the crossover/high cut frequency to the maximum.

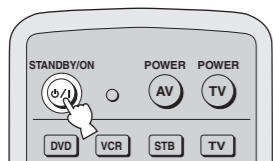

#### 2 Turn on the power of your TV.

#### 3 Switch to the video input on your TV using the remote control supplied with the TV.

For example, if you connect the supplied OSD video pin cable to the video input 2 jack of your TV, switch to video input 2 on your TV.


#### 4 Press MENU on the remote control.

The SET MENU screen appears on your TV.



#### 5 Press $\Delta$ / $\nabla$ on the remote control to select AUTO SETUP and then press ENTER.

The following screen appears on your TV.

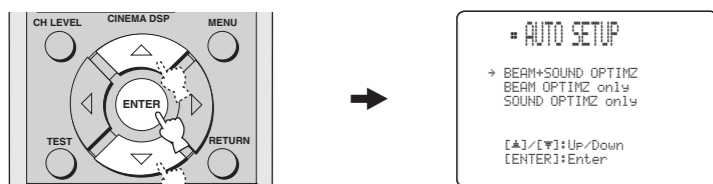


#### 6 Press $\Delta$ / $\nabla$ to select BEAM OPT+SOUND OPTIMZ and then press ENTER.

The following screen appears on your TV.



#### 7 Press $\Delta$ / $\nabla$ / $\leftarrow$ / $\rightarrow$ to select and configure each parameter and then press ENTER.

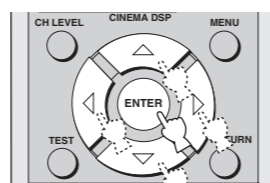

#### INSTALLING (Installing)

Use to select the installed position of the unit in your listening room. Choices: **Parallel to Wall** (Parallel with wall installation), **Angle to Wall** or **corner** (Corner installation)

- Select **Angle to Wall** or **corner** if the unit is installed in the corner.
- Select **Parallel to Wall** if the unit is installed in parallel with the wall.

#### MOUNTING (Mounting)

Use to select the mounted position of the unit in your listening room. Choices: **SHELF** (Shelf mount), **WALL** (Wall mount)

- Select **WALL** if the unit is mounted on the wall.
- Select **SHELF** if the unit is mounted on the shelf.

#### REFLECTING (Reflecting)

Use to select the reflectivity of your listening room. Choices: **NORMAL** (Normal), **HI ECHO** (High echo)

- Select **NORMAL** if your listening room has a normal reflectivity.
- Select **HI ECHO** if your listening room has highly reflective surfaces such as concrete walls.

#### 8 Check the following points once again before starting the AUTO SETUP procedure.

- Is the optimizer microphone firmly connected to this unit?
- Is the optimizer microphone placed in a proper location?
- Are there any large obstacles in between the optimizer microphone and the walls in your listening room?

#### 9 Press ENTER to start the AUTO SETUP procedure.

The following screen appears on your TV. ENVIRONMENT CHECK (Environmental noise check), SUB WOOFER CHECK (Subwoofer check) and WILL START in 10 SEC (Will start in 10 sec) are displayed in order as the PREPARATION procedure is in progress.




If an error occurs, an error message is displayed. See "Error messages for AUTO SETUP" on page 33 in the Owner's Manual for a complete list of error messages and their proper remedies. Follow the instructions and perform the AUTO SETUP procedure again.

#### 10 Check that the following screen is displayed on your TV.

The results of the AUTO SETUP procedure are displayed on your TV.

#### Example of the SHOW RESULT screen

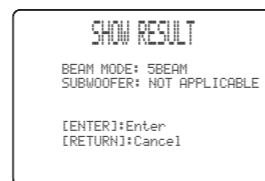

#### 11 Press ENTER to confirm the results.

The following screen is displayed temporarily for a few seconds and then disappear from your TV.



### 4. Enjoying surround sound

#### Enjoying TV in surround sound


You can enjoy audio signals output from your TV in real surround sound.



Before performing the steps below, set the volume of this unit to -40 dB. If necessary, adjust the volume level in step 4 below.


#### 1 Select the TV channel you want to watch using the remote control supplied with your TV.

#### 2 Press TV on the remote control to select TV as the input source.

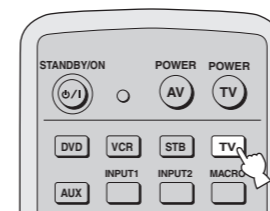


#### 3 If you hear sound output from your TV speakers, turn down the volume level using the remote control supplied with your TV until you cannot hear any sound.

#### 4 Press VOLUME +/- on the remote control to adjust the volume level.

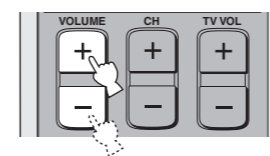


#### 5 Press YSP on the remote control to switch to the operation mode of this unit.

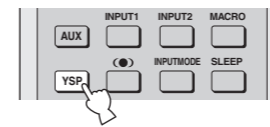

#### 6 Press one of the beam mode buttons on the remote control to select the desired beam mode.

Select one of the five beam modes that best matches the current input source of this unit.

For further details about the beam modes, see page 40 in the supplied Owner's Manual.

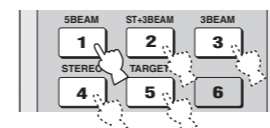

The target mode outputs sound beams in a single channel and is ideal if you do not want the sound beams to be reflected on the walls in your listening room or if you do not disturb others asleep while enjoying music or movies at night. In addition, you can adjust the horizontal angle of the sound beams so that you can hear dialogues clearly even from a distant location such as the kitchen area in your listening room.

#### 7 Press VOL MODE on the remote control repeatedly to select the desired volume mode.

The volume modes are designed to improve listenability at lower volumes and limit the volume level of the TV so that it will not vary suddenly to a great extent.

For further details about the volume modes, see page 52 in the supplied Owner's Manual.



#### Enjoying DVDs in surround sound


You can enjoy audio signals output from your DVD player in real surround sound.



Before performing the steps below, set the volume of this unit to -40 dB. If necessary, adjust the volume level in step 4 below.


#### 1 Switch to the video input on your TV using the remote control supplied with your TV so that the DVD menu screen is displayed.

#### 2 Press DVD on the remote control to select DVD as the input source and then start playback on the DVD player.

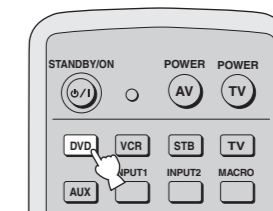


#### 3 If you hear sound output from your TV speakers, turn down the volume level using the remote control supplied with your TV until you cannot hear any sound.

#### 4 Press VOLUME +/- on the remote control to adjust the volume level.

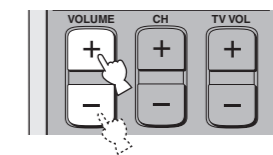

#### 5 Press YSP on the remote control to switch to the operation mode of this unit.

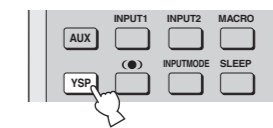

#### 6 Press one of the beam mode buttons on the remote control to select the desired beam mode.

Select one of the five beam modes that best matches the current input source of this unit. For further details about the beam modes, see page 40 in the supplied Owner's Manual.

